


REAR FLOOR SIDE MEMBER (CUT)

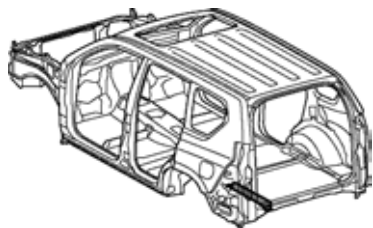

F43889A


With the rear floor pan removed.

Symbol meaning

⚠ : Remove Weld Points

F43331B

REMOVAL

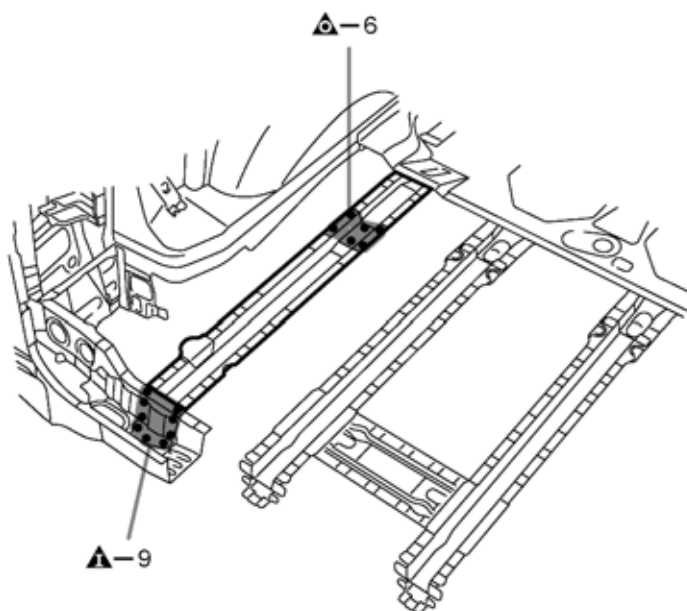



F43331

Symbol meaning

△ : Remove Weld Points ◻ I : Plug Weld

F43383B

INSTALLATION

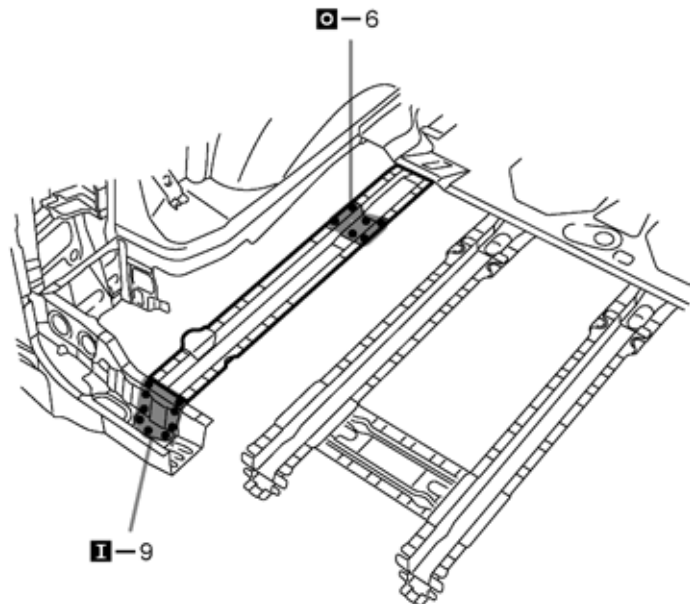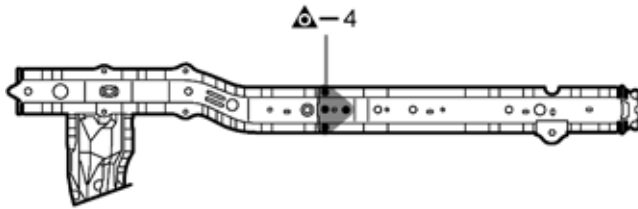

F43383

INSTALLATION POINT

- 1 If the entire supply part is not needed, remove the part of the supply part that is needed.
- 2 After welding, apply undercoating to the corresponding parts. (See the paint coating)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.