

ROOF SIDE INNER UPPER PANEL (ASSY)



F43882A

With the back door opening side reinforce removed.

Symbol meaning

REMOVAL

△ △ △ : Remove Weld Points



INSTALLATION

□ M I : Plug Weld

F43300B

REMOVAL-INSTALLATION

[LH]

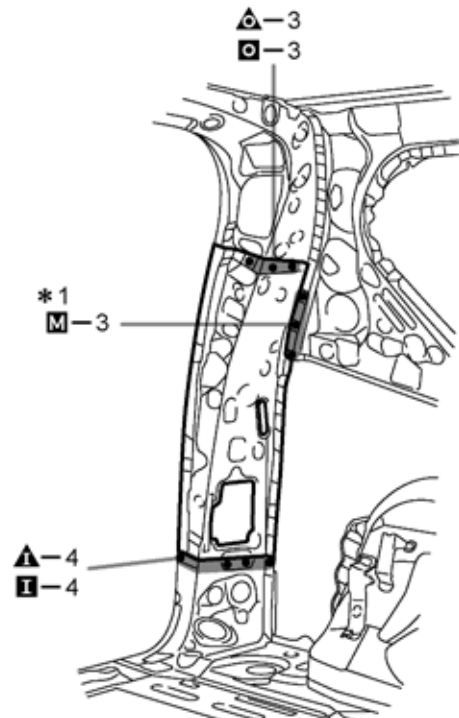
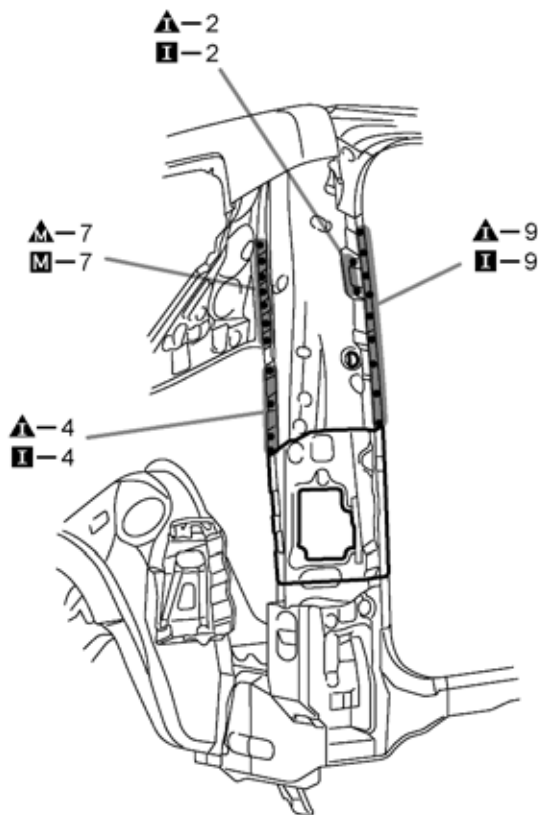


F43300

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 *1 is only for installation.
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

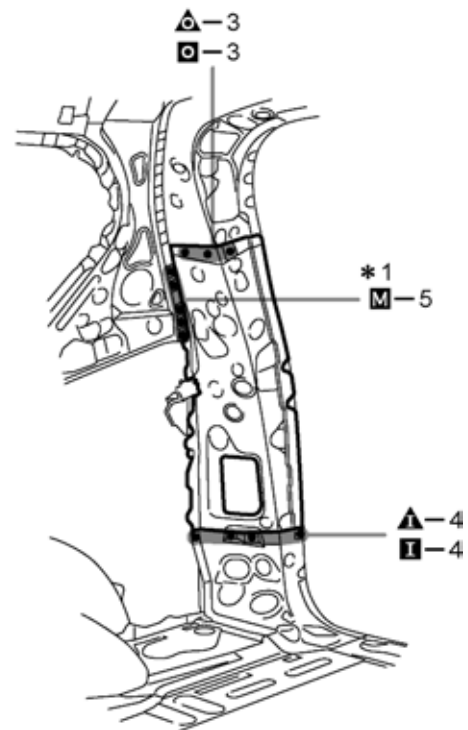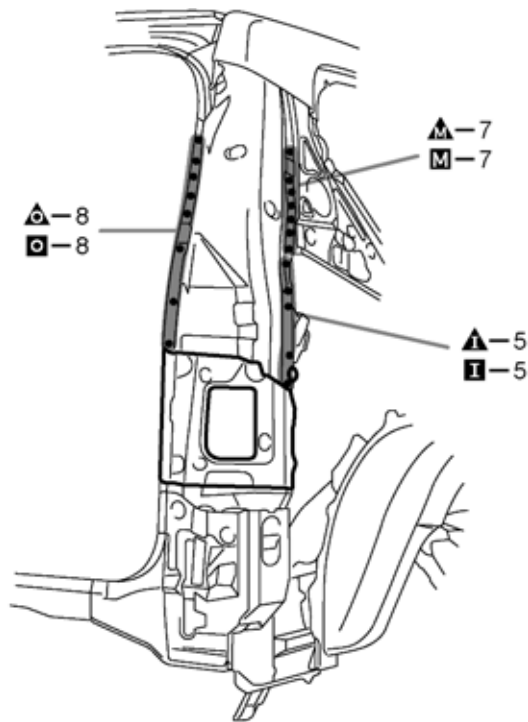

F43301

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 *1 is only for installation.
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.