


## REAR FLOOR SIDE CENTER MEMBER (CUT)

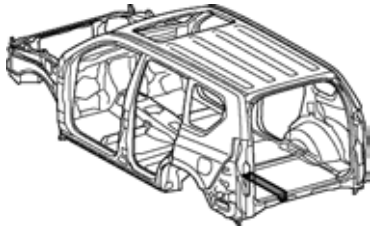

F43891A


With the rear floor crossmember No. 3 removed.

Symbol meaning

△ : Remove Weld Points

F43334B

### REMOVAL

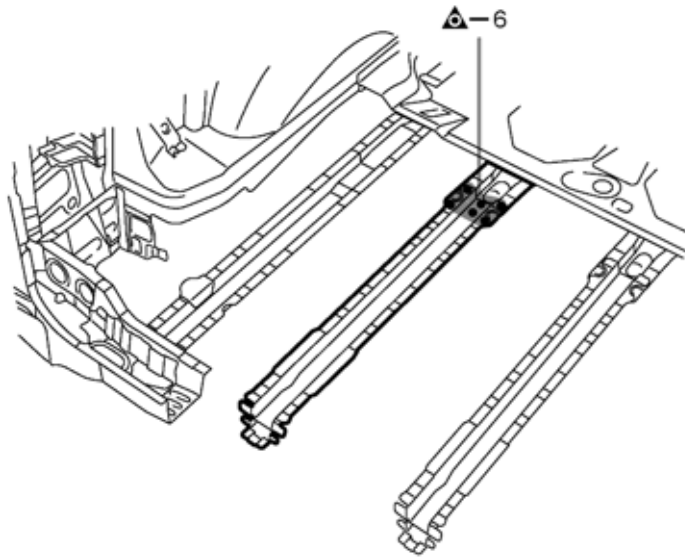



F43334

## Symbol meaning

△ : Remove Weld Points    ◻ : Plug Weld

F43384B

## INSTALLATION

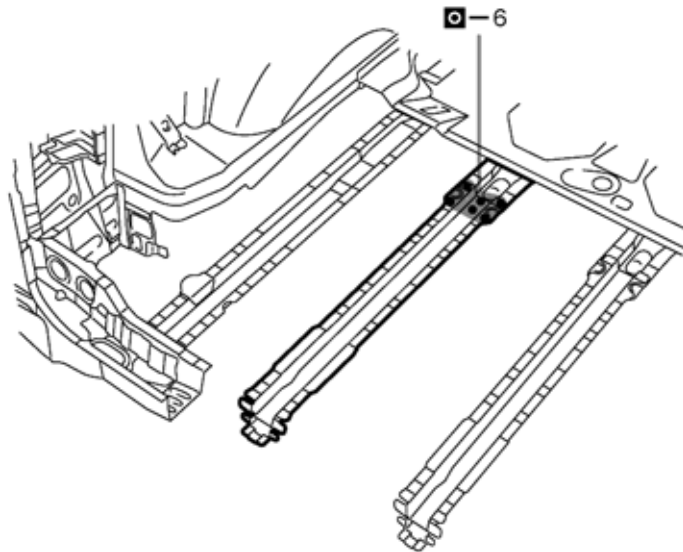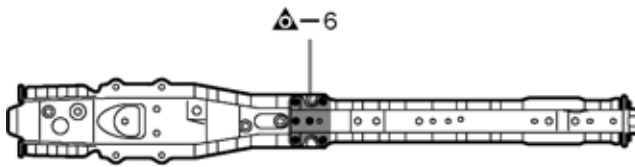

F43384

## INSTALLATION POINT

- 1 If the entire supply part is not needed, remove the part of the supply part that is needed.
- 2 After welding, apply undercoating to the corresponding parts. (See the paint-coating)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.