


4. ANTI-RUST TREATMENT AFTER INSTALLATION

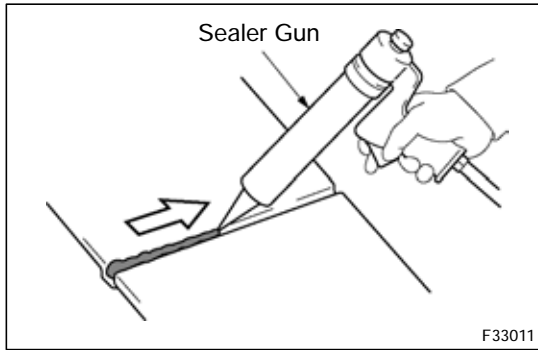


(a) BODY SEALER APPLICATION

PURPOSE:

For water-proofing and anti-rust measures, always apply the body sealer to the body panel seams and hems of the doors, hood, etc.

NOTICE:


Apply body sealer neatly to parts that require a high quality appearance.

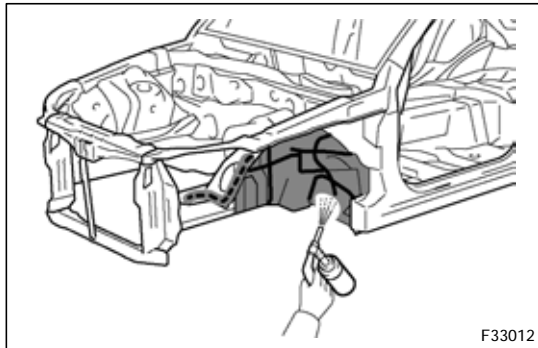

(b) UNDERCOAT APPLICATION

PURPOSE:

To prevent corrosion and protect the body from gravel, always apply a sufficient undercoating to the areas indicated.

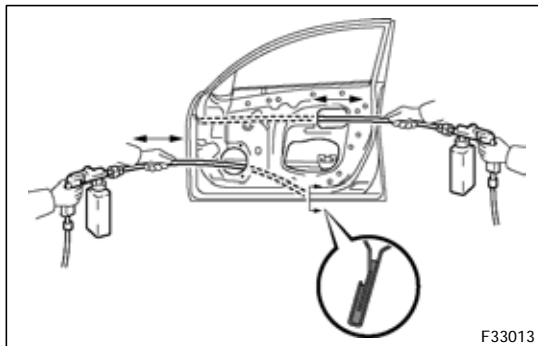

(c) VEHICLE BODY ANTI-RUST AGENT APPLICATION

PURPOSE:

The purpose is to protect areas from rust which are difficult to paint such as the backside of the box-shaped cross section frame parts.

METHOD:

Apply anti-rust agent through the service holes and/or installation holes of the parts.