


2. NOTICE ABOUT VEHICLE CONDITION WHEN JACKING UP VEHICLE

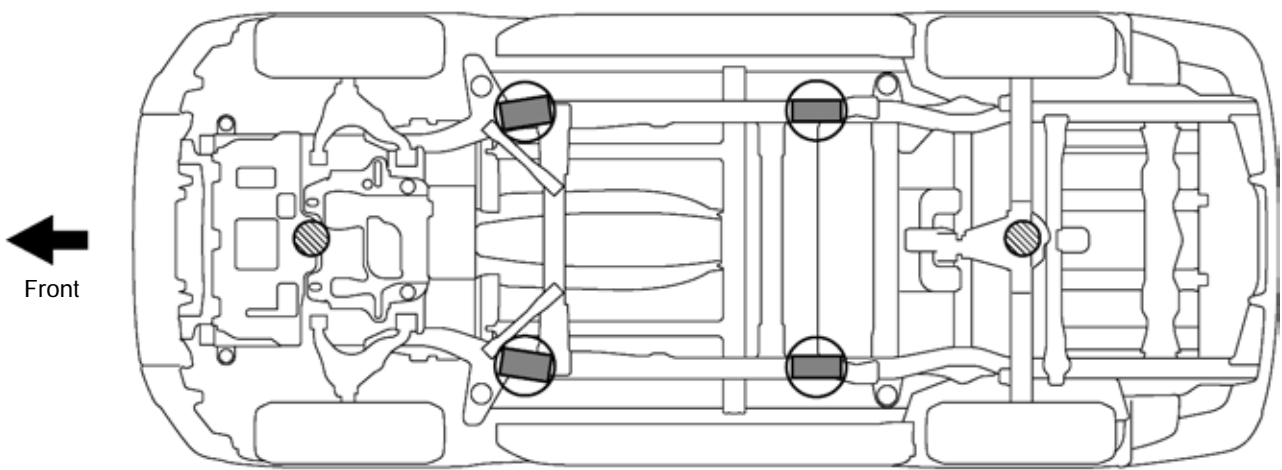

● : JACK POSITION

Front: Center of crossmember
Rear: Protruding part of rear suspension member

CAUTION:
When jacking up the vehicle, make sure the vehicle is not carrying any extra weight.

◐ : SUPPORT POSITION

Swing arm type lift, Safety stand