


COWL TOP SIDE PANEL (ASSY)

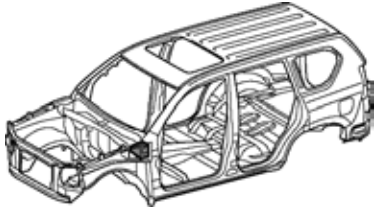

F43871A

With the front body pillar lower gusset removed.



Symbol meaning

REMOVAL : Remove Weld Points

INSTALLATION : Plug Weld

F43230B

REMOVAL-INSTALLATION

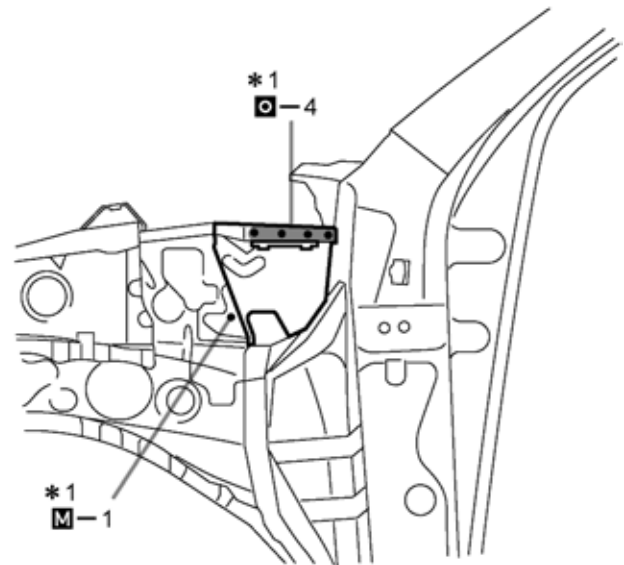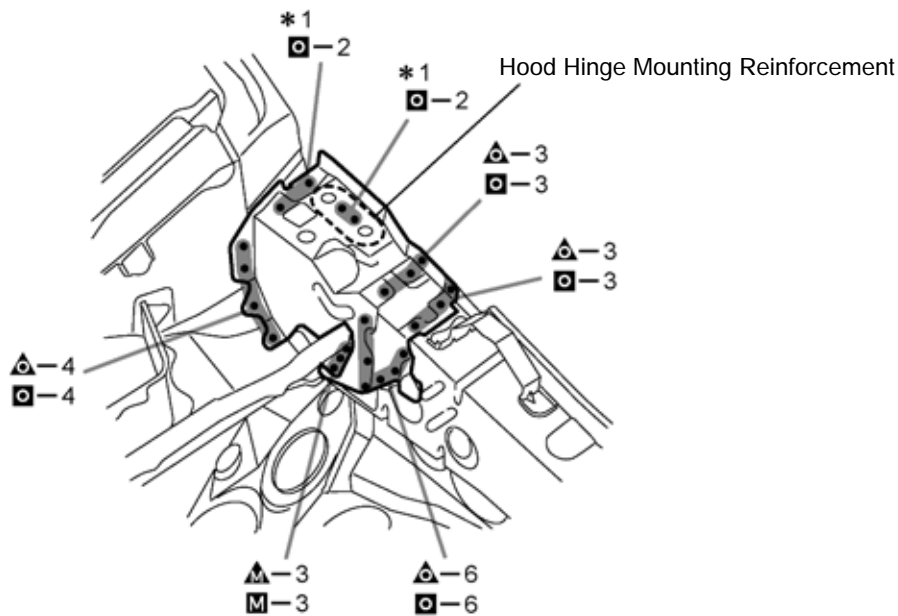

F43230

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 *1 is only for installation.
- 4 After welding, apply body sealer to the corresponding parts. (See the paint-coating)
- 5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.