

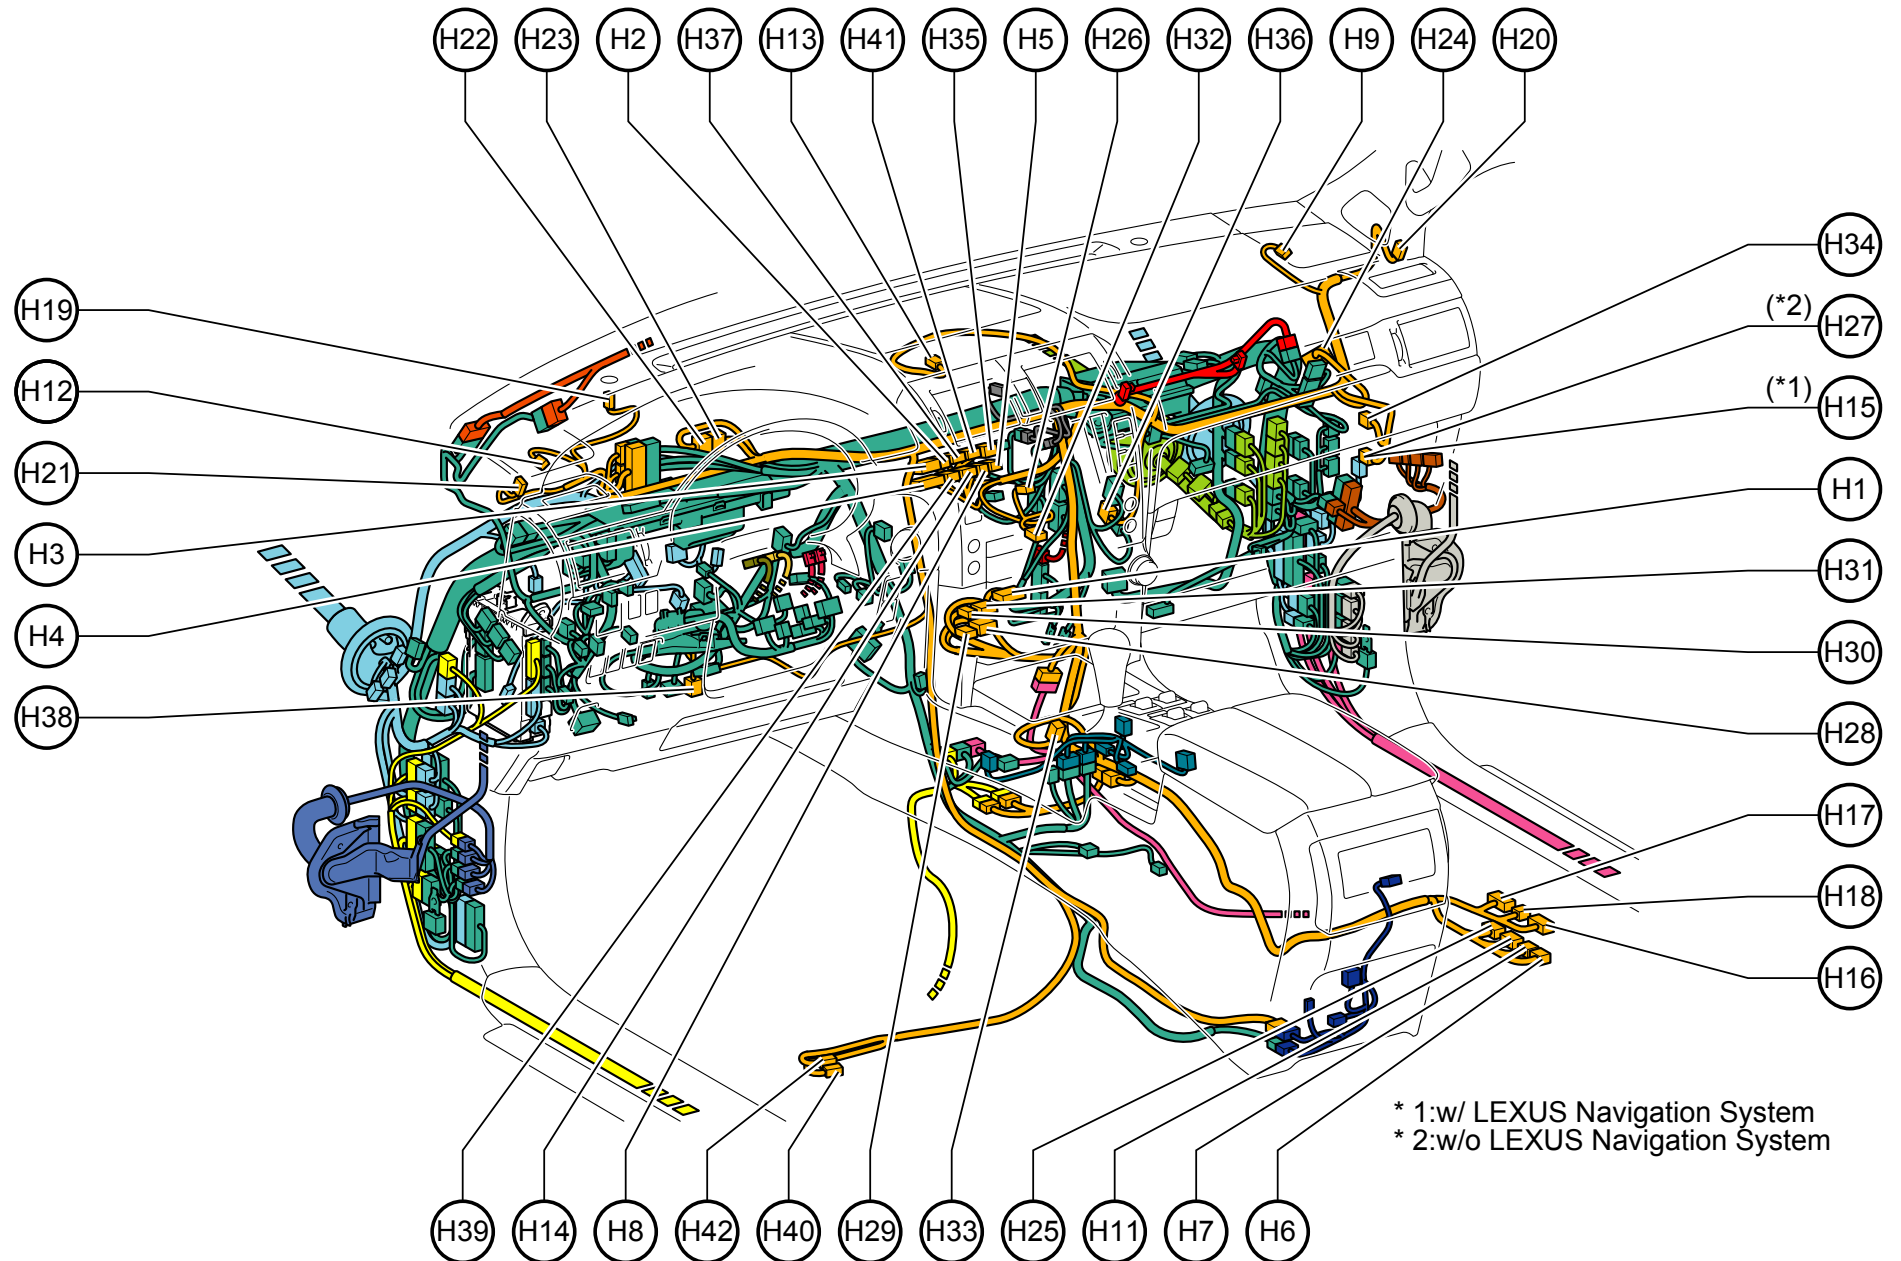
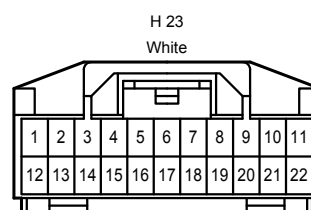
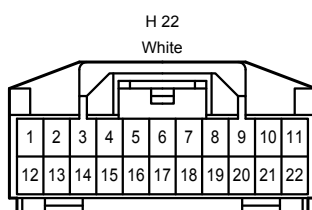
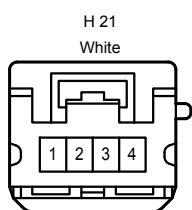
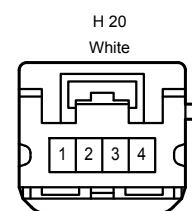

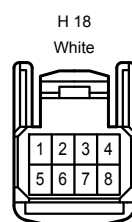
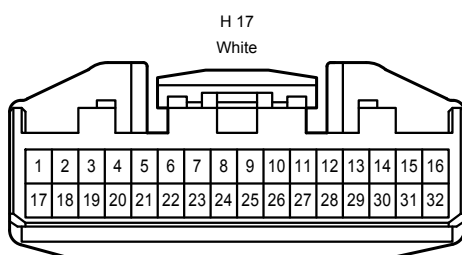
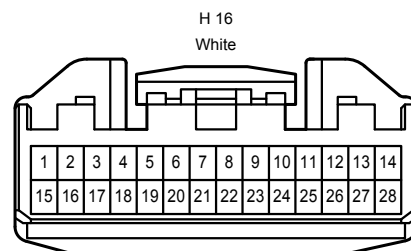
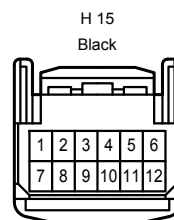
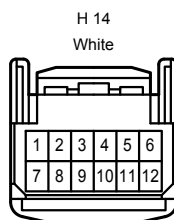
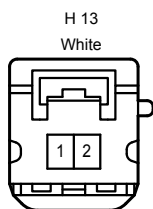
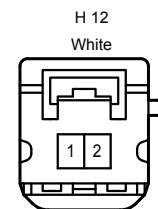
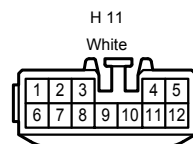
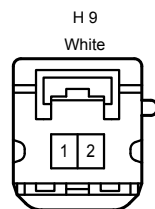

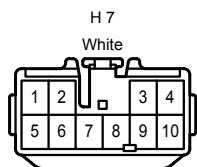
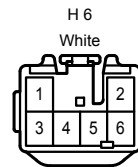
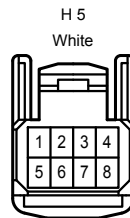
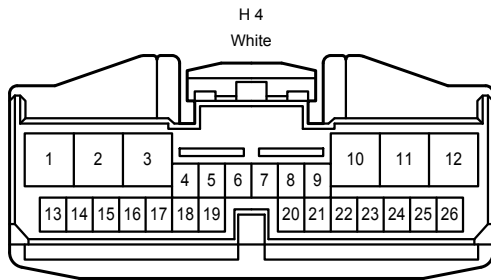


Position of Parts in Instrument Panel

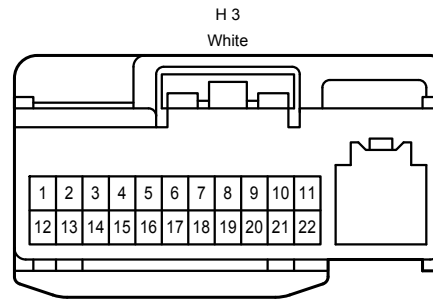

H	1	Radio Receiver Assembly
H	2	Display & Navigation Module Display
H	3	Display & Navigation Module Display
H	4	Display & Navigation Module Display
H	5	Display & Navigation Module Display
H	6	Stereo Component Amplifier Assembly
H	7	Stereo Component Amplifier Assembly
H	8	Display & Navigation Module Display
H	9	Front No. 1 Speaker Assembly RH
H	11	Stereo Component Amplifier Assembly
H	12	Front No. 1 Speaker Assembly LH
H	13	Front No. 4 Speaker Assembly
H	14	Display & Navigation Module Display
H	15	Multi-Media Interface ECU
H	16	Multi-Display Controller Sub-Assembly
H	17	Multi-Display Controller Sub-Assembly
H	18	Multi-Display Controller Sub-Assembly
H	19	Automatic Light Control Sensor
H	20	Front No. 3 Speaker Assembly RH
H	21	Front No. 3 Speaker Assembly LH
H	22	Junction Connector
H	23	Junction Connector
H	24	Junction Connector
H	25	Stereo Component Amplifier Assembly
H	26	Accessory Meter Assembly
H	27	Multi-Media Interface ECU
H	28	Radio Receiver Assembly
H	29	Radio Receiver Assembly
H	30	Radio Receiver Assembly
H	31	Radio Receiver Assembly
H	32	Integration Control and Panel Assembly
H	33	No. 1 Stereo Jack Adapter Assembly
H	34	Multi-Media Interface ECU
H	35	Display & Navigation Module Display
H	36	Telematics Transceiver
H	37	Display & Navigation Module Display
H	38	IEEE Connector
H	39	Display & Navigation Module Display
H	40	Multi-Media Module Navigation Assembly
H	41	Display & Navigation Module Display
H	42	Multi-Media Module Navigation Assembly

Position of Parts in Instrument Panel

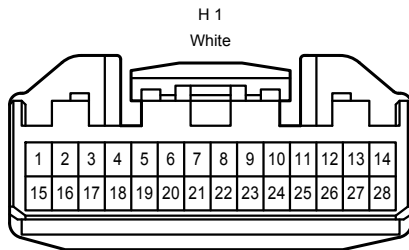

Position of Parts in Instrument Panel

