


REAR FLOOR SIDE PANEL REAR EXTENSION (ASSY)

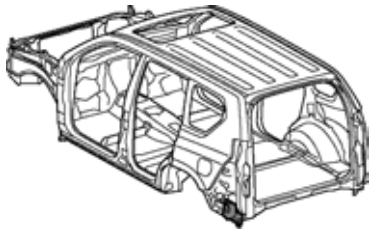

F43888A

With the back door opening side reinforce removed.

Symbol meaning

REMOVAL

▲ ▲ : Remove Weld Points




INSTALLATION

○ ■ : Spot Weld ○ ■ : Plug Weld

F43328B

REMOVAL-INSTALLATION

[LH]

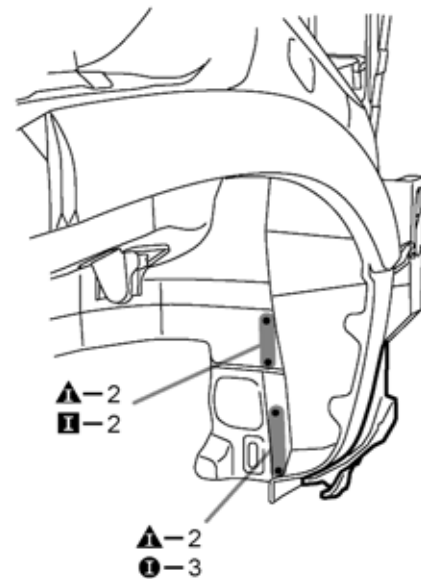
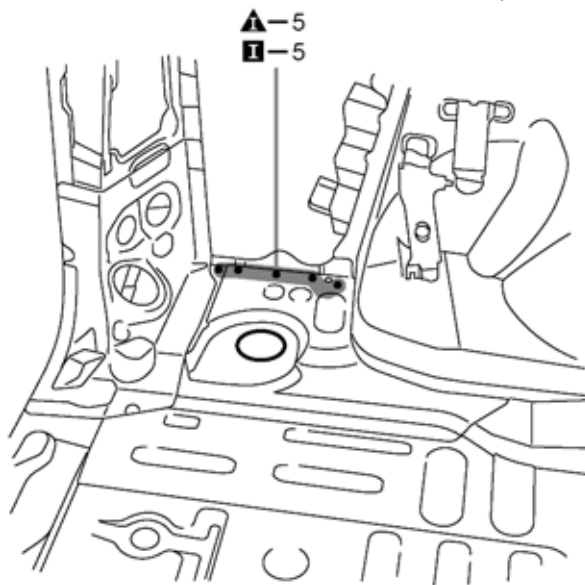
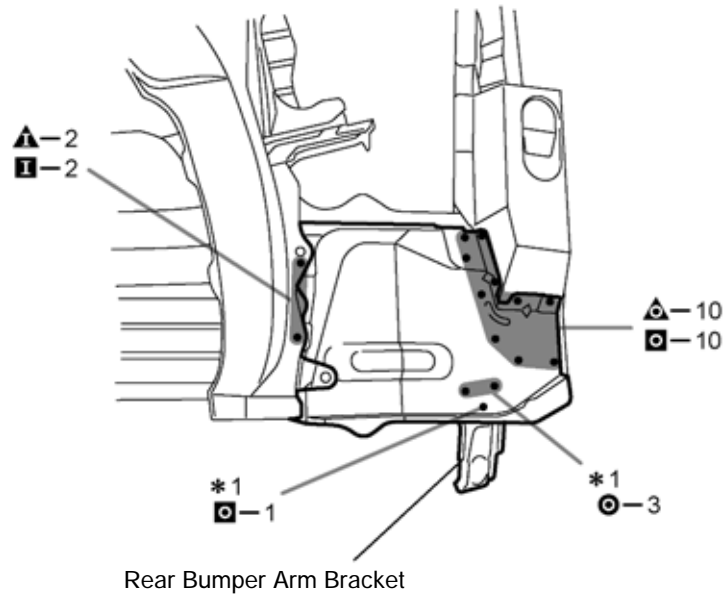


F43328

INSTALLATION POINT

- 1 *1 is only for installation.
- 2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

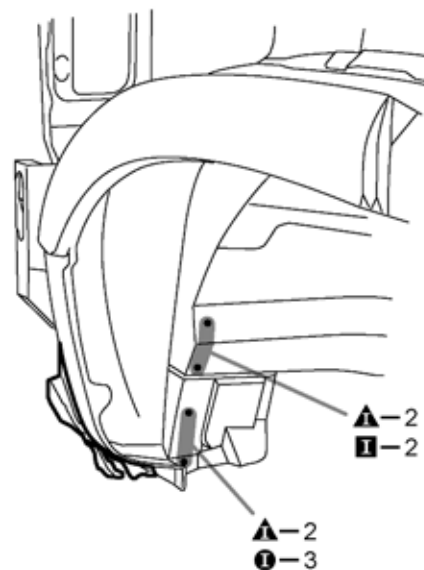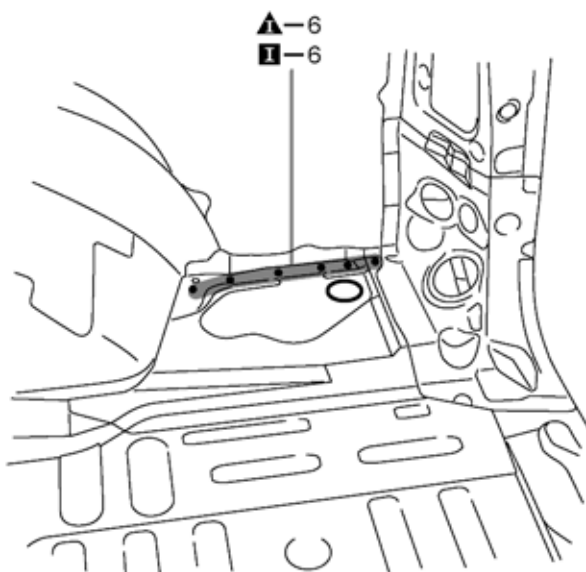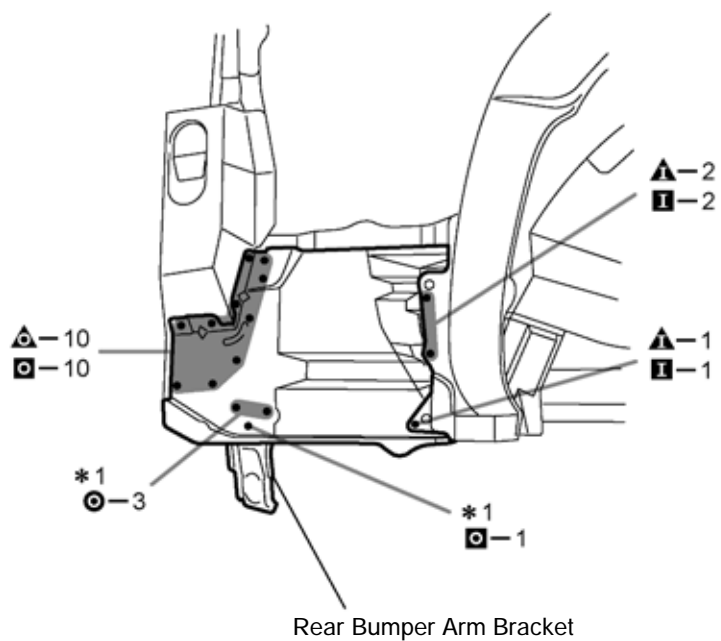

F43329

INSTALLATION POINT

- 1 *1 is only for installation.
- 2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.