


Position of Parts in Seat <Front Seat>

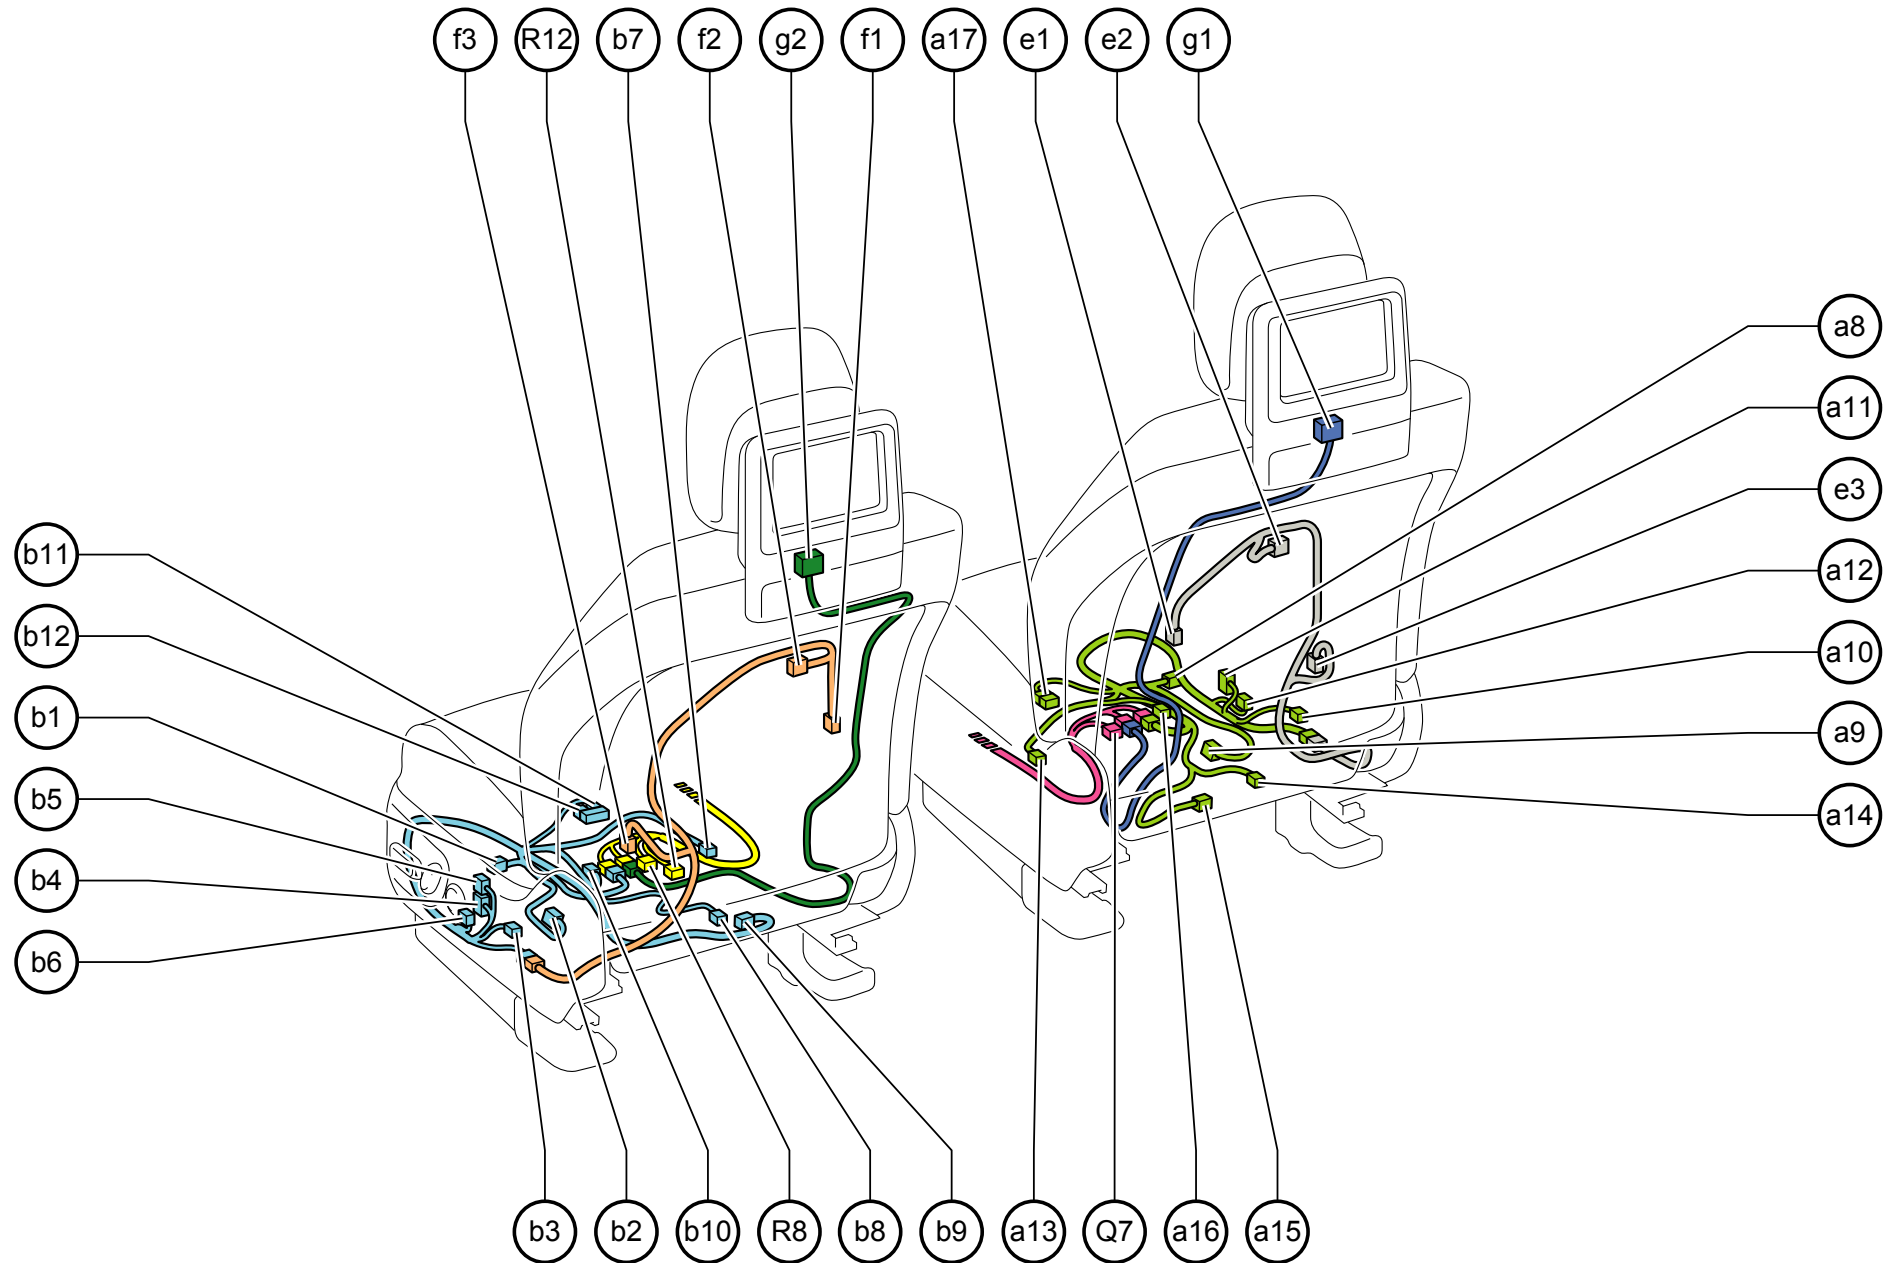

- Q 7 Front Side Airbag Squib Circuit RH

- R 8 Front Side Airbag Squib Circuit LH
- R 12 Front Seat Inner Belt Assembly LH

- a 8 Separate Type Front Seat Cushion Spring Assembly RH
- a 9 Separate Type Front Seat Cushion Spring Assembly RH
- a 10 Separate Type Front Seat Cushion Spring Assembly RH
- a 11 Front Power Seat Switch RH
- a 12 Front Power Seat Switch Assembly RH
- a 13 Front Seat Heater Assembly RH
- a 14 Separate Type Front Seat Cushion Spring Assembly RH
- a 15 Seat Cushion Climate Control Blower Assembly RH
- a 16 Front Seat Inner Belt Assembly RH
- a 17 Junction Connector

- b 1 Separate Type Front Seat Cushion Spring Assembly LH
- b 2 Separate Type Front Seat Cushion Spring Assembly LH
- b 3 Separate Type Front Seat Cushion Spring Assembly LH
- b 4 Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
- b 5 Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
- b 6 Front Power Seat Switch Assembly LH
- b 7 Front Seat Heater Assembly LH
- b 8 Separate Type Front Seat Cushion Spring Assembly LH
- b 9 Seat Cushion Climate Control Blower Assembly LH
- b 10 Front Seat Inner Belt Assembly LH
- b 11 Junction Connector
- b 12 Junction Connector

- e 1 Separate Type Front Seat Back Assembly RH
- e 2 Seat Back Climate Control Blower RH
- e 3 Separate Type Front Seat Back Assembly RH

- f 1 Separate Type Front Seat Back Assembly LH
- f 2 Seat Back Climate Control Blower LH
- f 3 Separate Type Front Seat Back Assembly LH

- g 1 Multi-Media Module Display Assembly RH
- g 2 Multi-Media Module Display Assembly LH

Position of Parts in Seat <Front Seat>

