


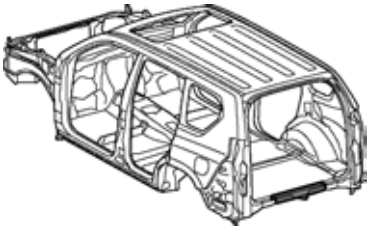


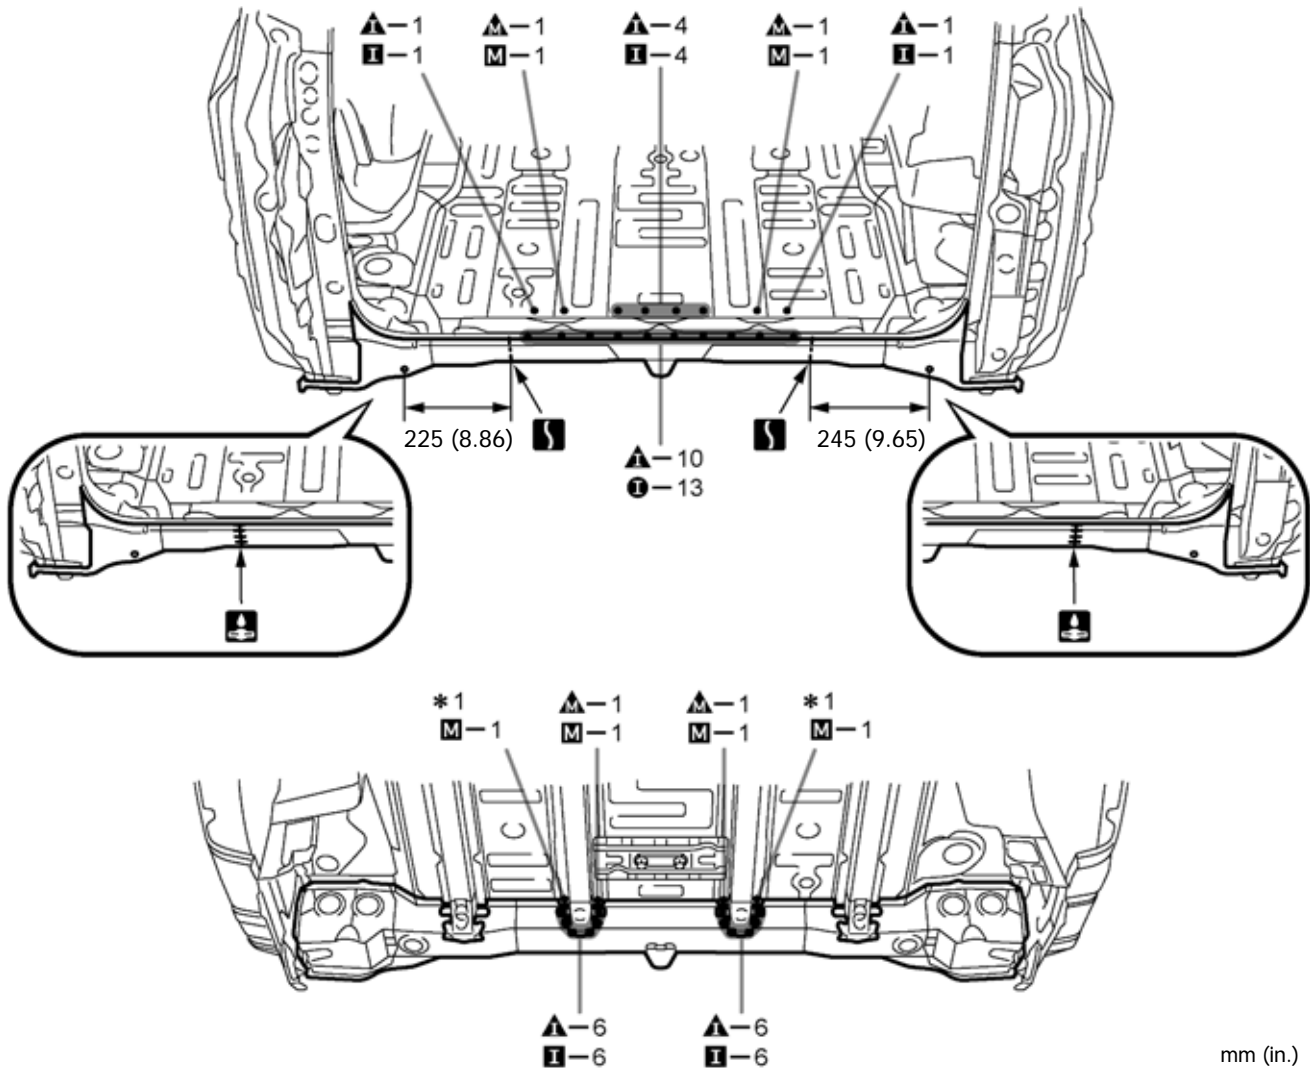


BODY LOWER BACK PANEL (CUT)

 <p>F43883A</p>	<p>Symbol meaning</p> <p>REMOVAL  : Remove Weld Points  : Cut and Join Location</p> <p>INSTALLATION  : Spot Weld  : Plug Weld  : Butt Weld</p> <p>F43303B</p>
--	--

REMOVAL-INSTALLATION



F43303

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 *1 is only for installation.
- 4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.