


Position of Parts in Engine Compartment

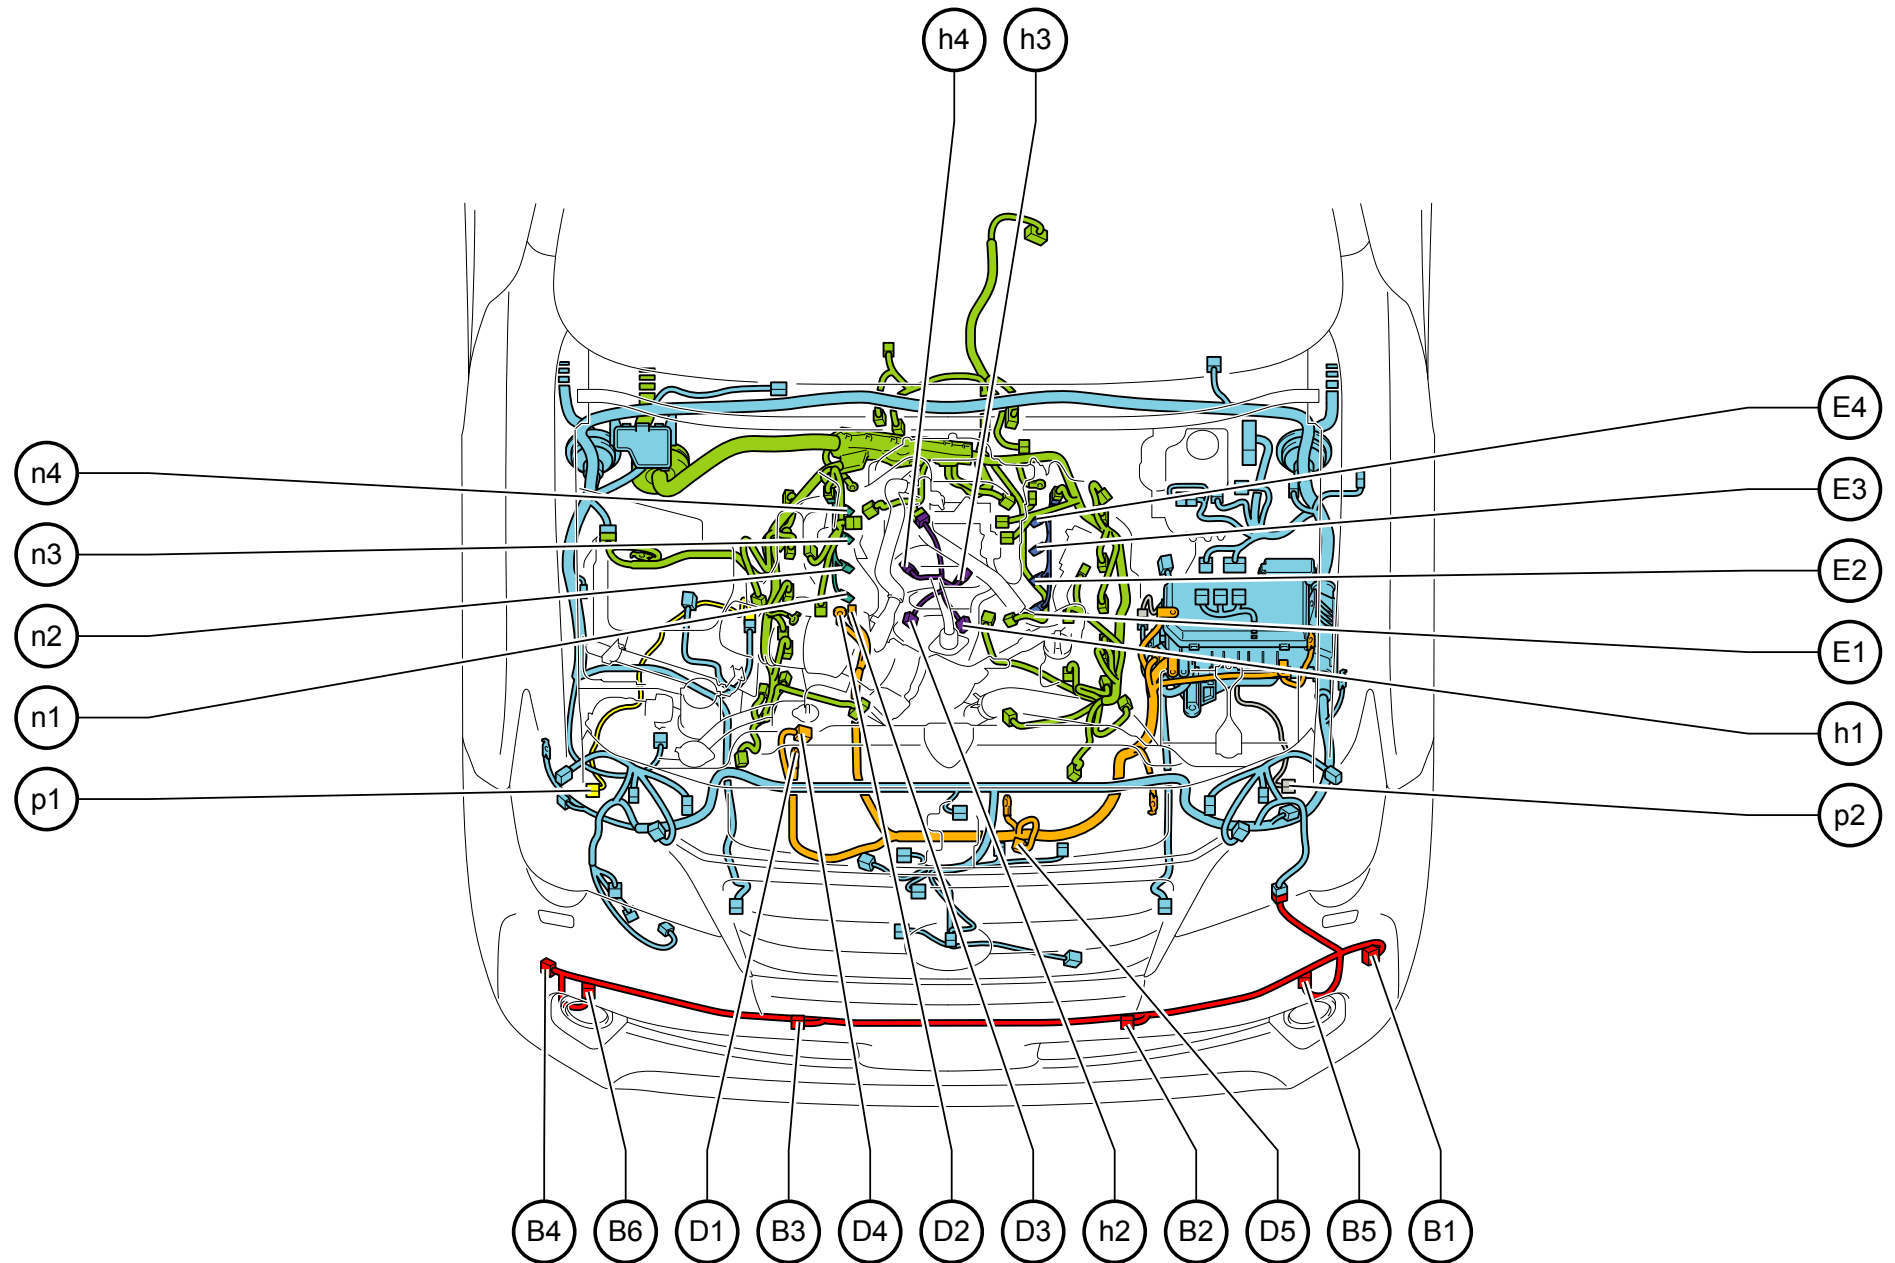

Position of Parts in Engine Compartment

- B 1 Front No. 1 Ultrasonic Sensor LH
- B 2 Front No. 1 Ultrasonic Sensor Center LH
- B 3 Front No. 1 Ultrasonic Sensor Center RH
- B 4 Front No. 1 Ultrasonic Sensor RH
- B 5 Fog Light Assembly LH
- B 6 Fog Light Assembly RH

- D 1 Generator Assembly
- D 2 Starter Assembly
- D 3 Starter Assembly
- D 4 Generator Assembly
- D 5 Engine Oil Pressure Switch Assembly

- E 1 Fuel Injector Assembly No. 1
- E 2 Fuel Injector Assembly No. 3
- E 3 Fuel Injector Assembly No. 5
- E 4 Fuel Injector Assembly No. 7

- h 1 Knock Control Sensor (Bank 1 Sensor 1)
- h 2 Knock Control Sensor (Bank 2 Sensor 1)
- h 3 Knock Control Sensor (Bank 1 Sensor 2)
- h 4 Knock Control Sensor (Bank 2 Sensor 2)

- n 1 Fuel Injector Assembly No. 2
- n 2 Fuel Injector Assembly No. 4
- n 3 Fuel Injector Assembly No. 6
- n 4 Fuel Injector Assembly No. 8

- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

Position of Parts in Engine Compartment

