


## FRONT CROSSMEMBER (ASSY)

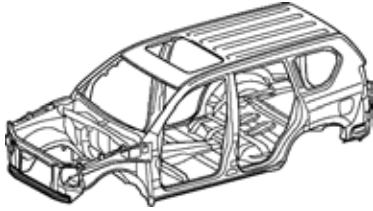

F43866A

### Symbol meaning

REMOVAL

▲ : Remove Weld Points


INSTALLATION

■ : Plug Weld


F43866B

### REMOVAL-INSTALLATION

[LH Side]

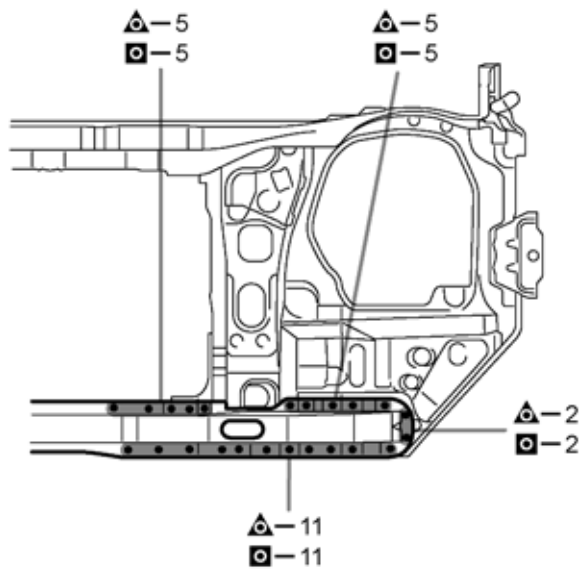

[RH Side]

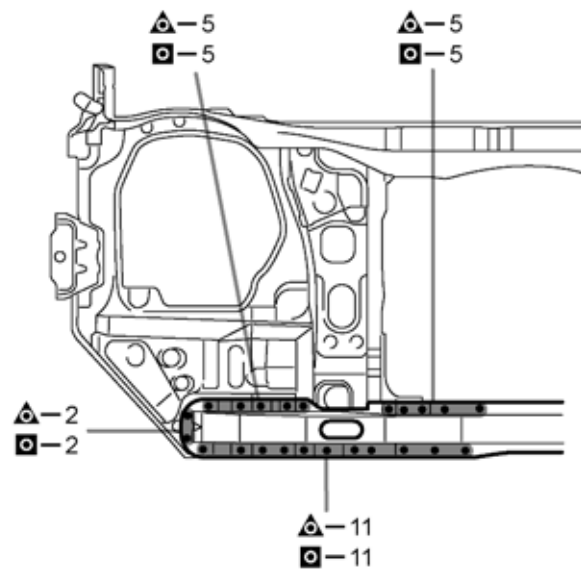

F43866

### INSTALLATION POINT

- 1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 2 After welding, apply body sealer to the corresponding parts. (See the paint-coating)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.