



Position of Parts in Engine Compartment

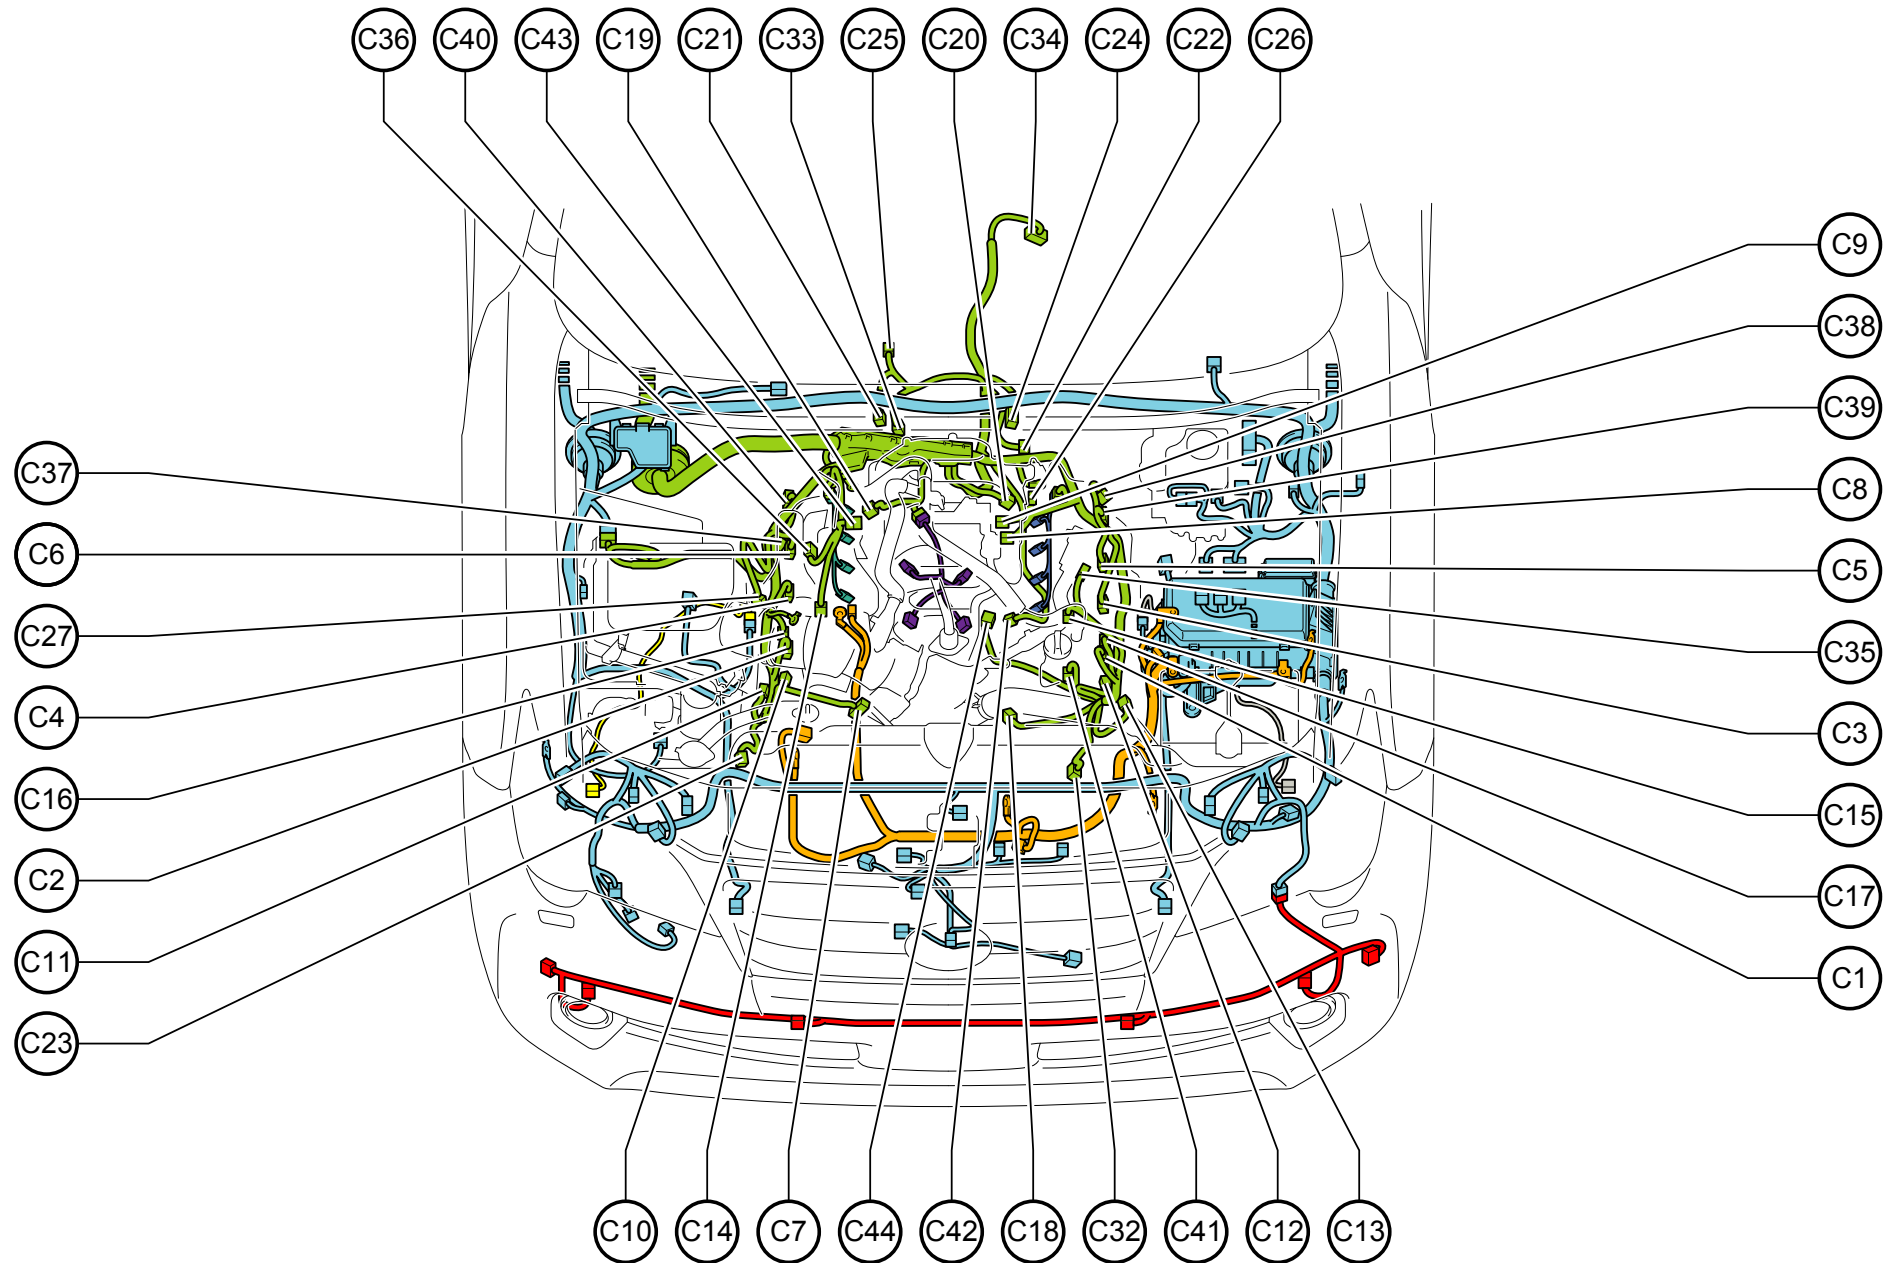

- C 1 Ignition Coil Assembly No. 1
- C 2 Ignition Coil Assembly No. 2
- C 3 Ignition Coil Assembly No. 3
- C 4 Ignition Coil Assembly No. 4
- C 5 Ignition Coil Assembly No. 5
- C 6 Ignition Coil Assembly No. 6
- C 7 Throttle Body Assembly
- C 8 Purge VSV
- C 9 VSV (ACIS)
- C 10 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
- C 11 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
- C 12 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
- C 13 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
- C 14 VVT Sensor (Bank 2 Intake Side)
- C 15 VVT Sensor (Bank 1 Intake Side)
- C 16 VVT Sensor (Bank 2 Exhaust Side)
- C 17 VVT Sensor (Bank 1 Exhaust Side)
- C 18 E.F.I. Engine Coolant Temperature Sensor
- C 19 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 20 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 21 Oxygen Sensor (Bank 2 Sensor 2)
- C 22 Oxygen Sensor (Bank 1 Sensor 2)
- C 23 Power Steering Oil Pressure Switch
- C 24 ECT Solenoid
- C 25 Transmission Revolution Sensor (Counter Gear)
- C 26 Transmission Revolution Sensor (Turbine)
- C 27 Intake Mass Air Flow Meter Assembly
- C 32 Cooler Compressor Assembly
- C 33 Park/Neutral Position Switch
- C 34 Transfer Shift Actuator Assembly
- C 35 Air Pump Assembly (Bank 1)
- C 36 Air Pump Assembly (Bank 2)
- C 37 Noise Filter (Ignition RH)
- C 38 Noise Filter (Ignition LH)
- C 39 Ignition Coil Assembly No. 7
- C 40 Ignition Coil Assembly No. 8
- C 41 Camshaft Position Sensor
- C 42 Crank Position Sensor
- C 43 EGR Valve Assembly
- C 44 Intake Manifold Vacuum Sensor

## Position of Parts in Engine Compartment

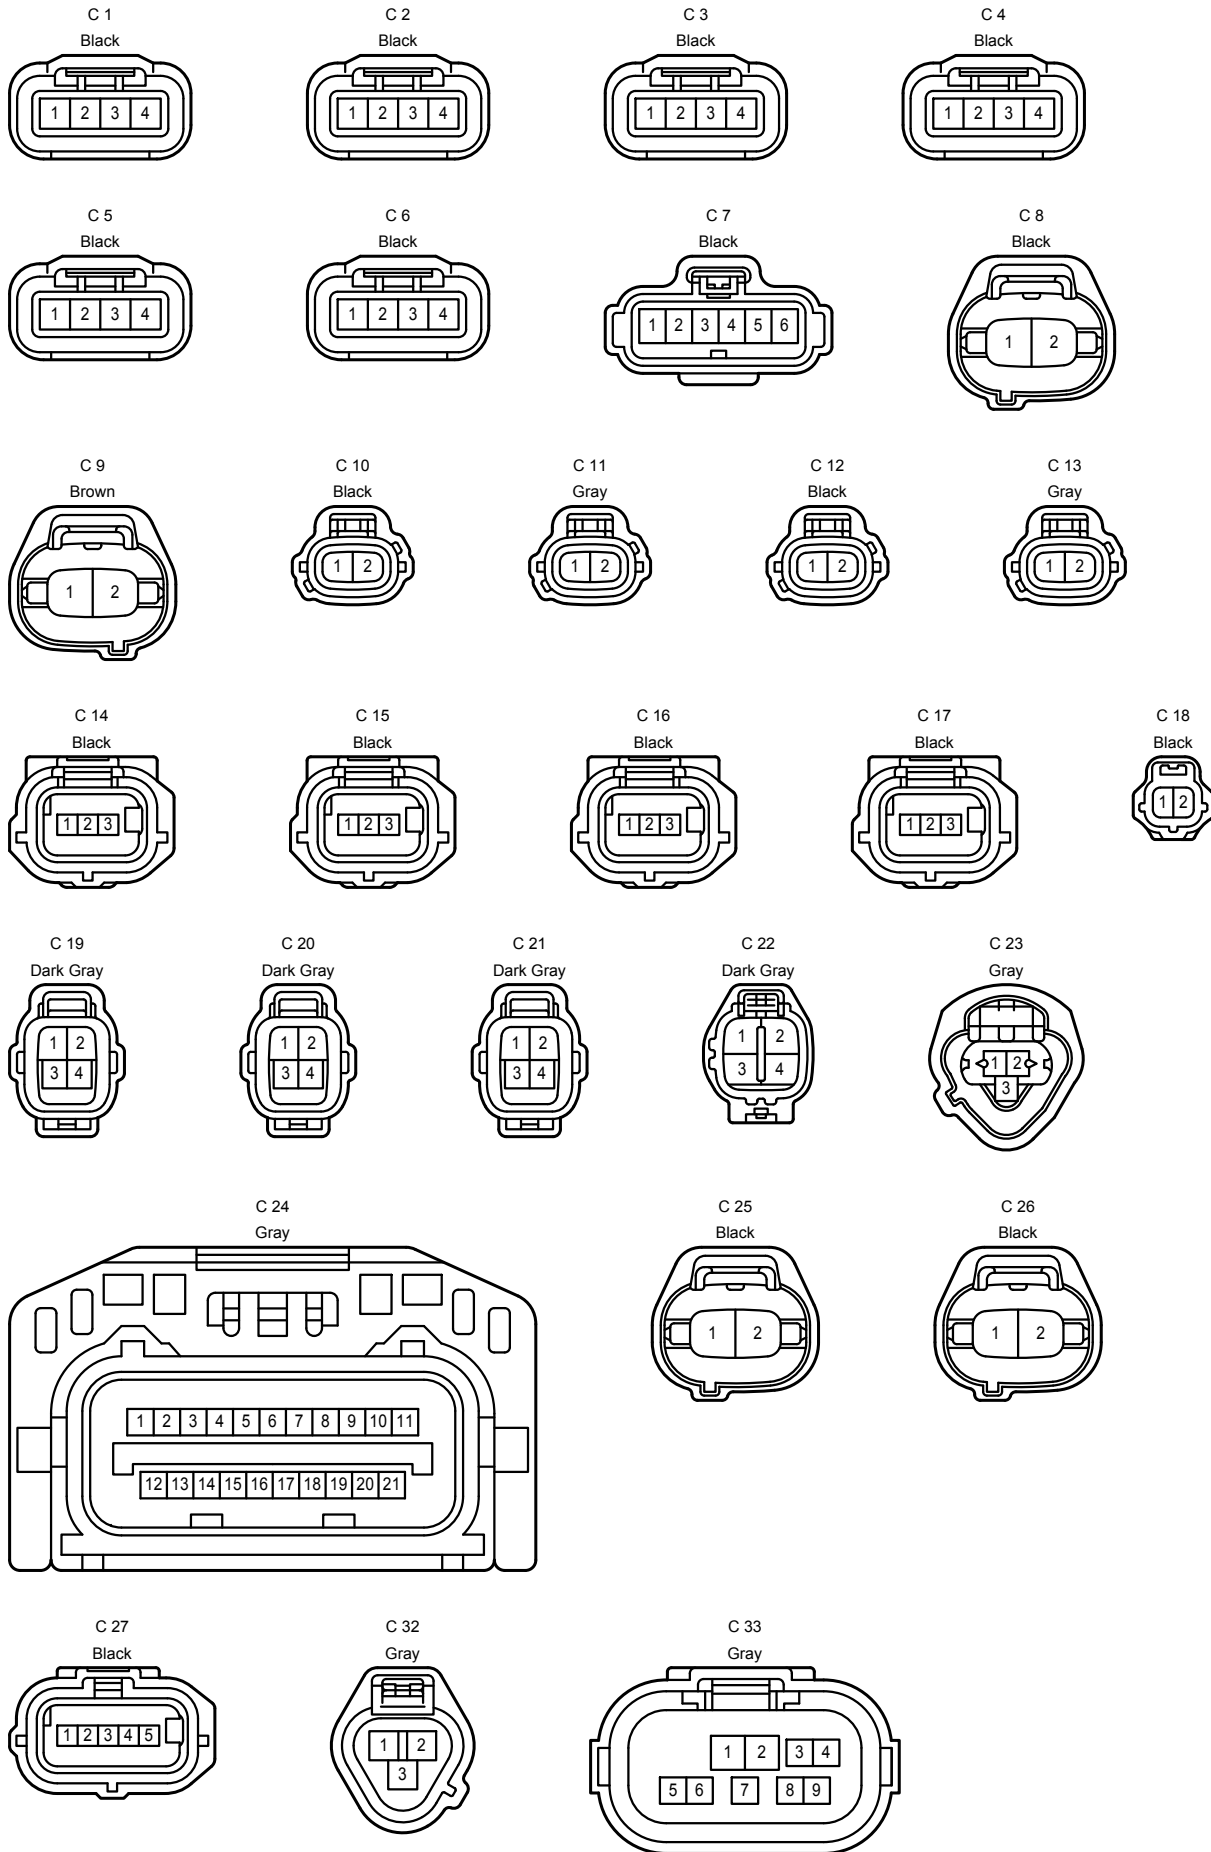

## Position of Parts in Engine Compartment

