


REAR FLOOR SIDE PANEL (ASSY)

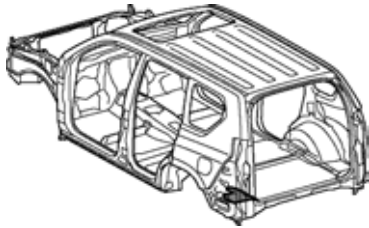

F43887A

With the rear floor crossmember No. 2 removed.

Symbol meaning


REMOVAL : Remove Weld Points

INSTALLATION : Plug Weld

F43324B

REMOVAL-INSTALLATION

[LH]

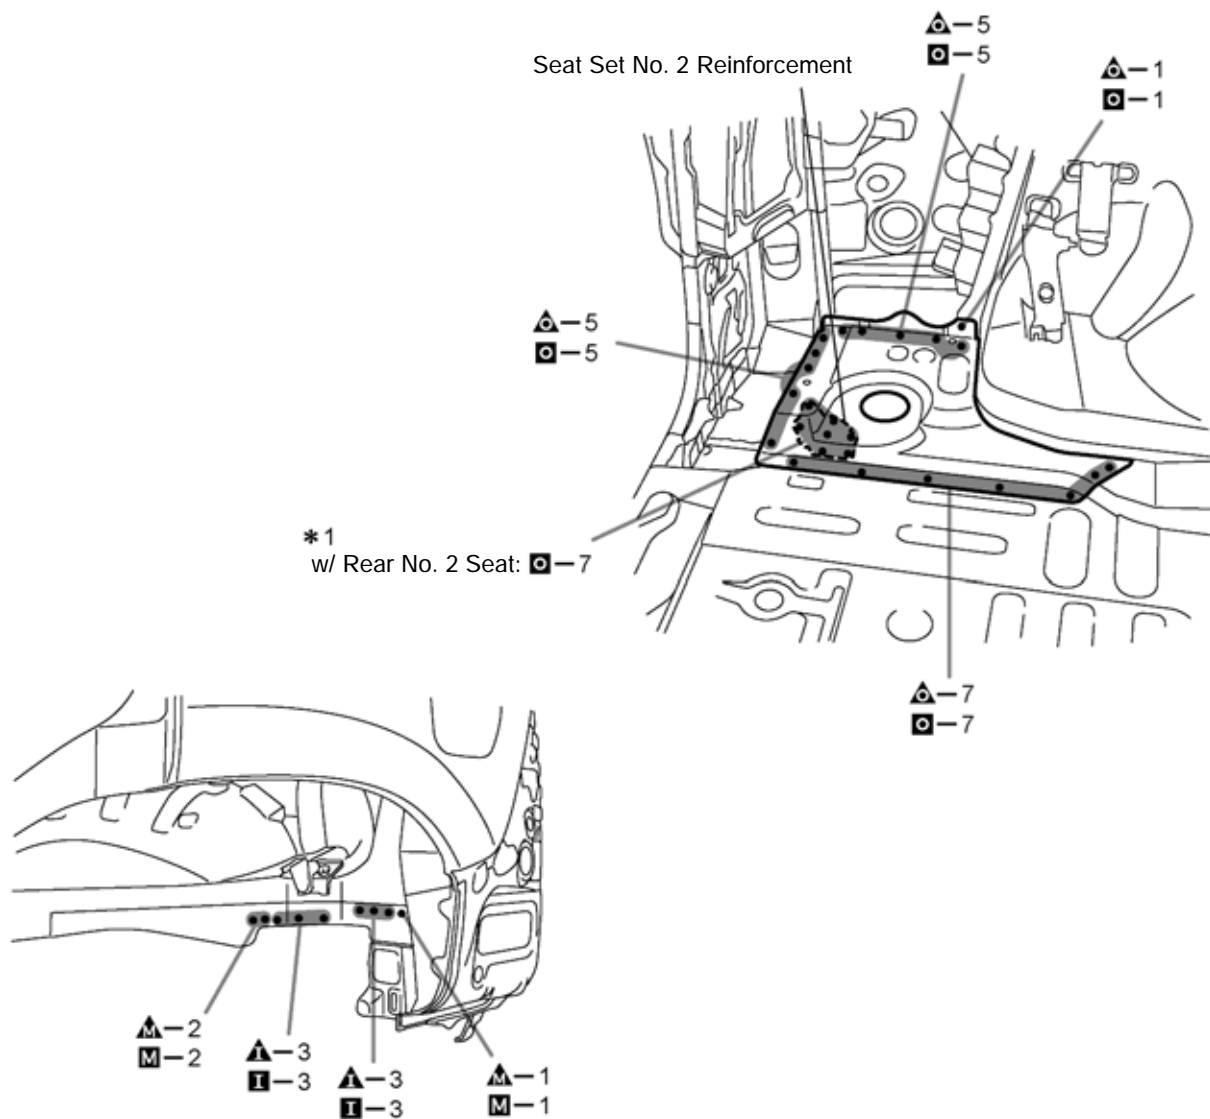


F43324

INSTALLATION POINT

- 1 *1 is only for installation.
- 2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

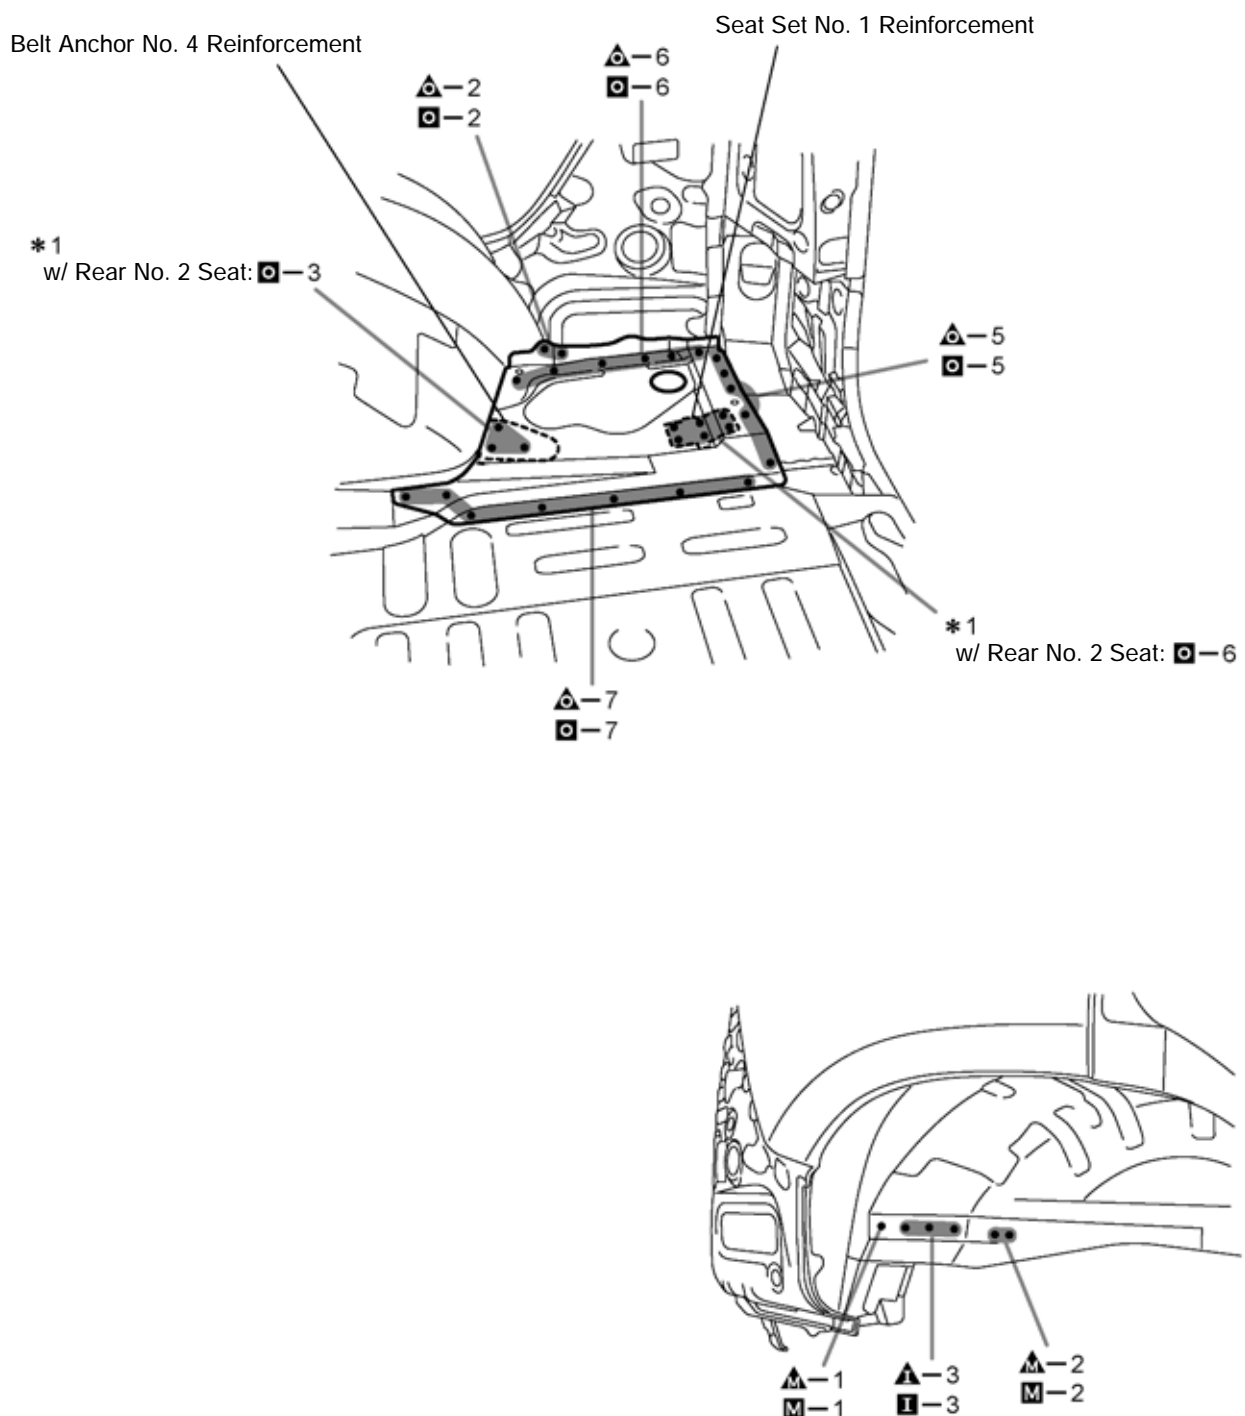

F43325

INSTALLATION POINT

- 1 *1 is only for installation.
- 2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.