


Position of Parts in Engine Compartment

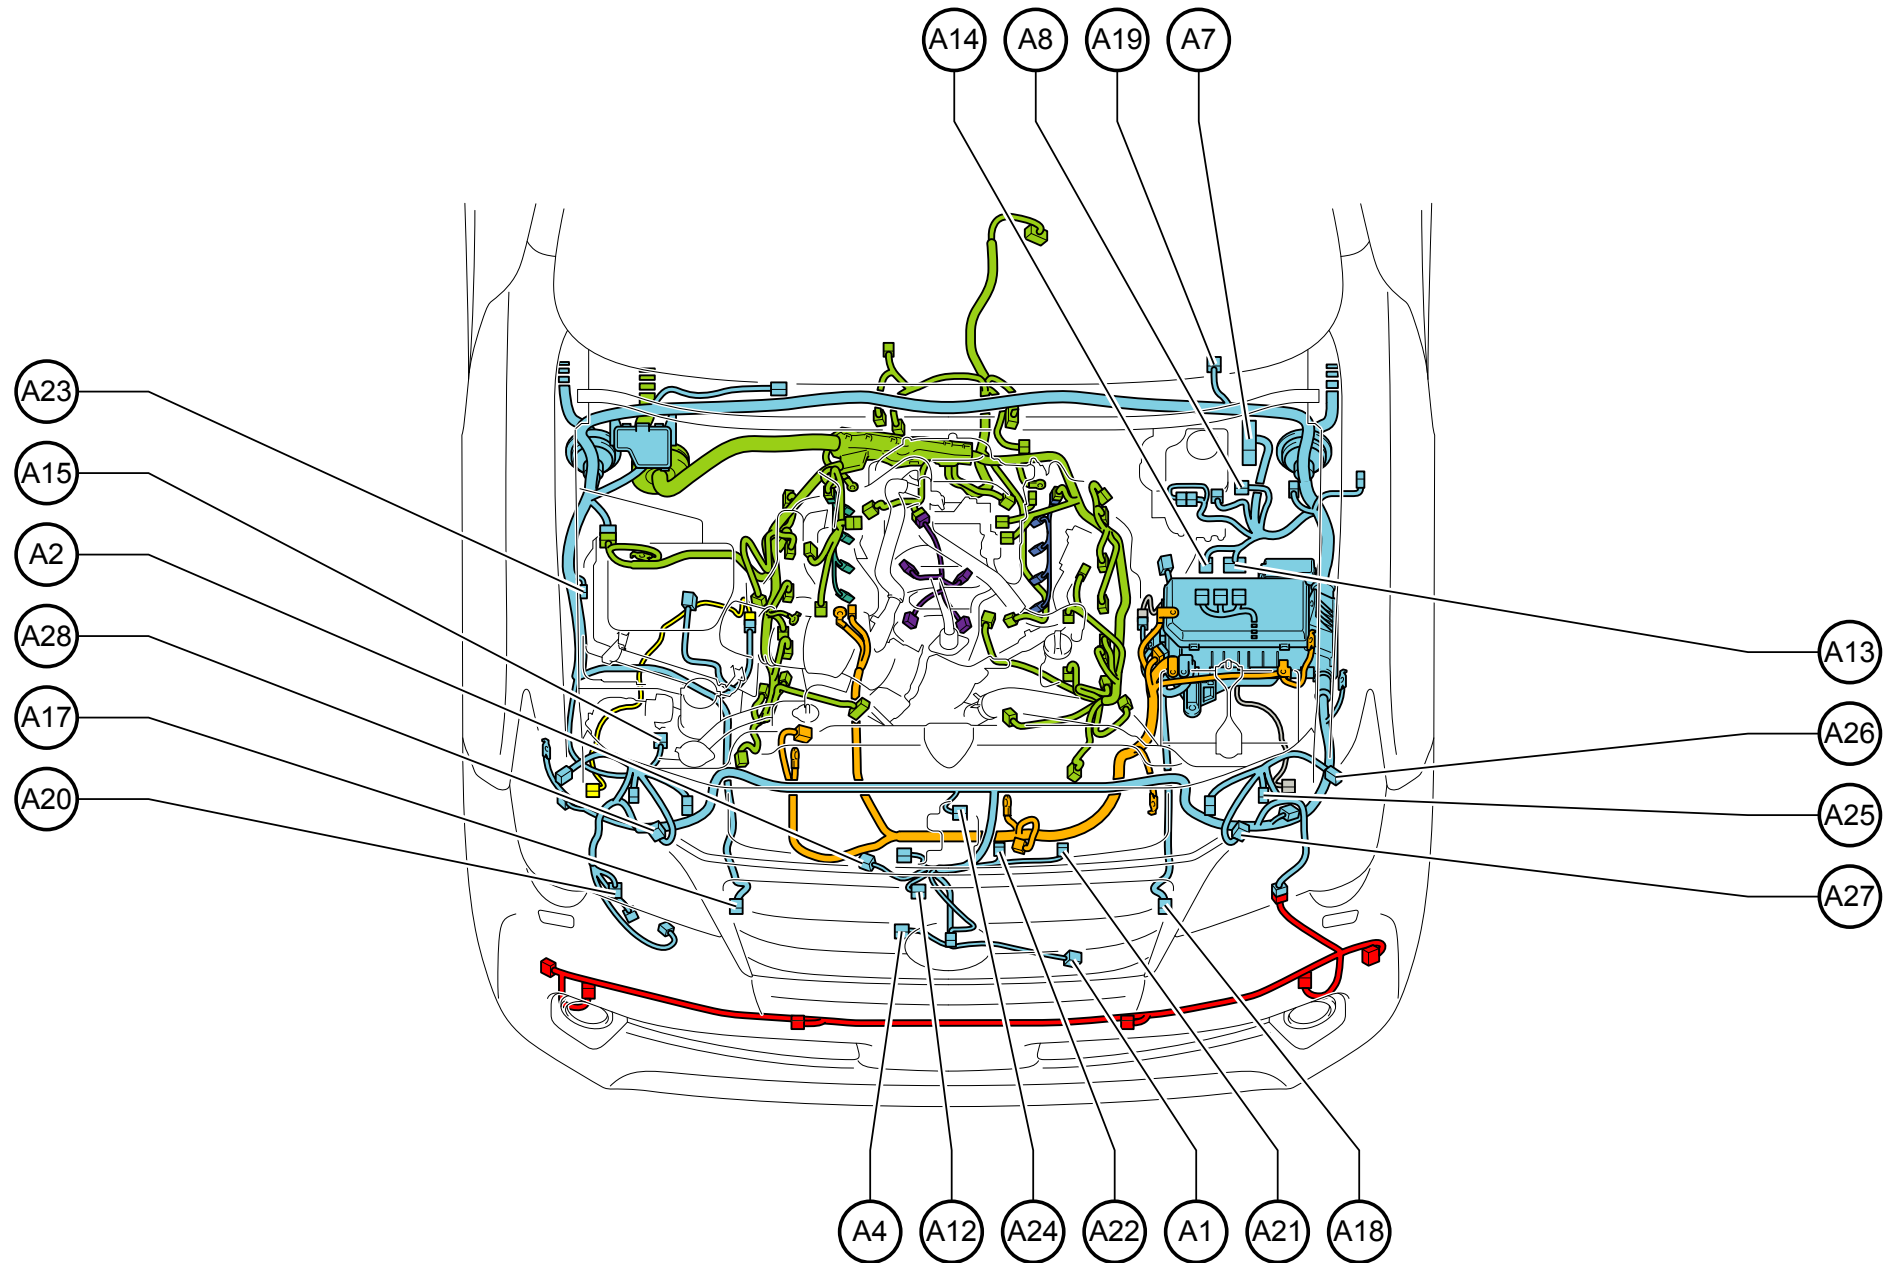

Position of Parts in Engine Compartment

- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 7 Brake Actuator Assembly
- A 8 Brake Actuator Assembly
- A 12 Millimeter Wave Radar Sensor Assembly
- A 13 Air Injection Control Driver
- A 14 Air Injection Control Driver
- A 15 Inlet Air Pump
- A 17 Front Airbag Sensor RH
- A 18 Front Airbag Sensor LH
- A 19 Windshield Wiper Motor Assembly
- A 20 Windshield Washer Motor and Pump Assembly
- A 21 Low Pitched Horn Assembly
- A 22 High Pitched Horn Assembly
- A 23 Security Horn Assembly
- A 24 Engine Hood Courtesy Switch
- A 25 Headlight Assembly LH
- A 26 Headlight Assembly LH
- A 27 Headlight Assembly LH
- A 28 Headlight Assembly RH

Position of Parts in Engine Compartment

