


RADIATOR UPPER SUPPORT (ASSY)

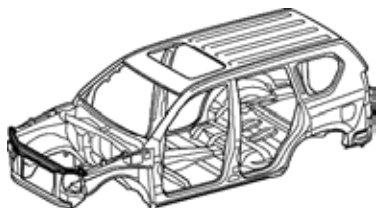

F43863A



Symbol meaning

REMOVAL	△ : Remove Weld Points
INSTALLATION	◻ : Plug Weld



F43863B

REMOVAL-INSTALLATION

[LH Side]

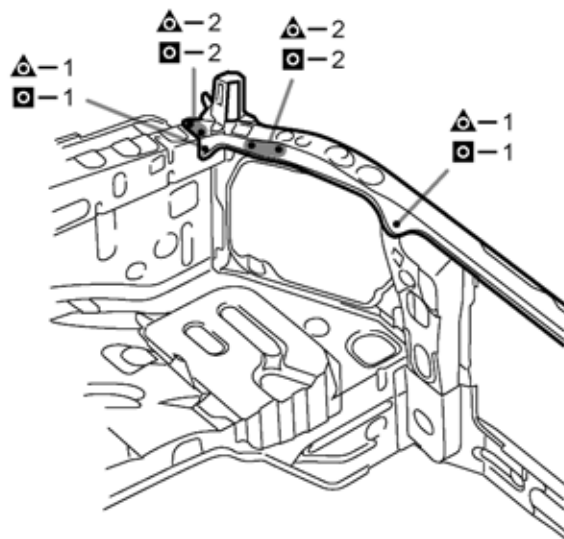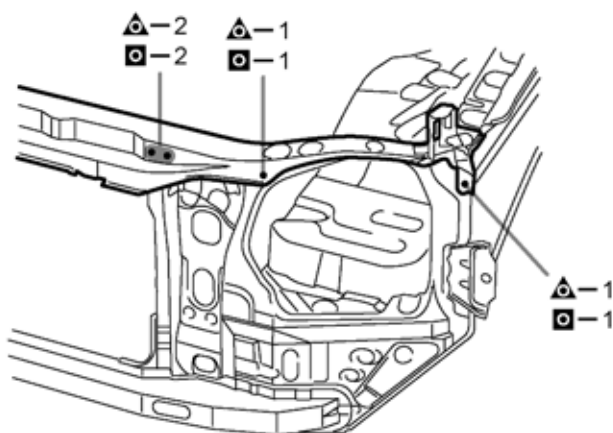

[RH Side]

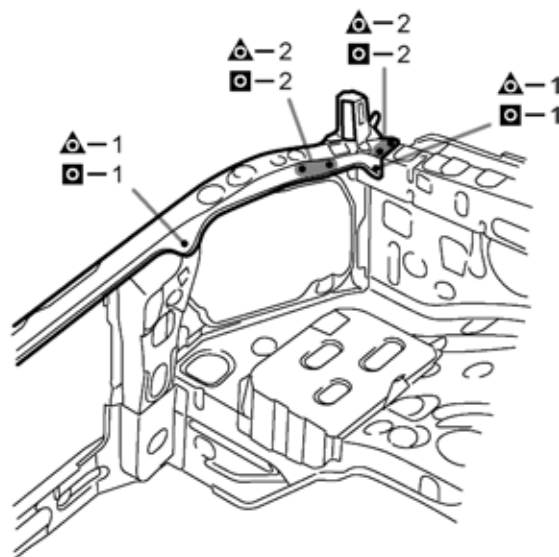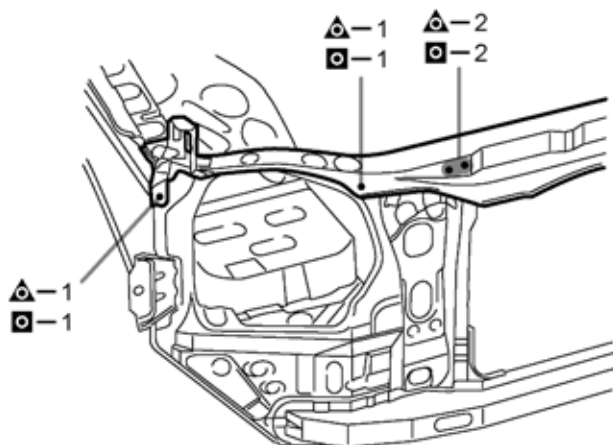

F43863

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.