


Position of Parts in Instrument Panel

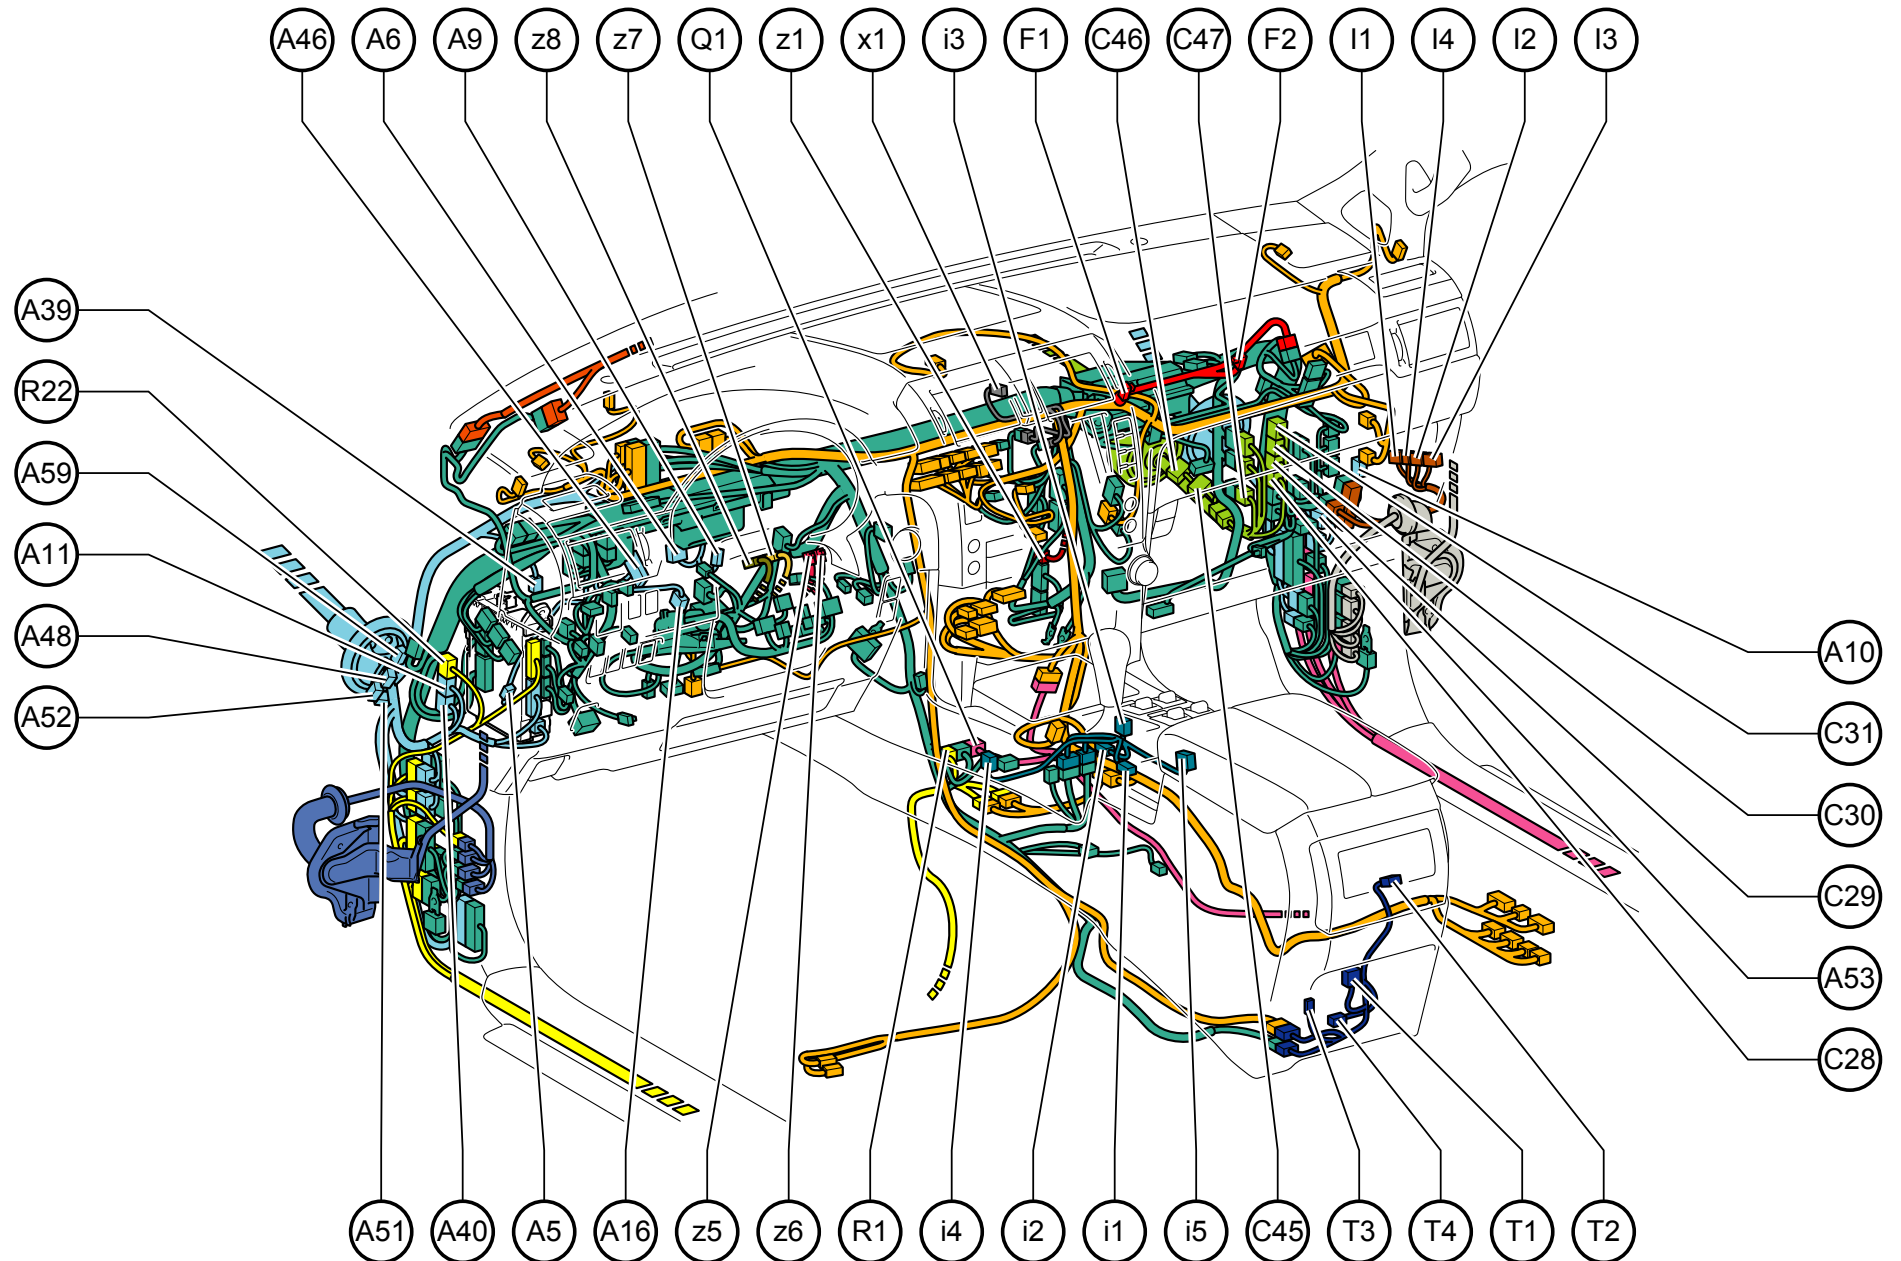

- A 5 Stop Light Switch Assembly
- A 6 Stop Light Control Relay Assembly
- A 9 Skid Control Buzzer Assembly
- A 10 Front Acceleration Sensor Assembly
- A 11 Suspension Control ECU
- A 16 Acceleration Sensor
- A 39 Parking Brake Switch Assembly
- A 40 Suspension Control ECU
- A 46 Headlight Swivel ECU Assembly
- A 48 Diode (Stop Light)
- A 51 Junction Connector
- A 52 Junction Connector
- A 53 Junction Connector
- A 59 Junction Connector

- C 28 ECM
- C 29 ECM
- C 30 ECM
- C 31 ECM
- C 45 Junction Connector
- C 46 Junction Connector
- C 47 Junction Connector

- F 1 Front Passenger Side Squib Circuit
- F 2 Front Passenger Side Squib Circuit

- I 1 Clearance Warning ECU Assembly
- I 2 Parking Assist ECU
- I 3 Parking Assist ECU
- I 4 Parking Assist ECU

- Q 1 Airbag Sensor Assembly

- R 1 Airbag Sensor Assembly
- R 22 Suspension Control ECU

















- T 1 Headphone Terminal
- T 2 No. 2 A/C Control Assembly
- T 3 Console Box Illumination Light Assembly
- T 4 Cooling Box Assembly

- i 1 No. 1 Indoor Electrical Key Antenna Assembly
- i 2 Power Point Socket Assembly
- i 3 Refreshing Seat Switch RH
- i 4 Refreshing Seat Switch LH
- i 5 Combination Switch Assembly












- x 1 Hazard Warning Signal Switch Assembly

- z 1 A/C Amplifier Assembly , A/C Blower Assembly
- z 5 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 6 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
- z 7 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 8 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly

Position of Parts in Instrument Panel

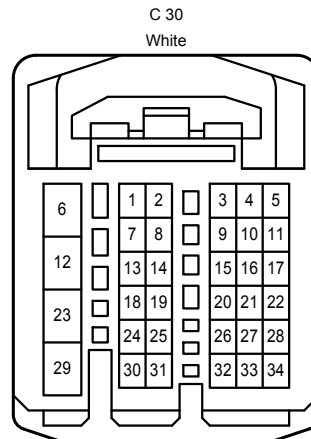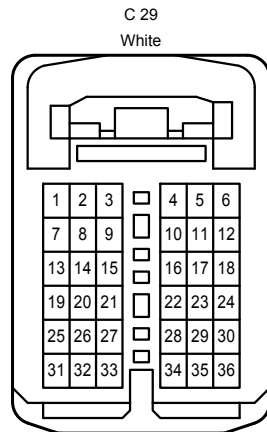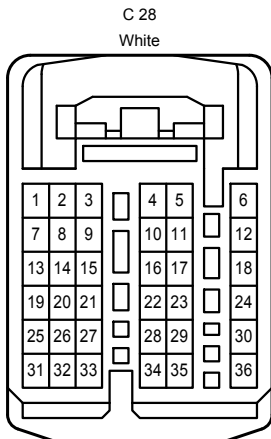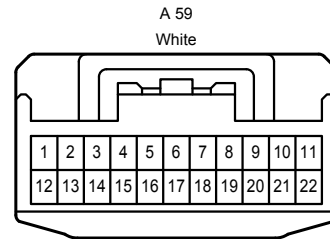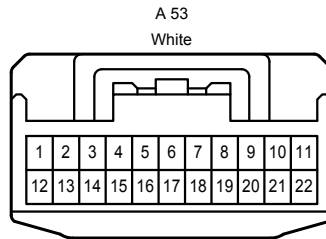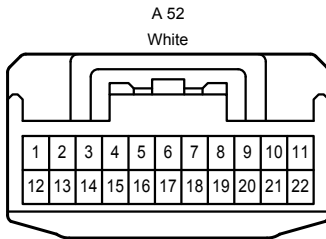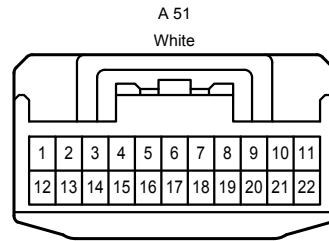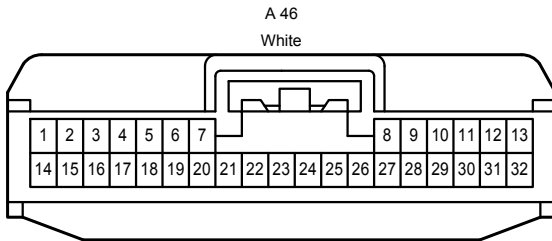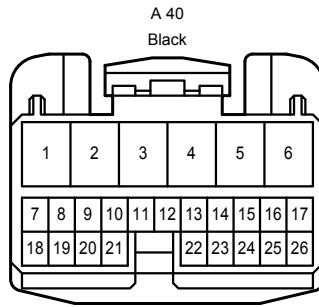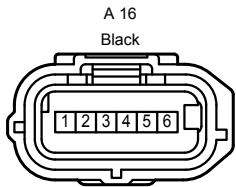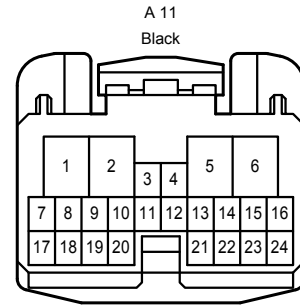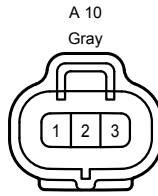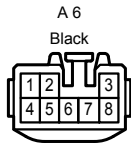

Position of Parts in Instrument Panel

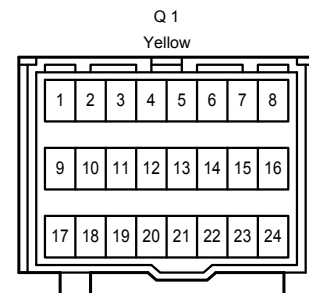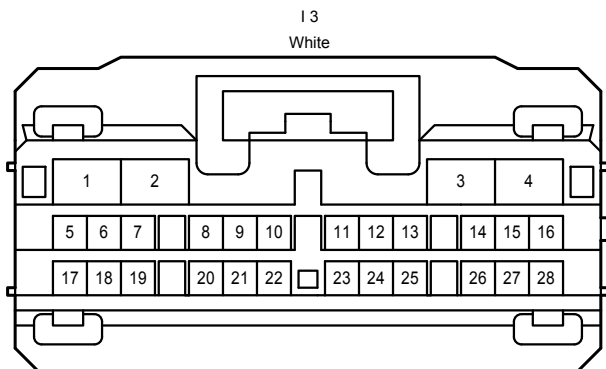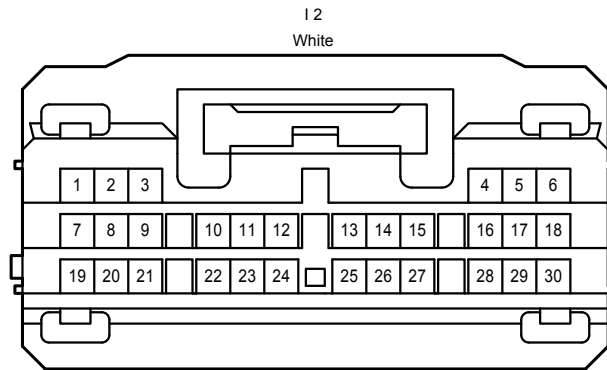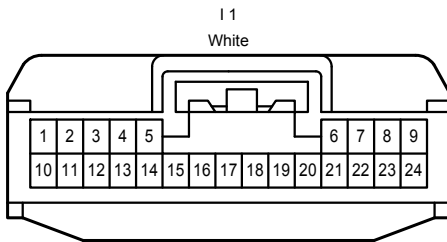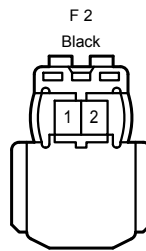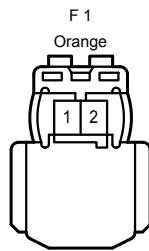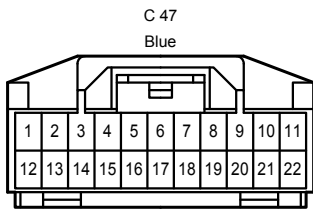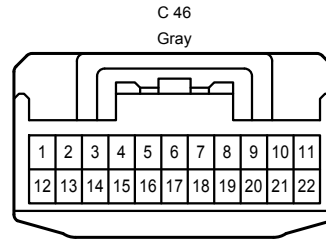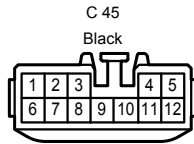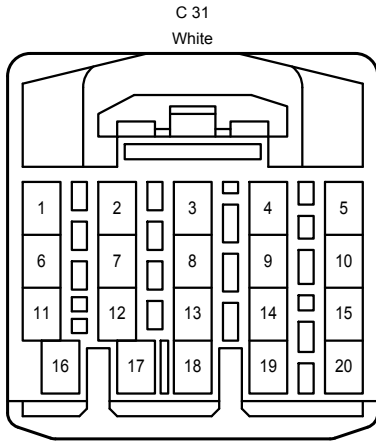

Position of Parts in Instrument Panel

