

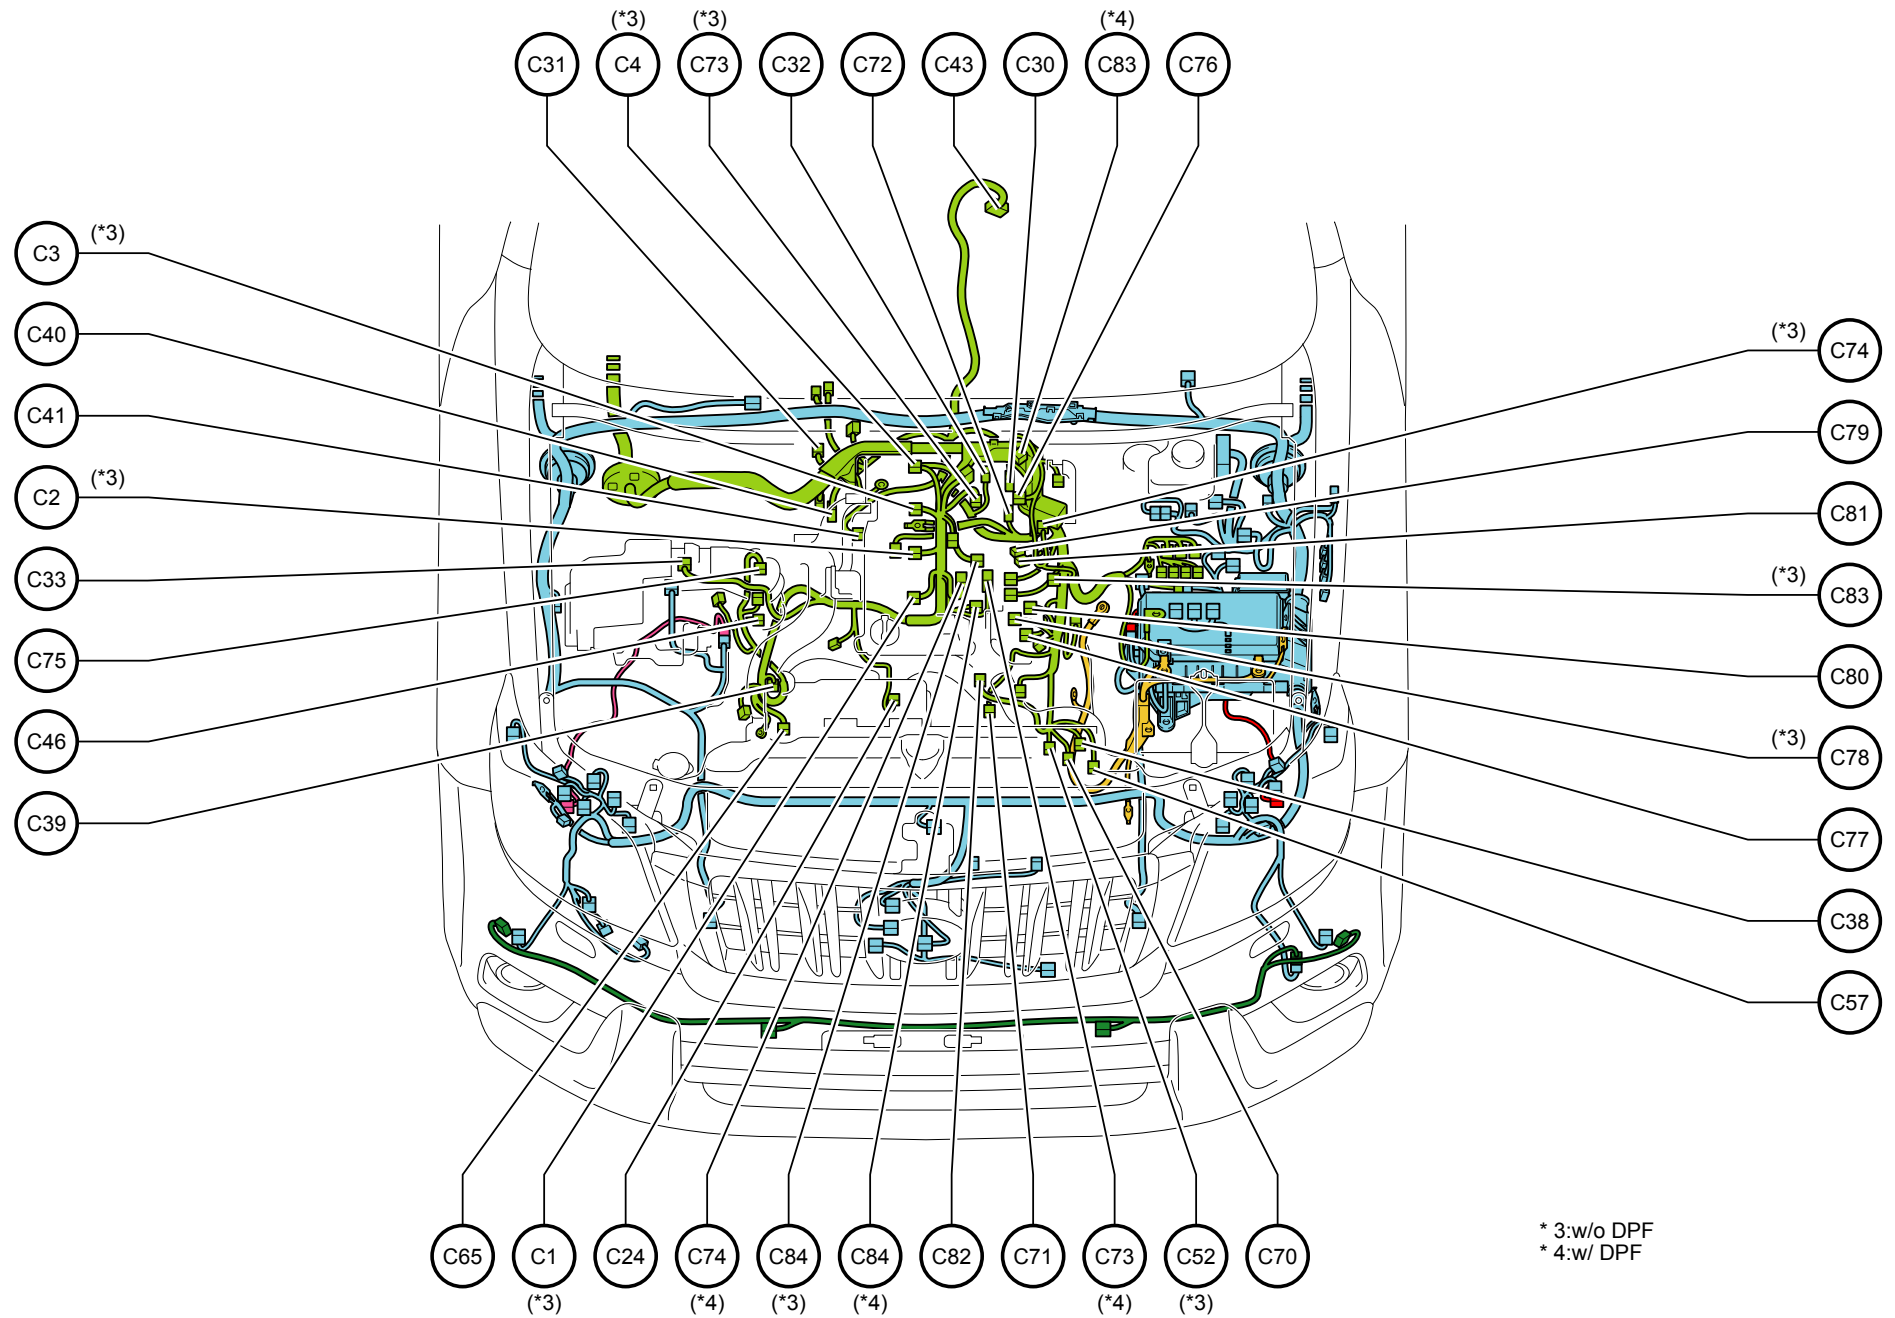
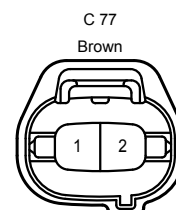
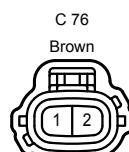
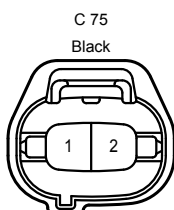
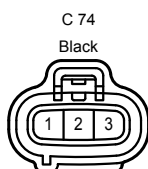
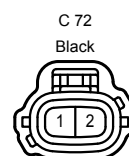
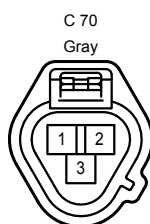
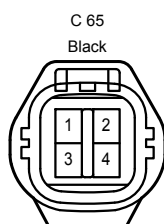

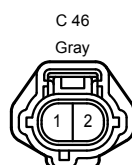
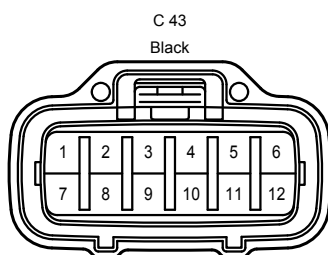
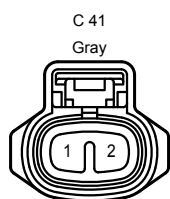
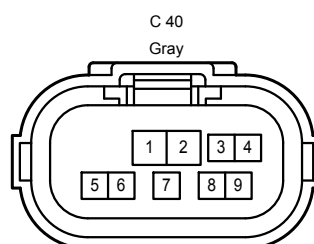
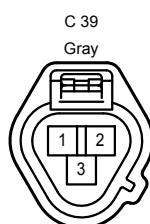
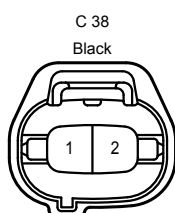
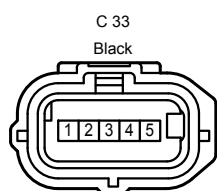
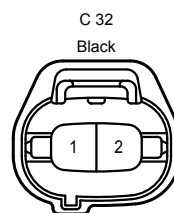
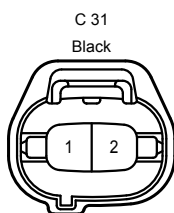
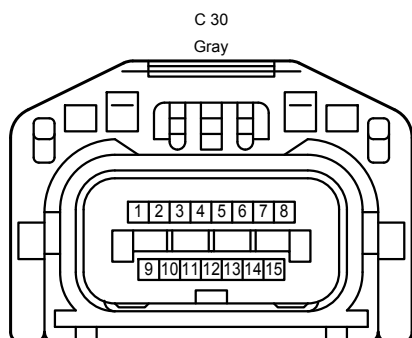
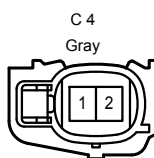
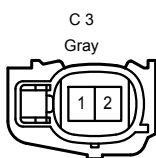



Position of Parts in Engine Compartment <LHD 1KD-FTV>

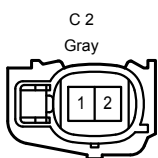


- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 30 Electronically Controlled Transmission Solenoid
- C 31 Transmission Revolution Sensor (Counter Gear)
- C 32 Transmission Revolution Sensor (Turbine)
- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 38 Vane Pump Assembly
- C 39 Cooler Compressor Assembly
- C 40 Park/Neutral Position Switch
- C 41 Back-Up Light Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 46 Engine Oil Level Sensor
- C 52 Cam Position Sensor
- C 57 Power Steering Oil Pressure Switch
- C 65 Generator Assembly
- C 70 Crank Position Sensor
- C 71 Suction Control Valve
- C 72 Pressure Discharge Valve
- C 73 Diesel Throttle Body Assembly
- C 74 Diesel Throttle Body Assembly
- C 75 DC Motor
- C 76 Electric Vacuum Regulating Valve Assembly
- C 77 VSV (for EGR Cut)
- C 78 No. 2 EGR Valve Assembly
- C 79 VSV (for No. 2 Swirl Control Valve)
- C 80 VSV (for Engine Mounting)
- C 81 VSV (for No. 1 Swirl Control Valve)
- C 82 Fuel Pressure Sensor
- C 83 Vacuum Sensor (Diesel Turbo Pressure Sensor)
- C 84 Intake Air Temperature Sensor

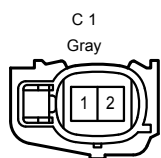

C 78
Gray

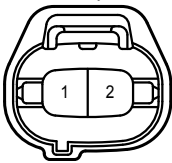


C 79
Brown

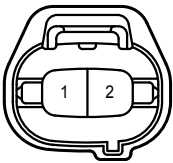

C 80
Brown




C 81
Blue

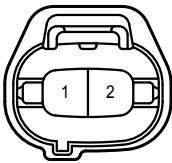

C 82
Black



C 83
Black

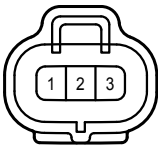

C 84
Gray

