

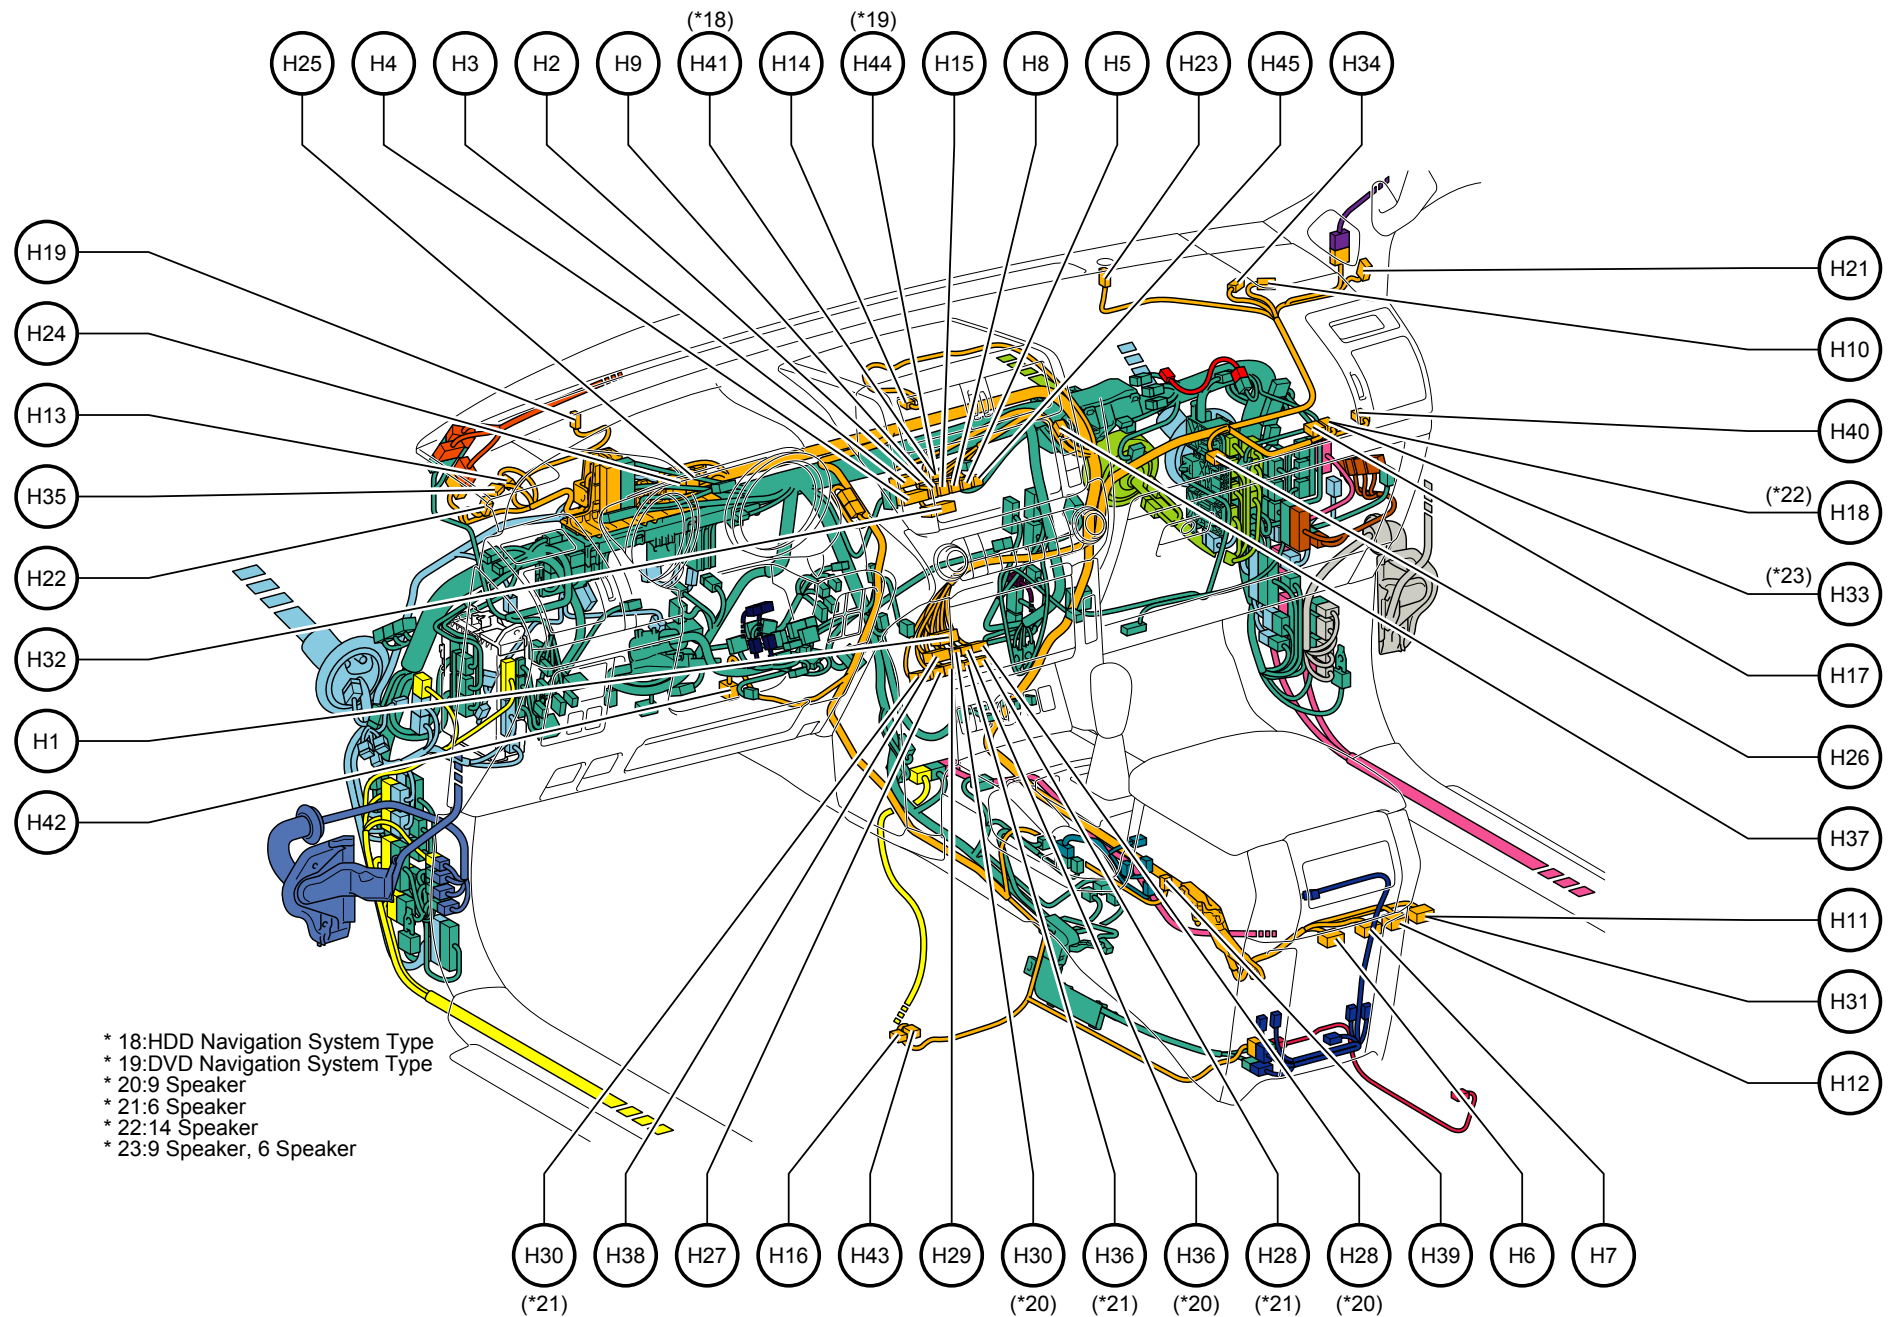
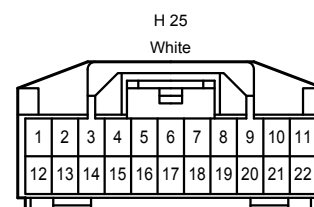
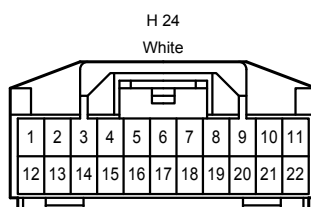
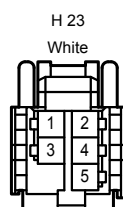
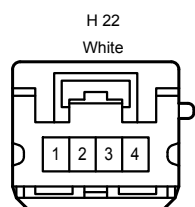
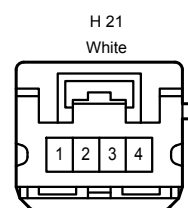
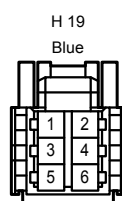
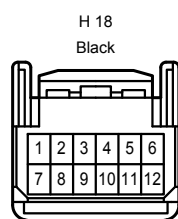
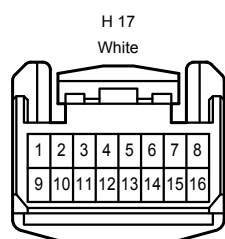
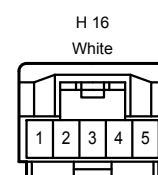
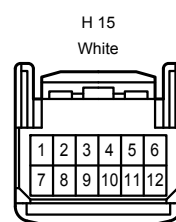
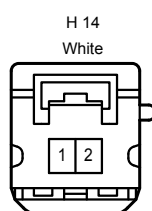
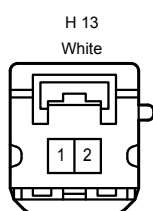
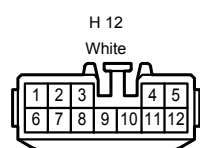
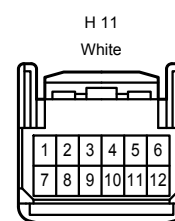
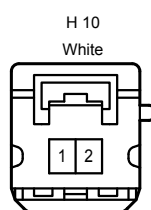


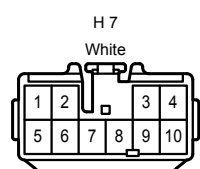
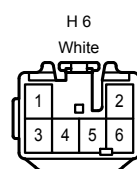
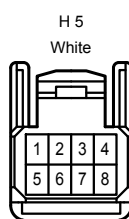
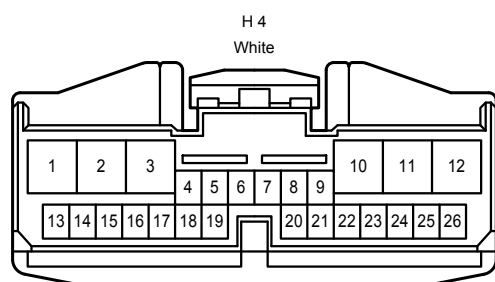
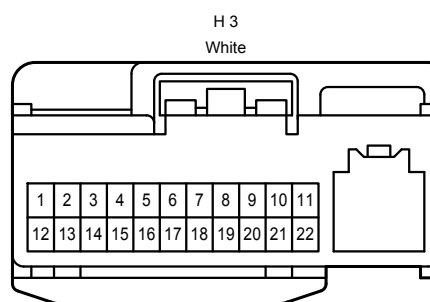


# Position of Parts in Instrument Panel <LHD>

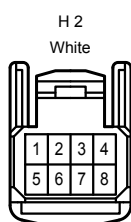

H	1	Radio Receiver Assembly
H	2	Display & Navigation Module Display
H	3	Display & Navigation Module Display
H	4	Display & Navigation Module Display
H	5	Display & Navigation Module Display
H	6	Stereo Component Amplifier Assembly
H	7	Stereo Component Amplifier Assembly
H	8	Display & Navigation Module Display
H	9	Display & Navigation Module Display
H	10	Front No. 1 Speaker Assembly RH
H	11	Stereo Component Amplifier Assembly
H	12	Stereo Component Amplifier Assembly
H	13	Front No. 1 Speaker Assembly LH
H	14	Front No. 4 Speaker Assembly
H	15	Display & Navigation Module Display
H	16	Multi-Media Module Navigation Assembly
H	17	Multi-Media Interface ECU
H	18	Multi-Media Interface ECU
H	19	Automatic Light Control Sensor
H	21	Front No. 3 Speaker Assembly RH
H	22	Front No. 3 Speaker Assembly LH
H	23	Theft Warning Indicator Light Assembly
H	24	Junction Connector
H	25	Junction Connector
H	26	Junction Connector
H	27	Radio Receiver Assembly
H	28	Radio Receiver Assembly
H	29	Radio Receiver Assembly
H	30	Radio Receiver Assembly
H	31	Stereo Component Amplifier Assembly
H	32	Accessory Meter Assembly
H	33	Multi-Media Interface ECU
H	34	Front No. 2 Speaker Assembly RH
H	35	Front No. 2 Speaker Assembly LH
H	36	Radio Receiver Assembly
H	37	Amplifier Antenna Assembly
H	38	Radio Receiver Assembly
H	39	No. 1 Stereo Jack Adapter Assembly
H	40	Multi-Media Interface ECU
H	41	Display & Navigation Module Display
H	42	IEEE Connector
H	43	Display & Navigation Module Display
H	44	Multi-Media Module Navigation Assembly
H	45	Display & Navigation Module Display

# Position of Parts in Instrument Panel <LHD>

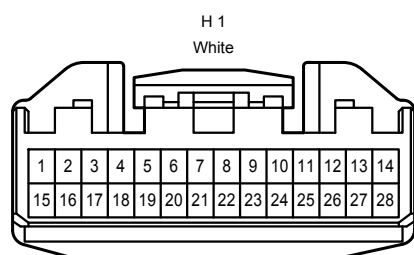

# Position of Parts in Instrument Panel <LHD>

