


Position of Parts in Engine Compartment <LHD 1KD-FTV>

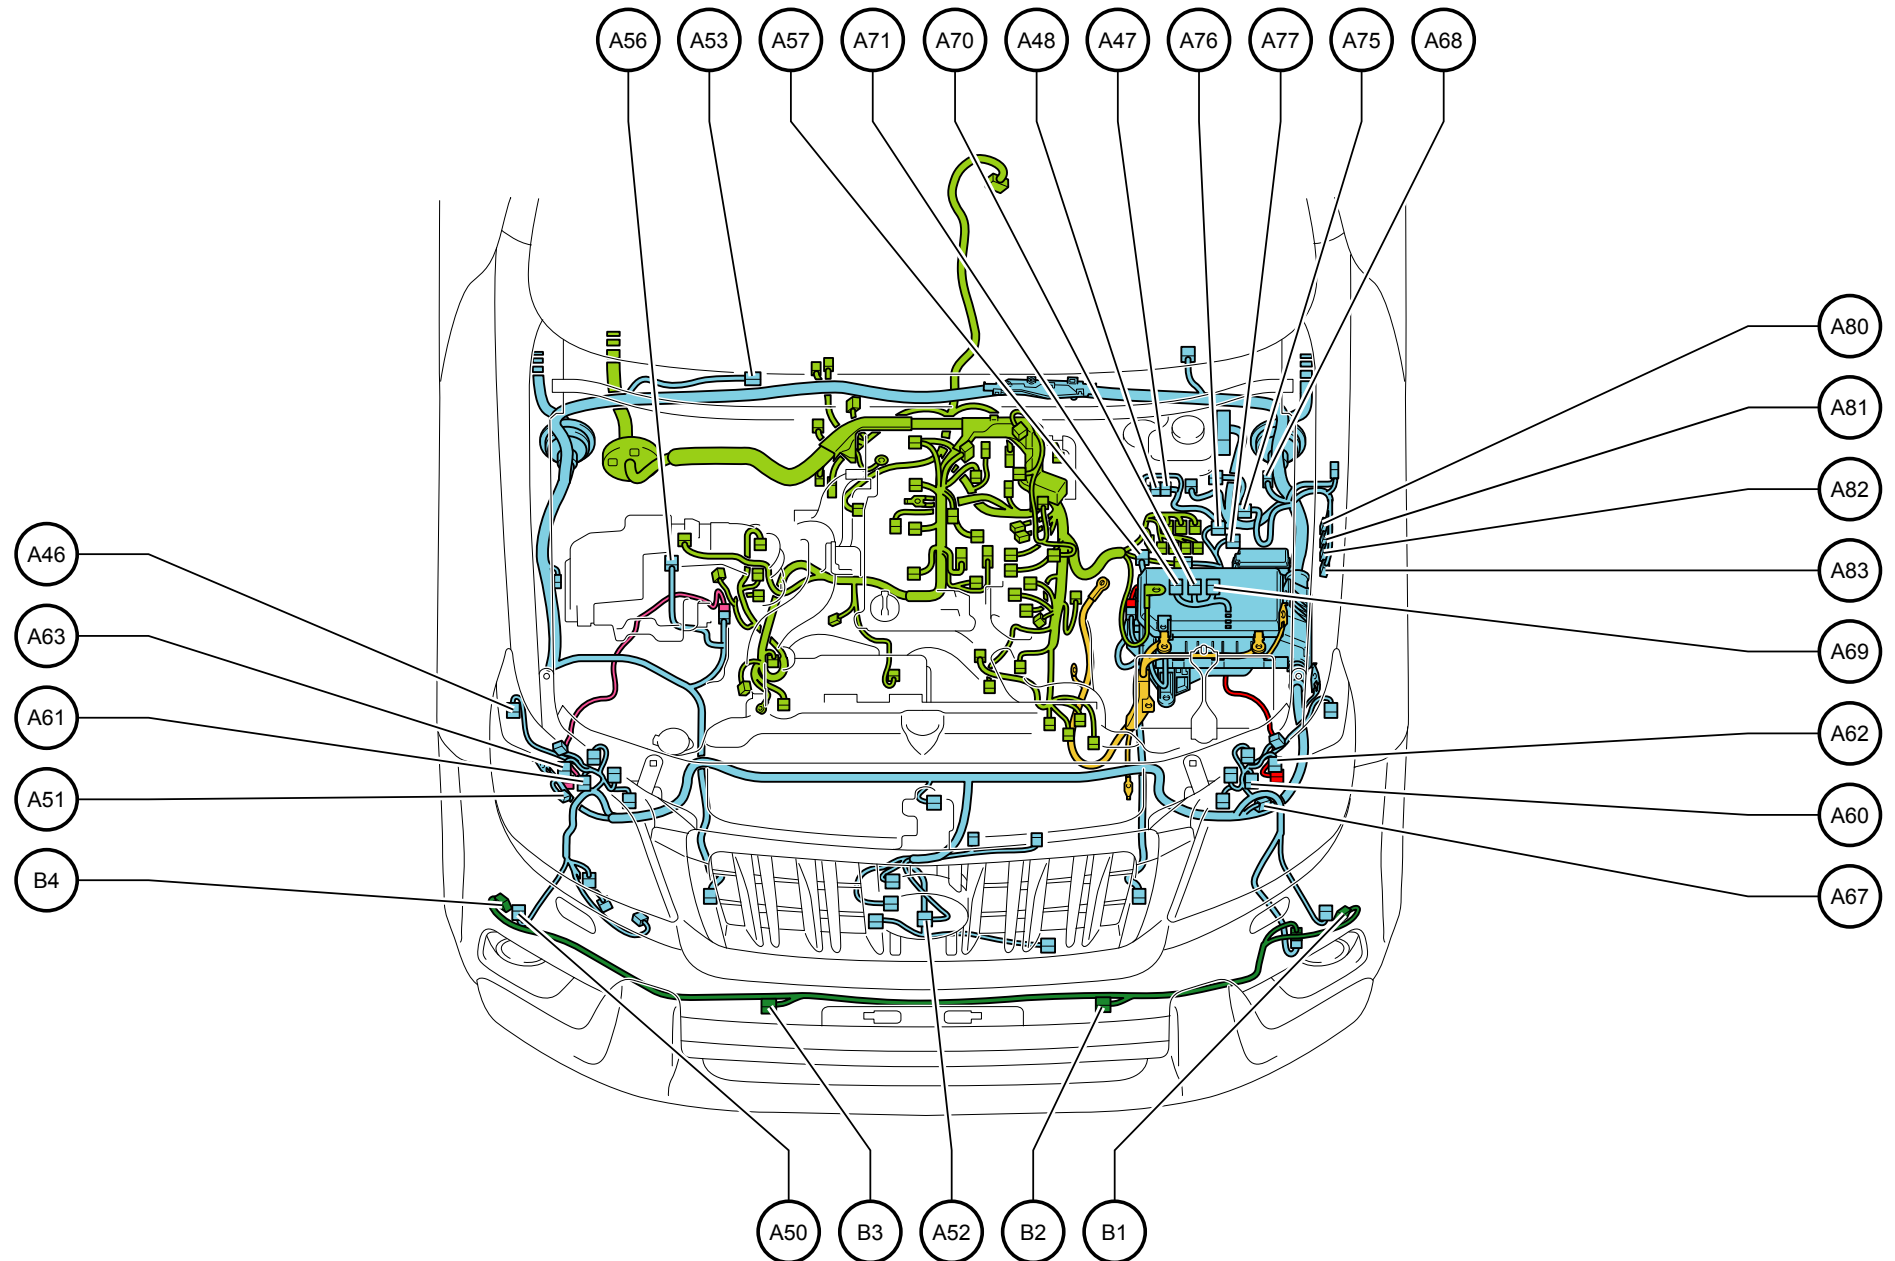

A 46 Headlight Assembly RH  
A 47 Short Connector  
A 48 Short Connector  
A 50 Fog Light Assembly RH  
A 51 Noise Filter (Condenser Fan)  
A 52 Front Television Camera Assembly  
A 53 Front Wiper Deicer (Windshield Glass)  
A 56 Front Absorber Control Actuator RH  
A 57 Front Absorber Control Actuator LH  
A 60 Headlight Assembly LH  
A 61 Headlight Assembly RH  
A 62 Headlight Assembly LH  
A 63 Headlight Assembly RH  
A 67 Junction Connector  
A 68 Junction Connector  
A 69 Junction Connector  
A 70 Junction Connector  
A 71 Junction Connector  
A 75 Fuel Filter Warning Switch  
A 76 Level Warning Switch (Fuel Filter Assembly)  
A 77 Fuel Heater Assembly  
A 80 Glow Plug Controller  
A 81 Glow Plug Controller  
A 82 Glow Plug Controller  
A 83 Glow Plug Controller

B 1 Front No. 1 Ultrasonic Sensor LH  
B 2 Front No. 1 Ultrasonic Sensor Center LH  
B 3 Front No. 1 Ultrasonic Sensor Center RH  
B 4 Front No. 1 Ultrasonic Sensor RH

