


Wiring diagram for the front seat inner belt assembly LH (R10) and RH (Q26). The diagram shows the electrical connections for various components including pretensioners, buckles, and airbag sensors. It includes a main power rail with terminals E1, E2, D+, D-, D2+, D2-, P+, P-, +SL, -SL, +SR, -SR, DK+, DK-, DBE+, DBE-, and GSW. Specific components like R2 (Front Seat Outer Belt Assembly LH), Q2 (Front Seat Outer Belt Assembly RH), R10 (Front Seat Inner Belt Assembly LH), and Q26 (Front Seat Inner Belt Assembly RH) are detailed with their internal wiring and terminal connections. The diagram also shows the connection to the Main Body ECU via CANL and CANH lines, and the connection to the Ignition (IG) system via a 10A IGN fuse.

SRS (w/o Curtain Shield Airbag)

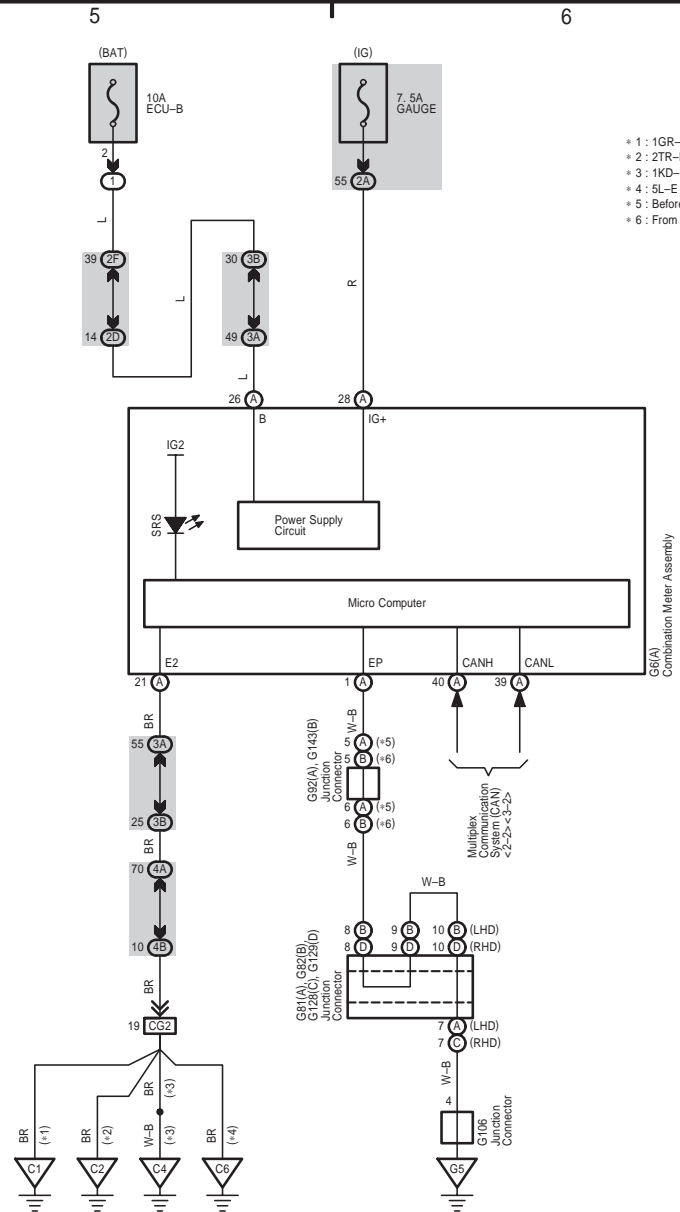

- \* 1 : 1GR-FE
- \* 2 : 2TR-FE
- \* 3 : 1KD-FTV
- \* 4 : 5L-E
- \* 5 : Before Oct. 2010 Production
- \* 6 : From Oct. 2010 Production