

b7
Front Seat Heater Assembly LH

b16
Junction
Connector

b9(A),b17(B)
Junction
Connector

b16
Junction
Connector

b9(A),b17(B)
Junction
Connector

b16
Junction
Connector

b9(A),b17(B)
Junction
Connector

b16
Junction
Connector

b9(A),b17(B)
Junction
Connector

b16
Junction
Connector

b9(A),b17(B)
Junction
Connector

b16
Junction
Connector






b9(A),b17(B)
Junction
Connector

b16
Junction
Connector

b9(A),b17(B)
Junction
Connector


b16
Junction
Connector

b9(A),b17(B)
Junction
Connector

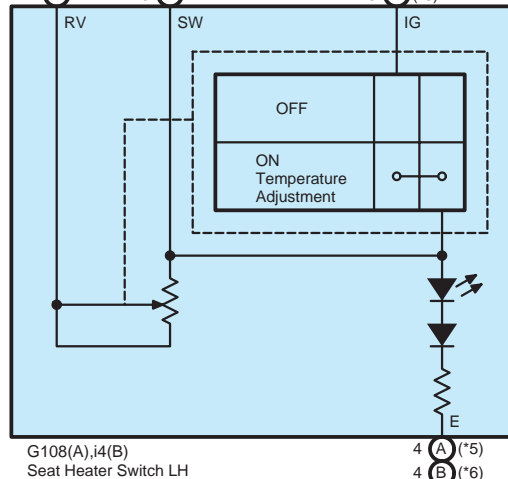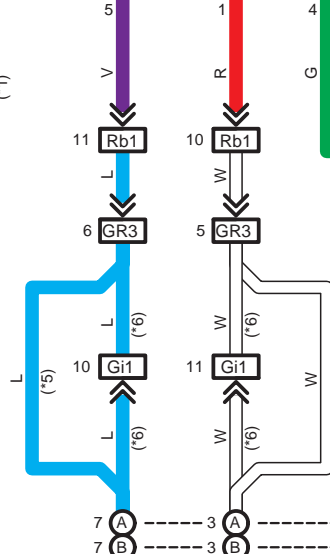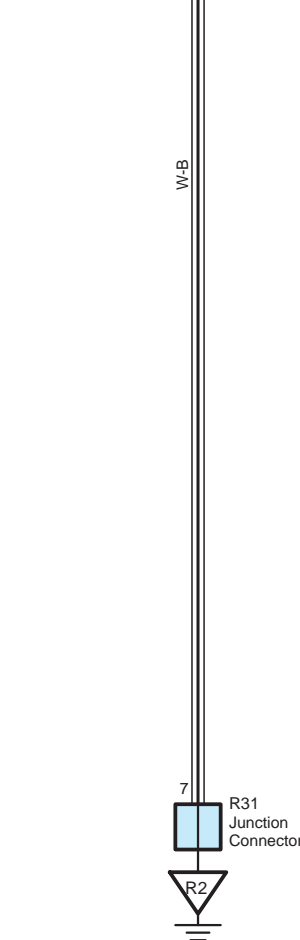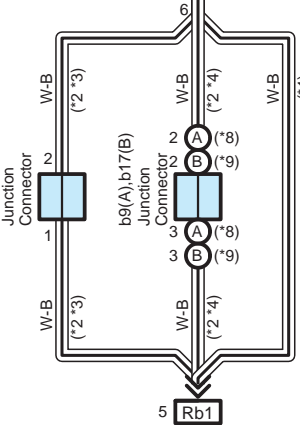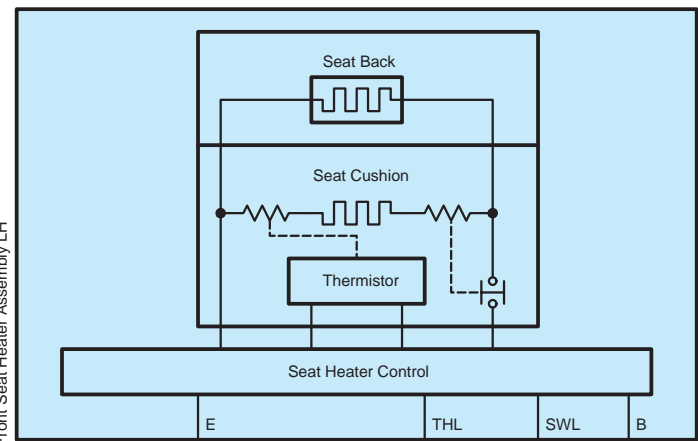

G108(A),i4(B)
Seat Heater Switch LH

- * 1 :w/o Power Seat
- * 2 :w/ Power Seat
- * 3 :Lumbar Support Control Only
- * 4 :Except Lumbar Support Control Only
- * 5 :w/o Entry & Start System
- * 6 :w/ Entry & Start System
- * 8 :Before Oct. 2010 Production
- * 9 :From Oct. 2010 Production

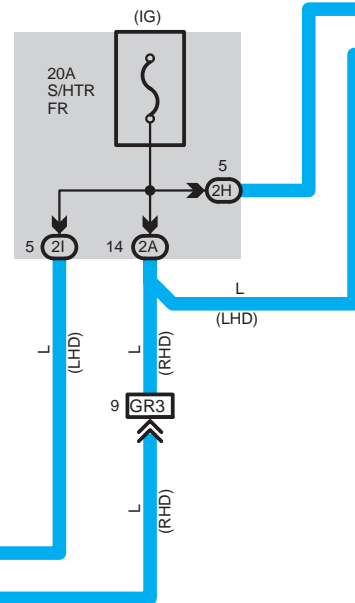

L(RHD) L(RHD)
L(LHD) L(LHD)

L(*6) L(*6)
L(*5) L(*5)

L(*6) L(*6)
L(*5) L(*5)

L(*6) L(*6)
L(*5) L(*5)

L(*6) L(*6)
L(*5) L(*5)

L(*6) L(*6)
L(*5) L(*5)

L(*6) L(*6)
L(*5) L(*5)


L(*6) L(*6)
L(*5) L(*5)

L(*6) L(*6)
L(*5) L(*5)





L(*6) L(*6)
L(*5) L(*5)

L(*6) L(*6)
L(*5) L(*5)




L(*6) L(*6)
L(*5) L(*5)

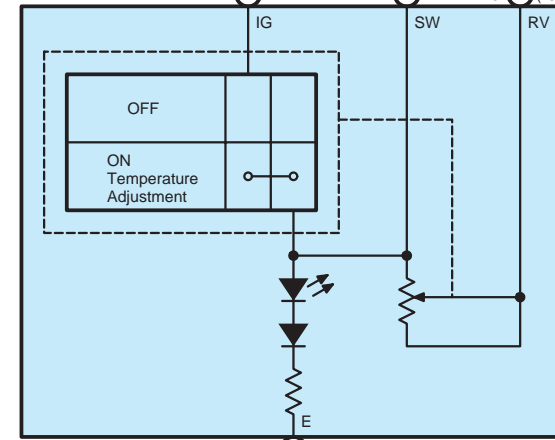

G109(A),i3(B)
Seat Heater Switch RH

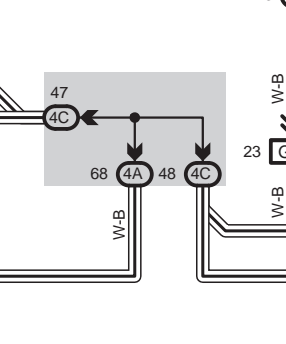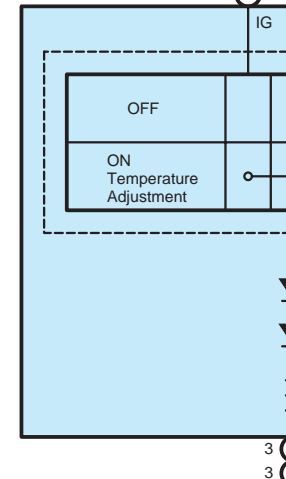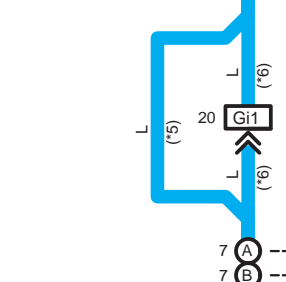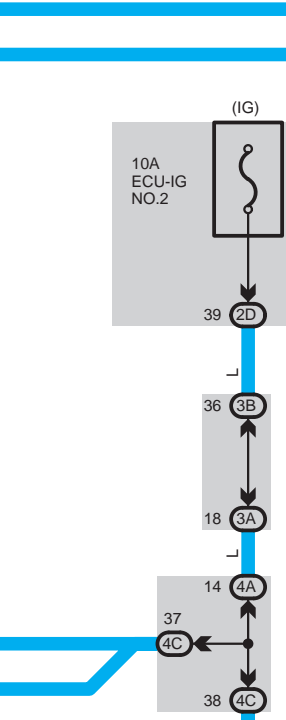

a7
Front Seat Heater Assembly RH

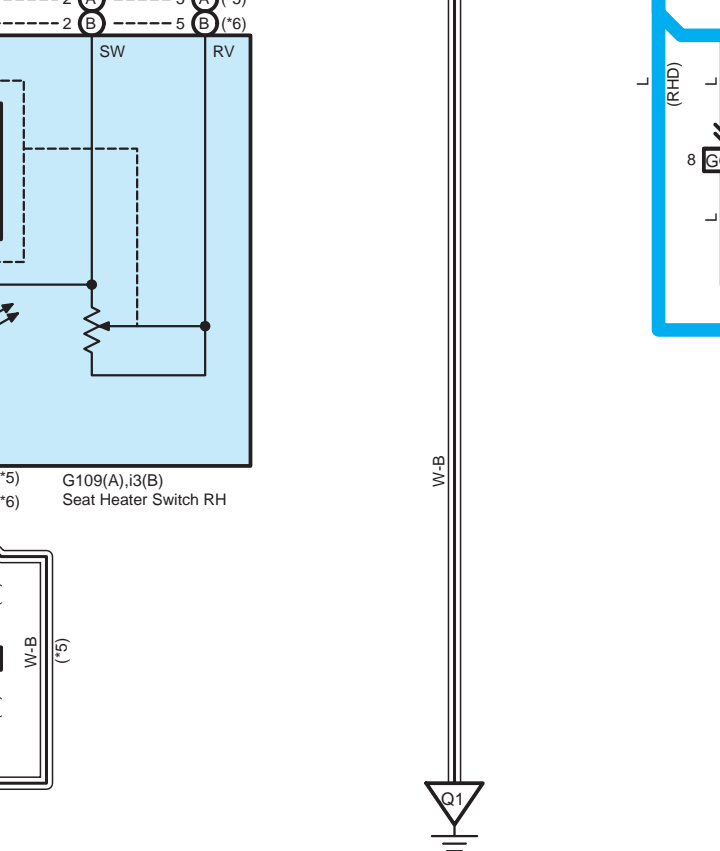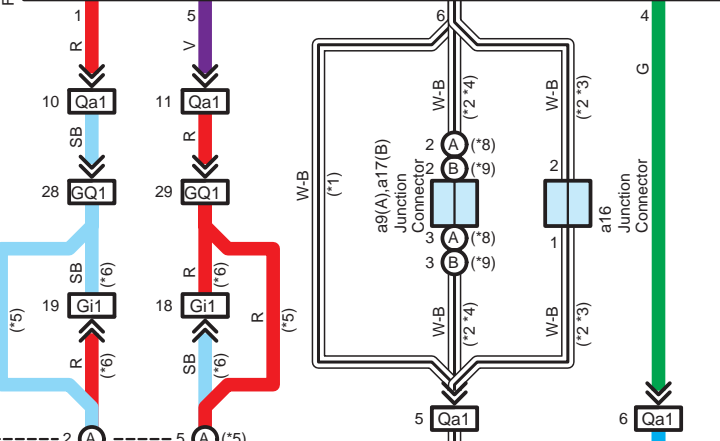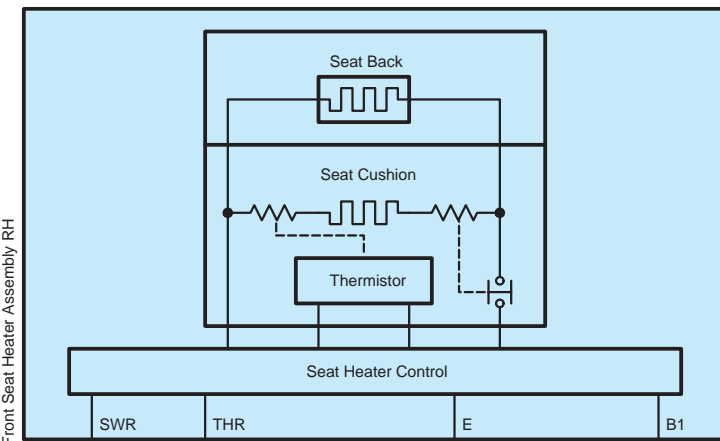

L(RHD) L(RHD)
L(LHD) L(LHD)

L(*6) L(*6)
L(*5) L(*5)

L(*6) L(*6)
L(*5) L(*5)

L(*6) L(*6)
L(*5) L(*5)