


F RELAY LOCATIONS

Junction Connector (CAN No. 1)	Cowl Side Panel LH (See Page 21)
--------------------------------	----------------------------------

(LHD)

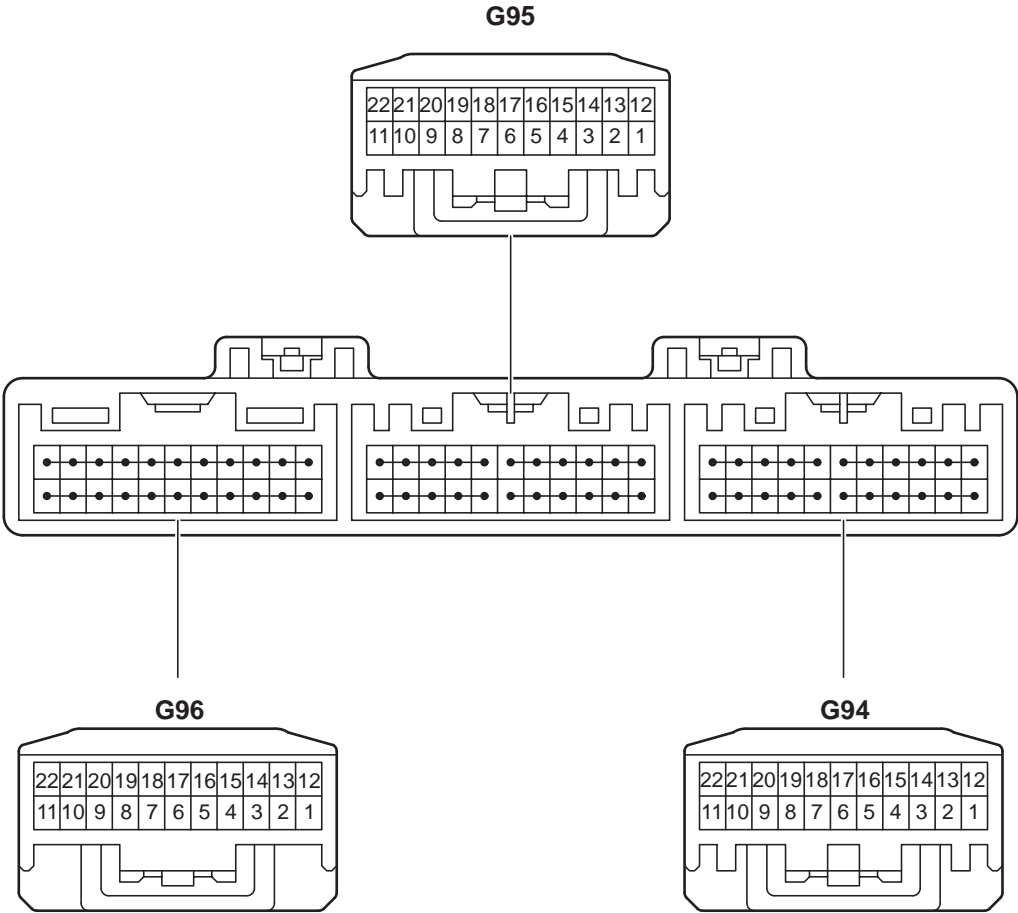

Junction Connector (CAN No. 1)	Cowl Side Panel RH (See Page 21)
--------------------------------	----------------------------------

(RHD)

