



Engine Immobiliser System (w/ Entry & Start System), Entry & Start System, Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and Wireless Door Lock Control (w/ Entry & Start System)

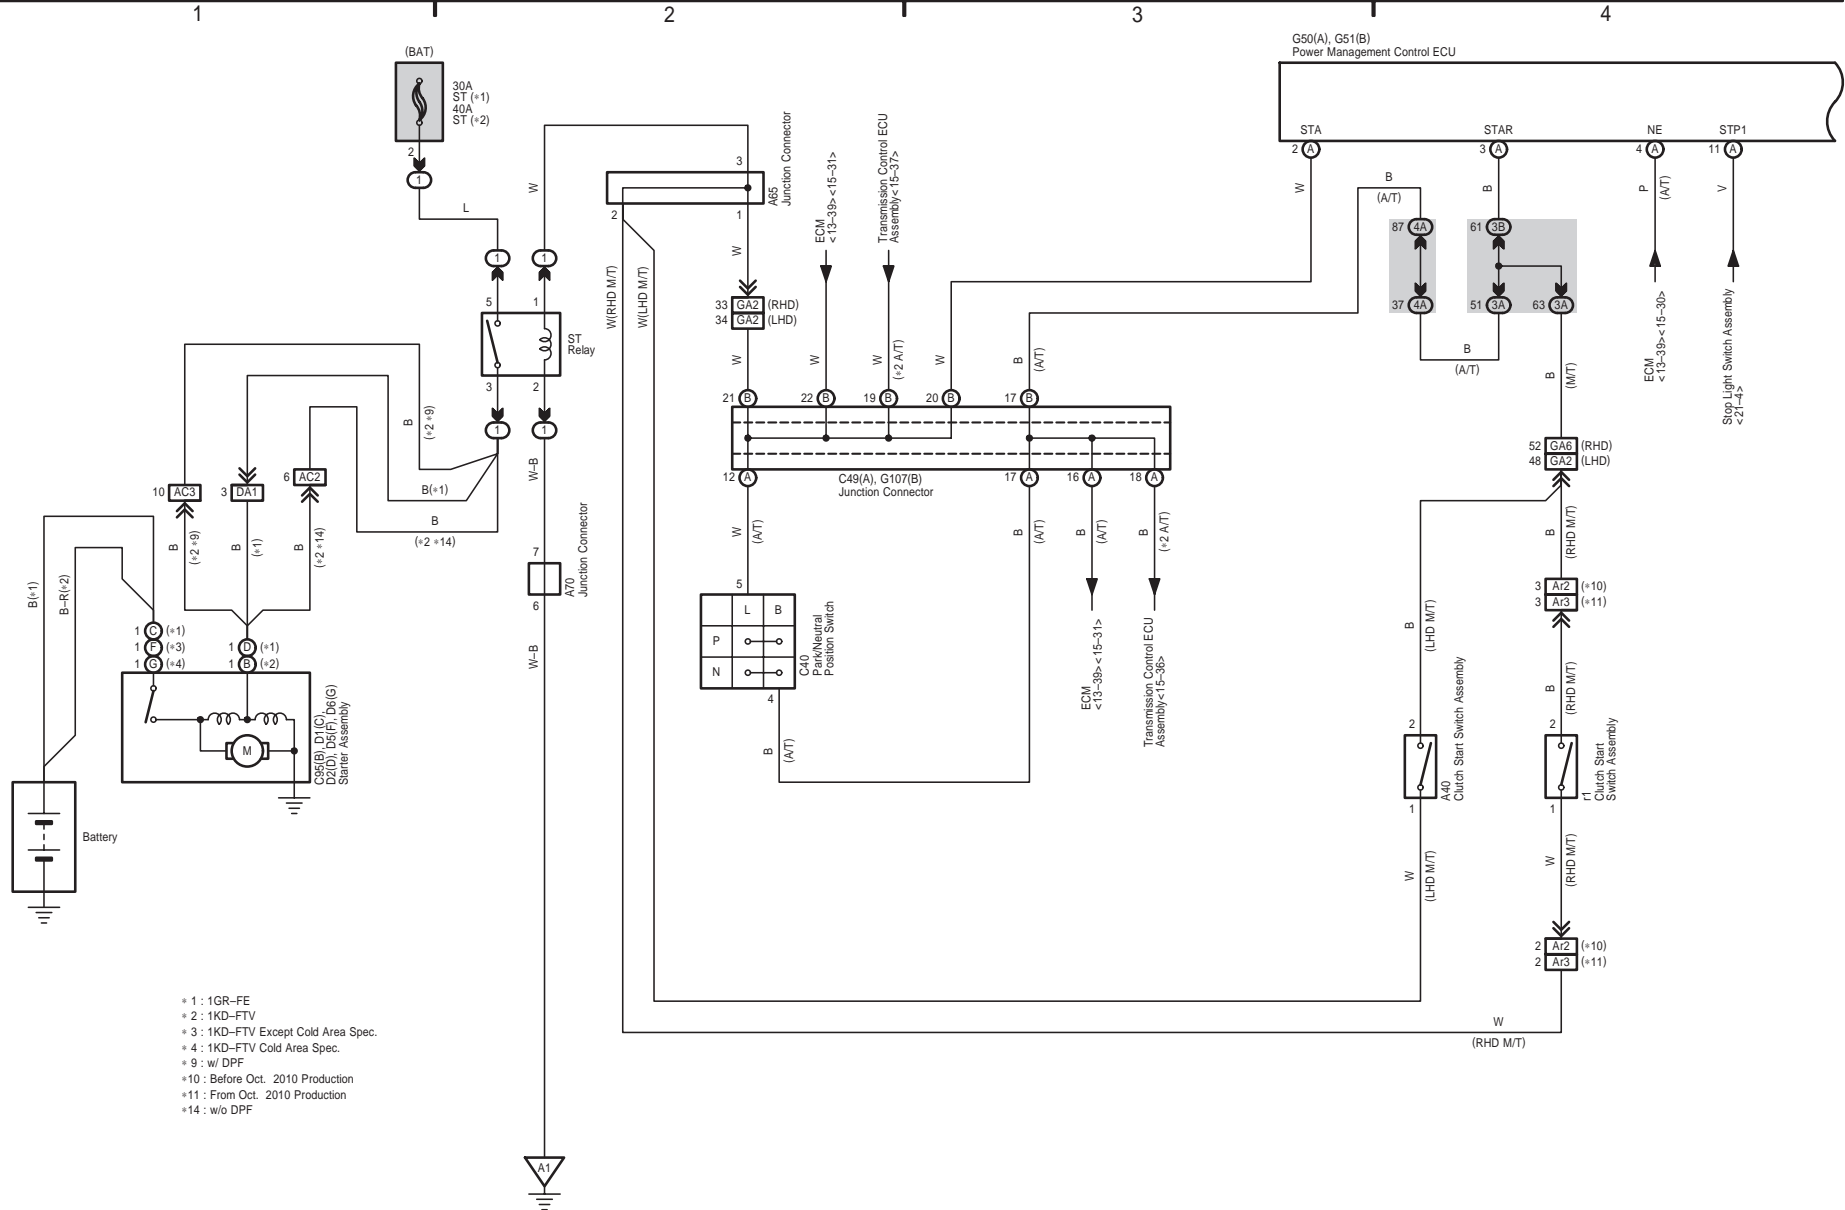


Engine Immobiliser System (w/ Entry & Start System), Entry & Start System,
Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and
Wireless Door Lock Control (w/ Entry & Start System)

*10 : Before Oct. 2010 Production
*11 : From Oct. 2010 Production

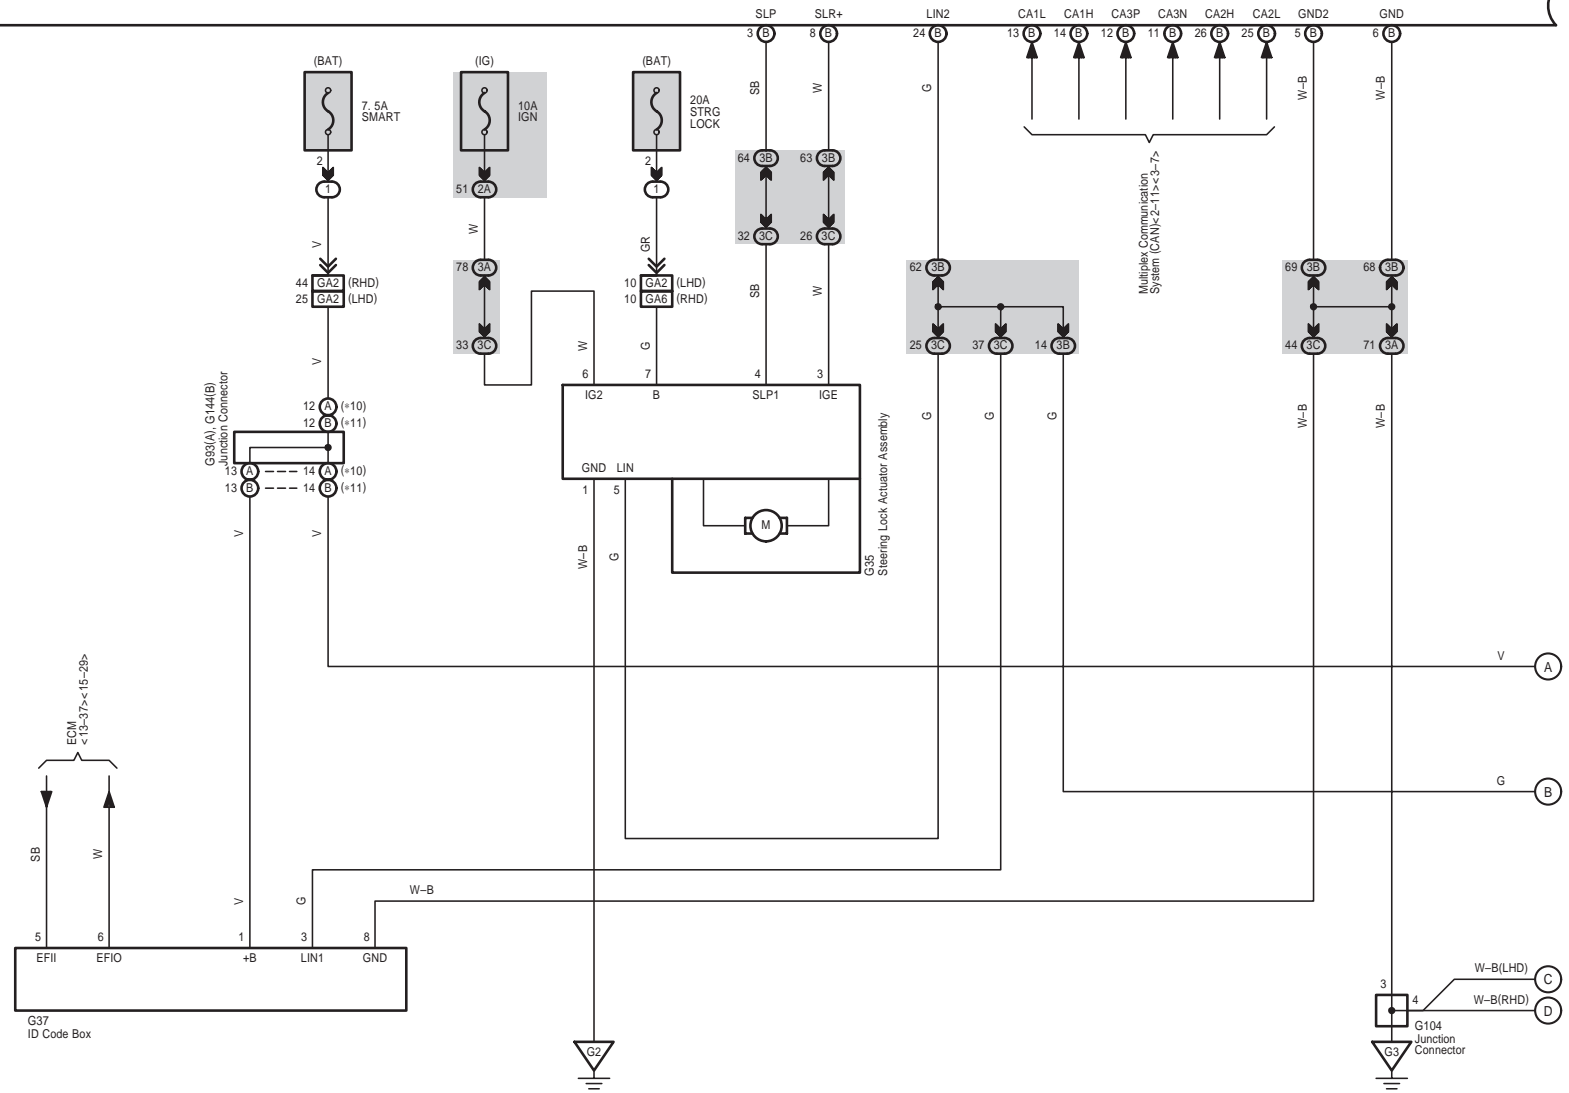

Engine Immobiliser System (w/ Entry & Start System), Entry & Start System,
Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and
Wireless Door Lock Control (w/ Entry & Start System)

*10 : Before Oct. 2010 Production
*11 : From Oct. 2010 Production

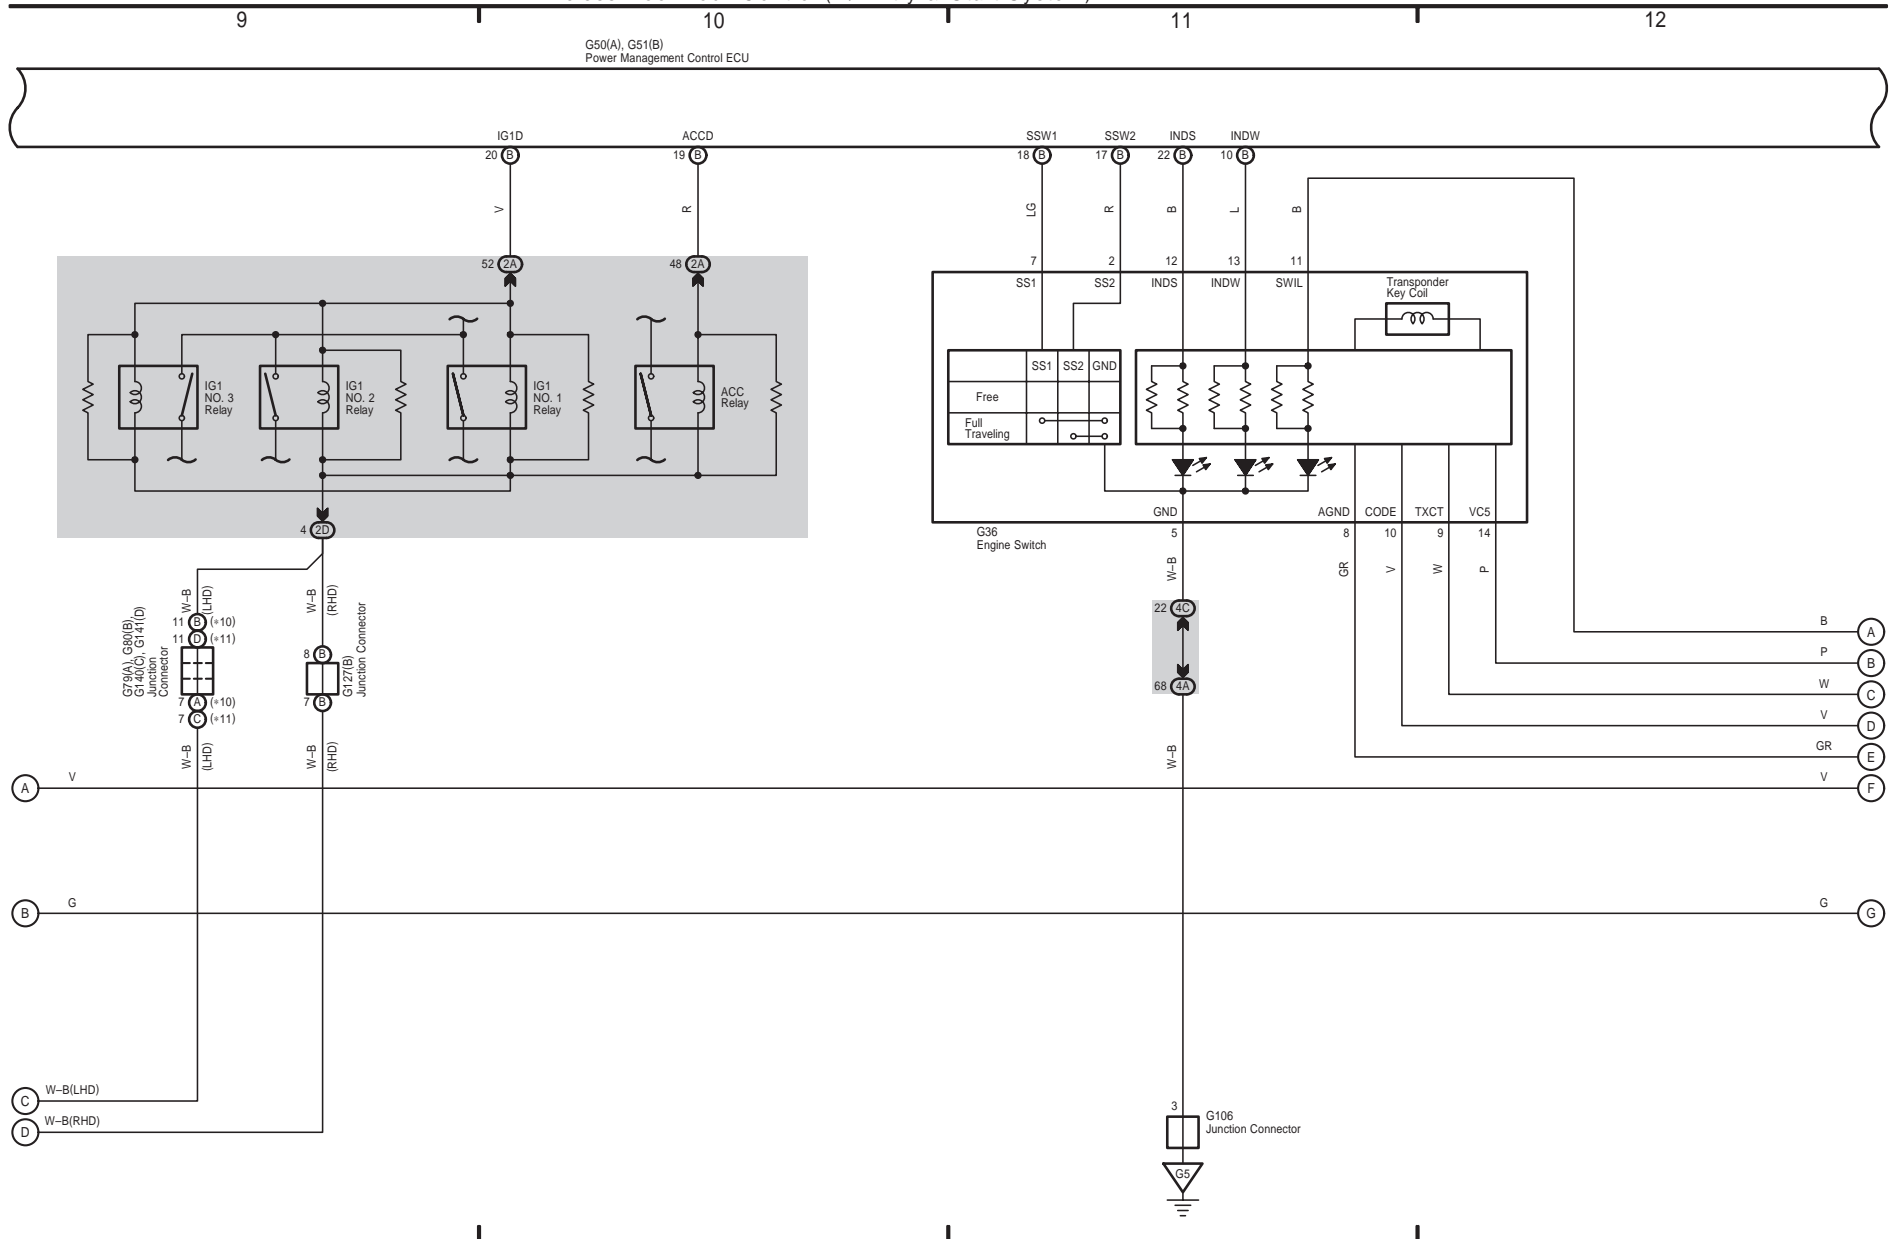

13

G50(A), G51(B)
Power Management Control ECU

SPD 23 (B) R
P 16 (B) V
AM21 2 (B) B
AM22 1 (B) B
IG2D 8 (A) L

Combination Meter Assembly <71-1> <72-1>
Shift Lock Control ECU Sub-Assembly <55-2>

IG2 Relay

(BAT) 20A IG2

(BAT) 7.5A AM2

(BAT) 10A ECU-B

(IG) 10A IGN

G38(A), G39(B)
Certification ECU Assembly

IG 16 (A) W
CUTB 17 (A) L
SWIL 11 (A) B
VC5 28 (A) P
TXCT 12 (A) W
CODE 13 (A) V
AGND 36 (A) GR
+B 1 (A) V
LIN 29 (A) G
IND 2 (A) G

Thief Warning Indicator Light Assembly <4-85>

Legend:

- A B
- B P
- C W
- D V
- E GR
- F V
- G G

W-B


2 270 Junction Connector

W-B

A1

Engine Immobiliser System (w/ Entry & Start System), Entry & Start System,
Starting (w/ Entry & Start System), Steering Lock (w/ Entry & Start System) and
Wireless Door Lock Control (w/ Entry & Start System)

+ 5 : 5-Door
+ 6 : 3-Door

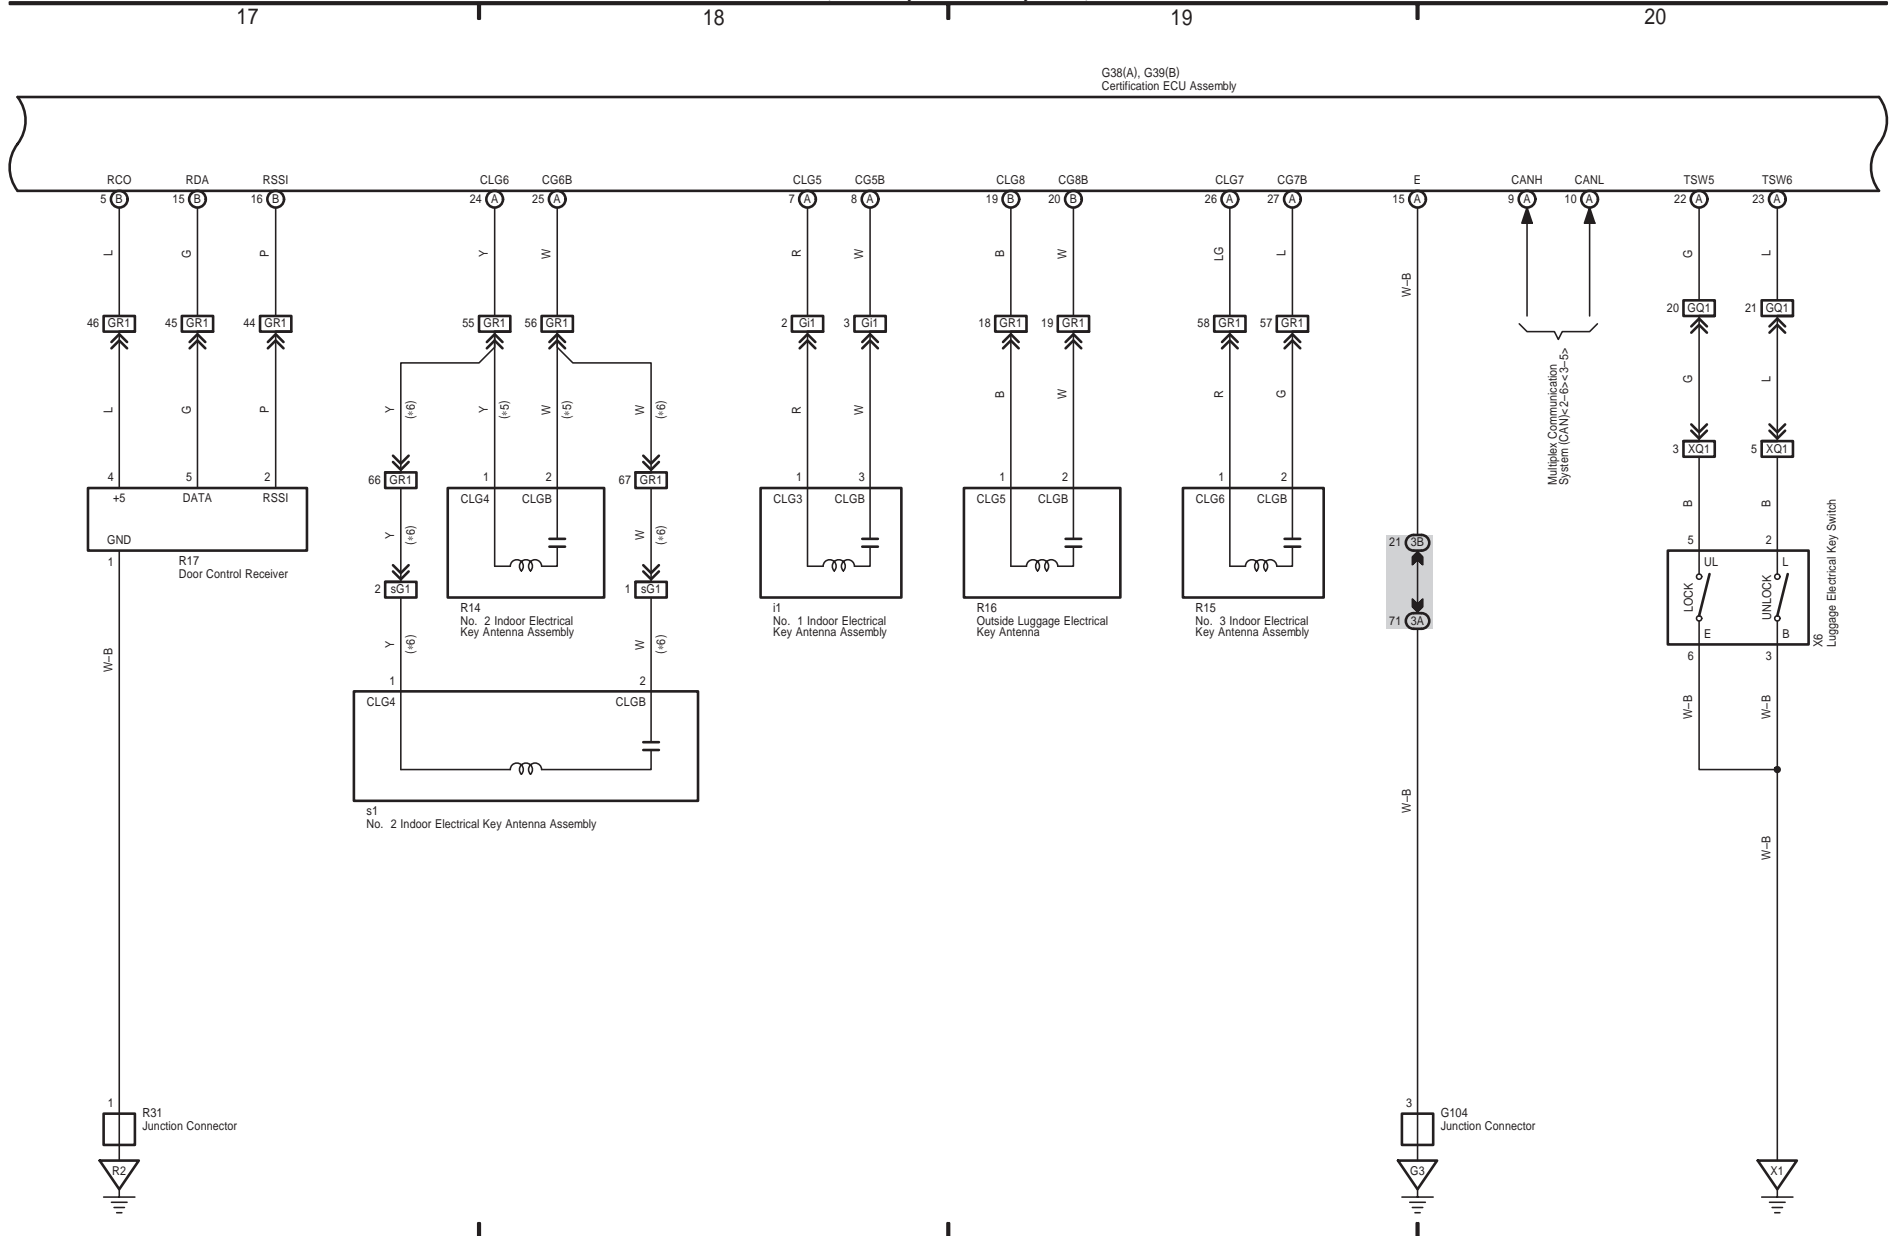

LAND CRUISER / LAND CRUISER PRADO (EM17X0E)

M

