



Position of Parts in Instrument Panel <RHD>

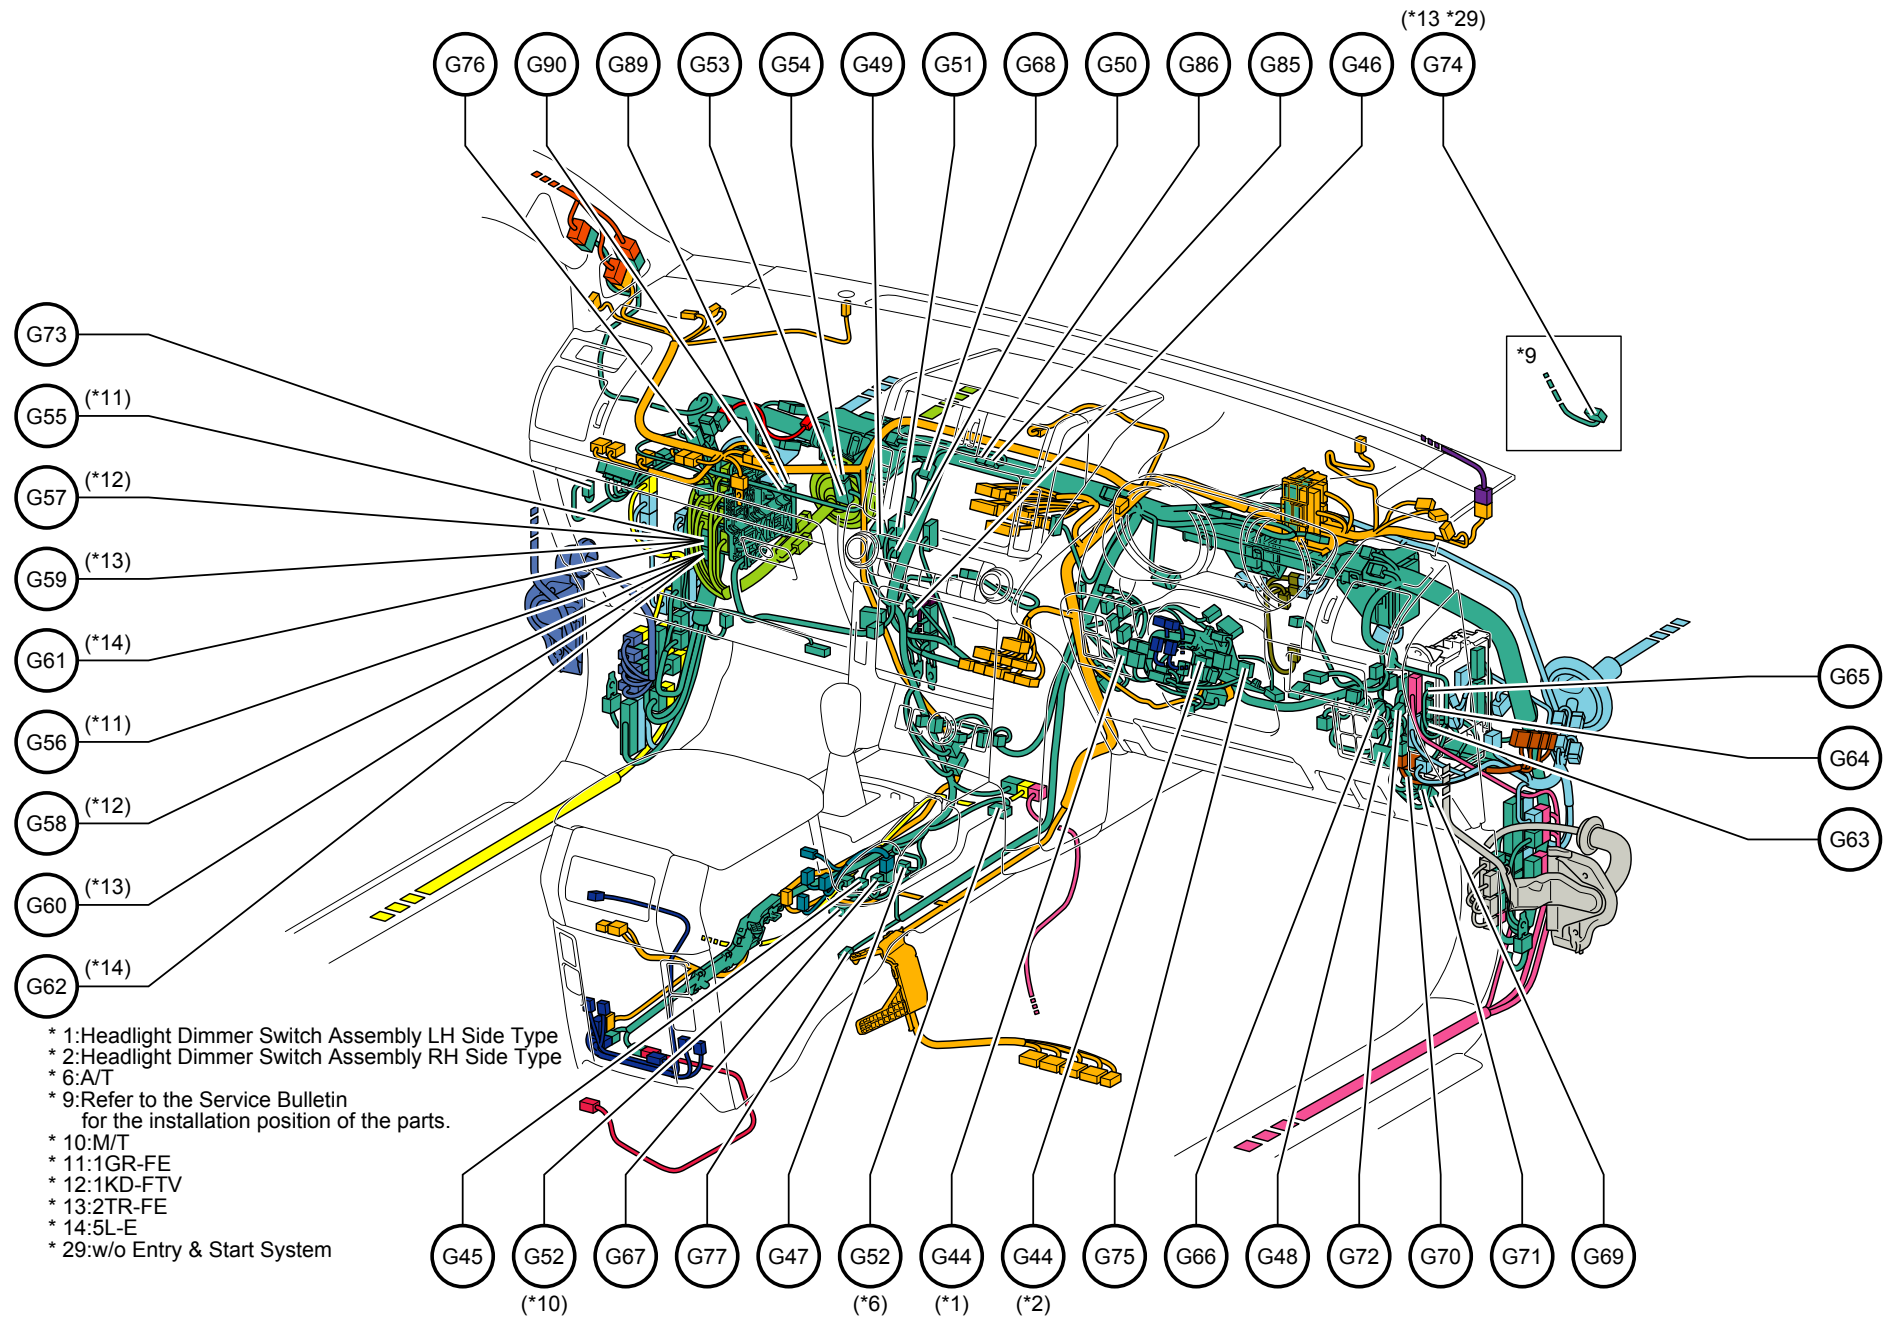


- G 44 Headlight Dimmer Switch Assembly
- G 45 Shift Lock Control ECU Sub-Assembly
- G 46 Power Steering ECU Assembly
- G 47 Transmission Control Switch
- G 48 DLC3
- G 49 Double Lock Door Control Relay Assembly
- G 50 Power Management Control ECU
- G 51 Power Management Control ECU
- G 52 Yaw Rate Sensor Assembly
- G 53 Four Wheel Drive Control ECU
- G 54 Four Wheel Drive Control ECU
- G 55 ECM
- G 56 ECM
- G 57 ECM
- G 58 ECM
- G 59 ECM
- G 60 ECM
- G 61 ECM
- G 62 ECM
- G 63 Main Body ECU
- G 64 Main Body ECU
- G 65 Main Body ECU
- G 66 Outer Mirror Heater Switch Assembly
- G 67 Shift Position Indicator (Console Box Assembly)
- G 68 Diode (Shift Position)
- G 69 Transmission Control ECU Assembly
- G 70 Transmission Control ECU Assembly
- G 71 Transmission Control ECU Assembly
- G 72 Headlight Cleaner Switch Assembly
- G 73 Airbag Cut Off Switch Cylinder Sub-Assembly
- G 74 Transponder Key ECU Assembly
- G 75 Transponder Key Amplifier
- G 76 Driving Support Switch Control ECU
- G 77 Parking Brake Switch Assembly
- G 85 Junction Connector
- G 86 Junction Connector
- G 89 Junction Connector
- G 90 Junction Connector

Position of Parts in Instrument Panel <RHD>


G 44
White

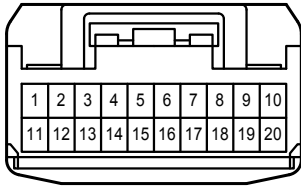


G 45
White

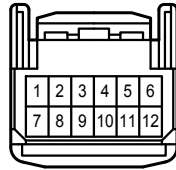


G 46
White

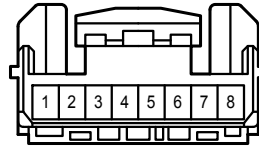


G 47
Black

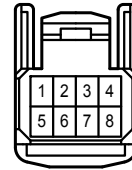


G 48
White

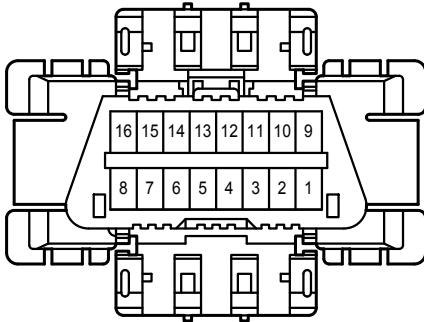


G 49
White




G 50
White

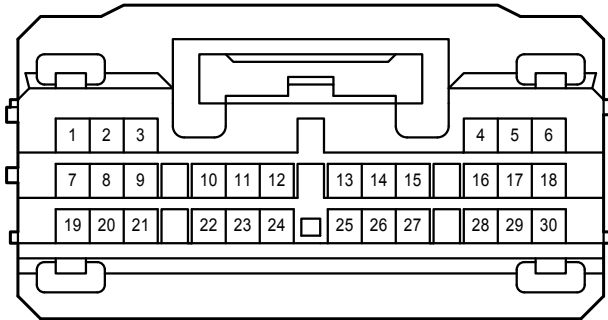


G 51
Black

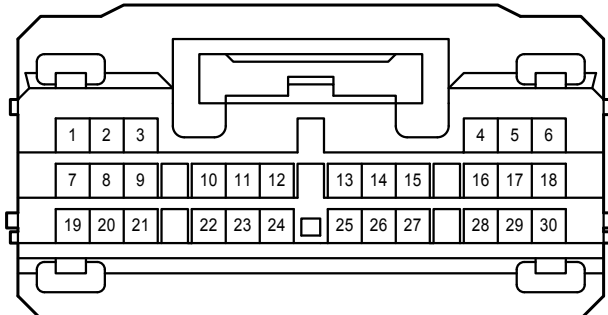


G 52
Black

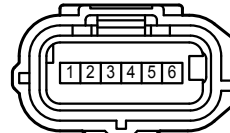


G 53
Black

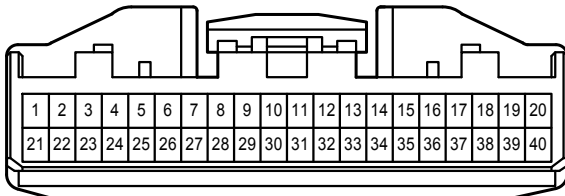


G 54
Black




G 55
White

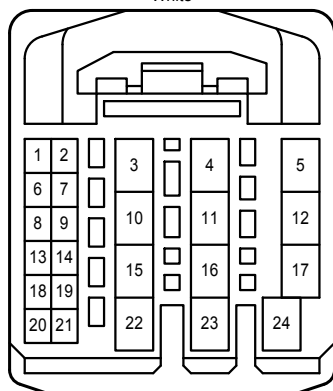


G 56
White

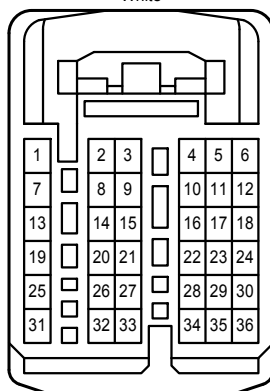


G 57
White

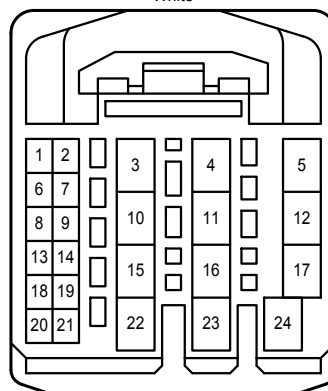


G 58
White

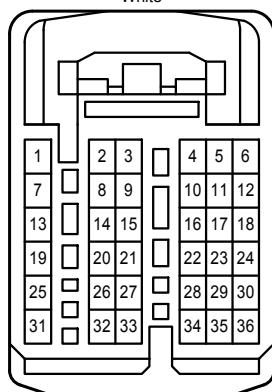


G 59
White

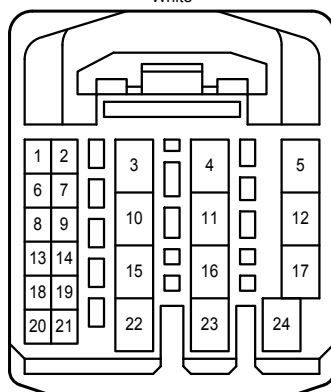

G 60
White

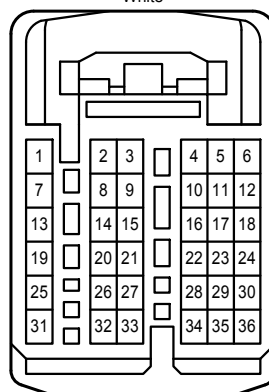


G 61
White

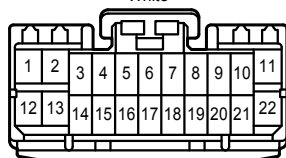


G 62
White




G 63
White

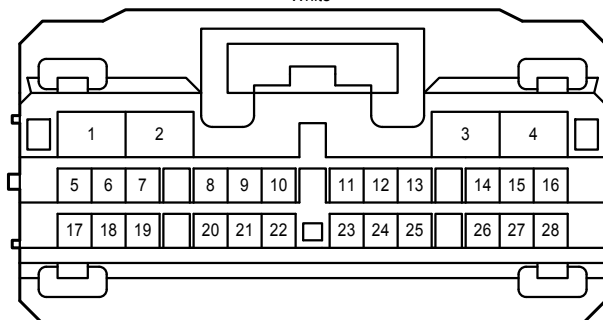

G 64
White

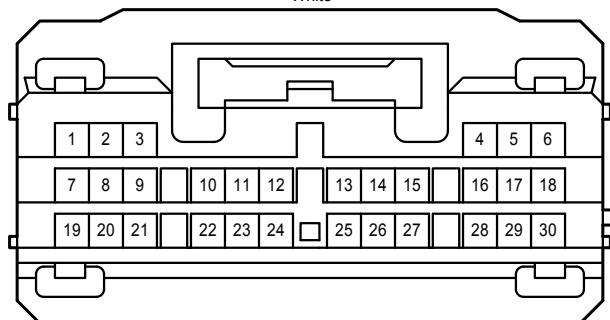

G 65
White

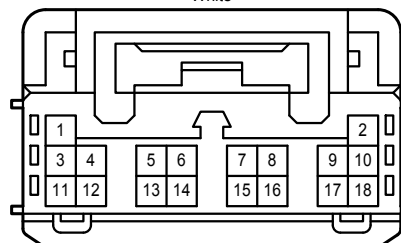

Position of Parts in Instrument Panel <RHD>

