


Position of Parts in Engine Compartment <LHD 2TR-FE>

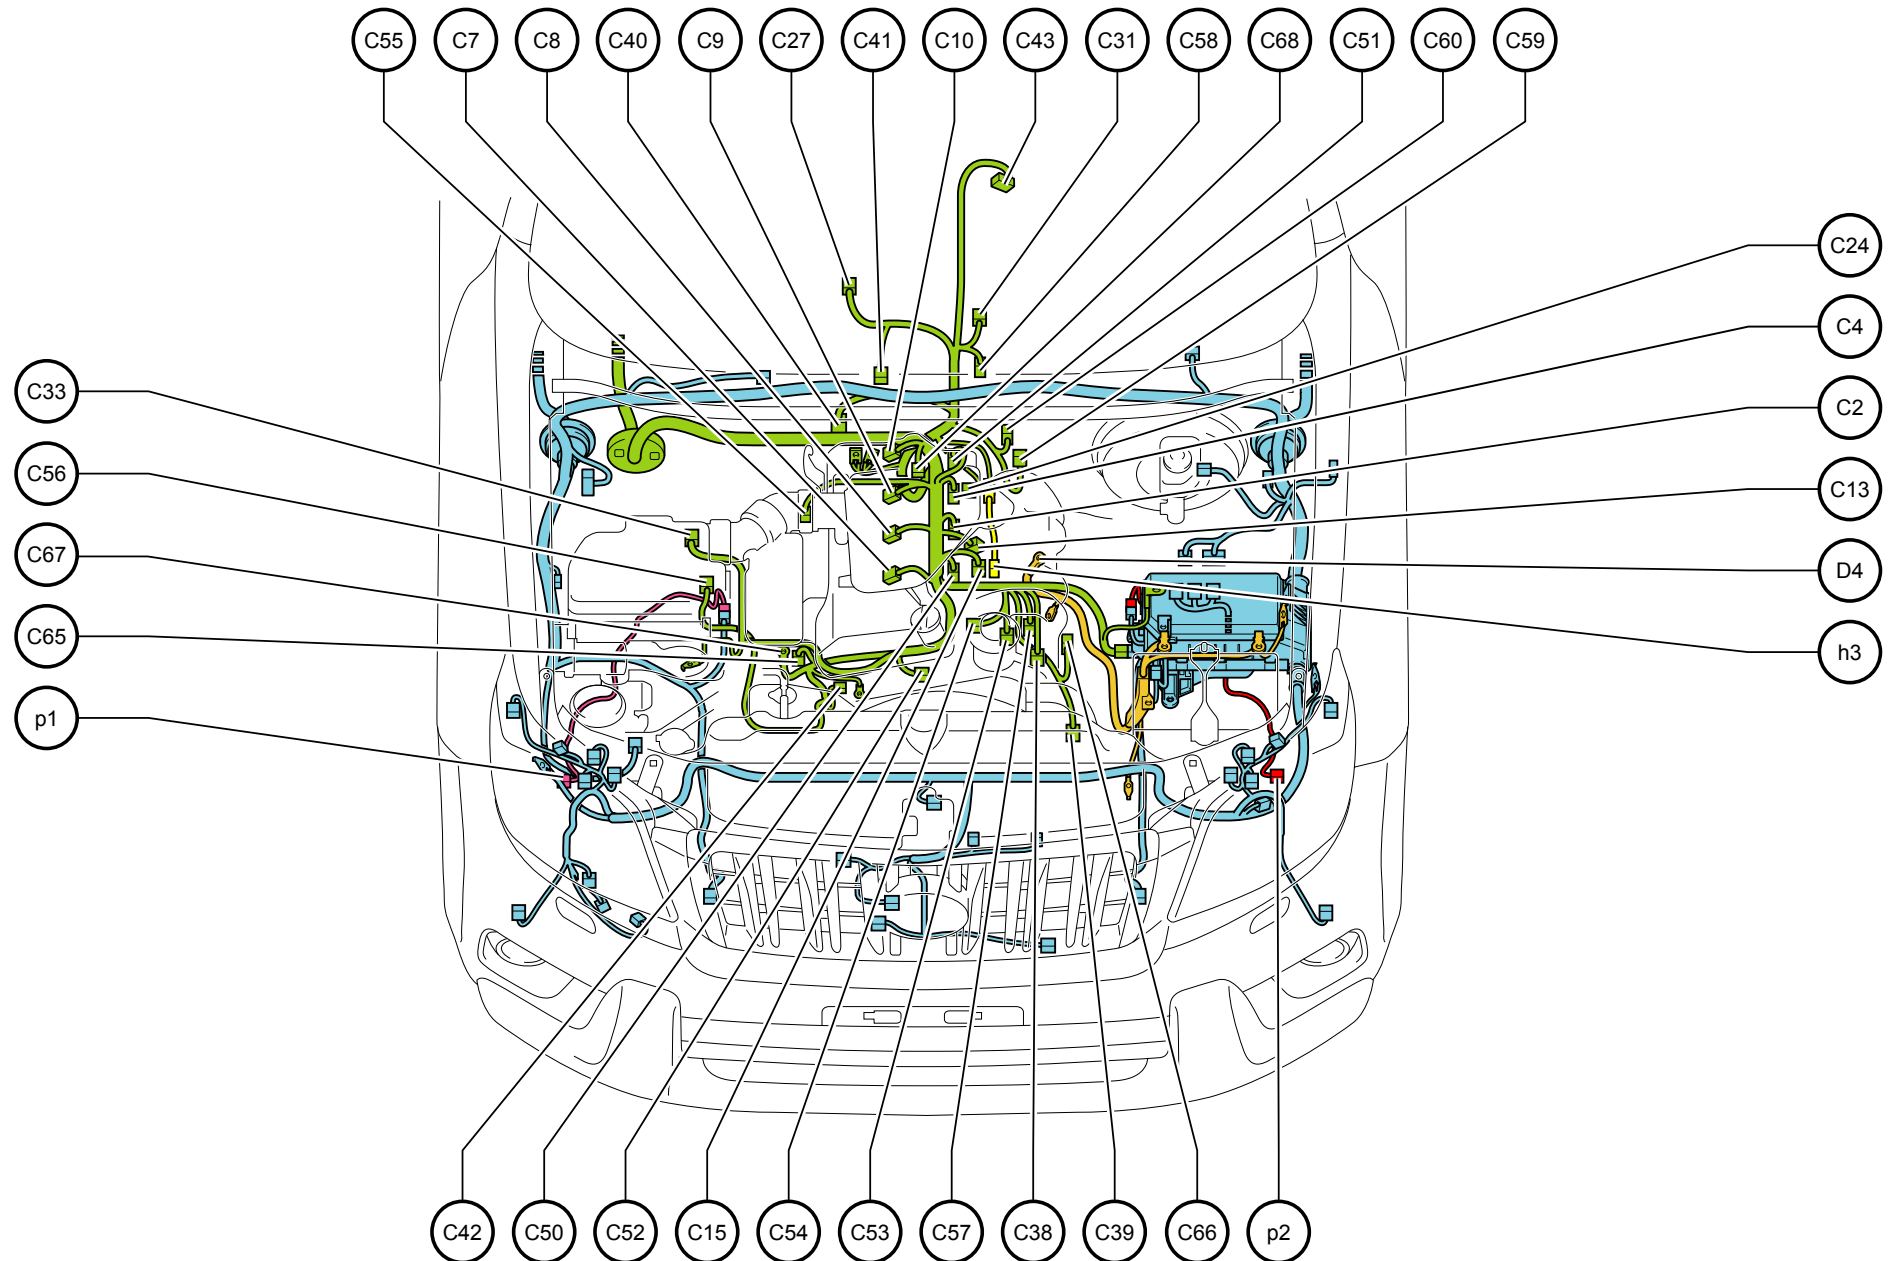

- C 2 Fuel Injector Assembly No. 2
- C 4 Fuel Injector Assembly No. 4
- C 7 Ignition Coil Assembly No. 1
- C 8 Ignition Coil Assembly No. 2
- C 9 Ignition Coil Assembly No. 3
- C 10 Ignition Coil Assembly No. 4
- C 13 Throttle Body Assembly
- C 15 Purge VSV
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 27 Oxygen Sensor (Bank 1 Sensor 2)
- C 31 Transmission Revolution Sensor (Counter Gear)
- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 38 Vane Pump Assembly
- C 39 Cooler Compressor Assembly
- C 40 Park/Neutral Position Switch
- C 41 Back-Up Light Switch Assembly
- C 42 Engine Oil Pressure Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 50 Fuel Injector Assembly No. 1
- C 51 Fuel Injector Assembly No. 3
- C 52 Cam Position Sensor
- C 53 Crank Position Sensor
- C 54 Cam Timing Oil Control Valve (Bank 1)
- C 55 Air Switching Valve Assembly
- C 56 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 57 Power Steering Oil Pressure Switch
- C 58 Electronically Controlled Transmission Solenoid
- C 59 Transmission Revolution Sensor (Turbine)
- C 60 Temperature Sensor
- C 65 Generator Assembly
- C 66 Starter Assembly
- C 67 Generator Assembly
- C 68 Noise Filter (Ignition)
  
- D 4 Starter Assembly
  
- h 3 Knock Control Sensor (Bank 1)
  
- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

Position of Parts in Engine Compartment <LHD 2TR-FE>

