
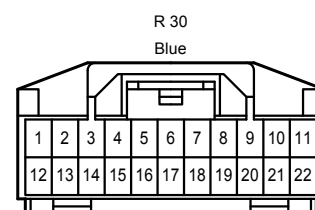
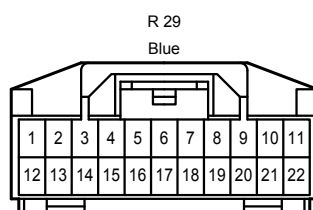
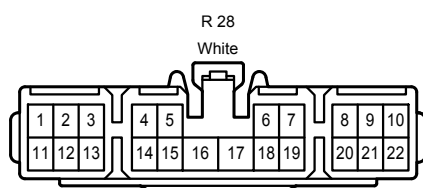
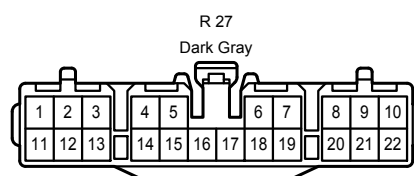
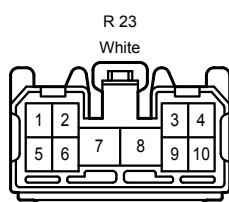
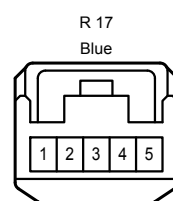
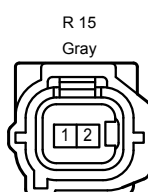
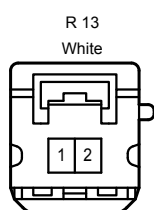

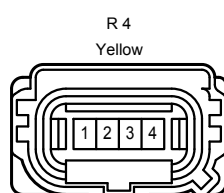




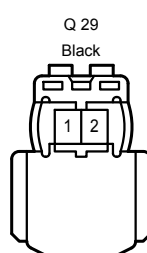
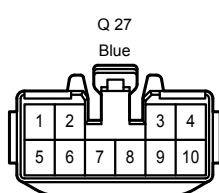
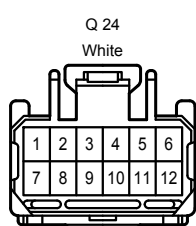
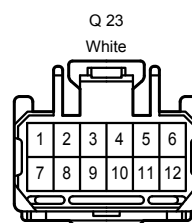
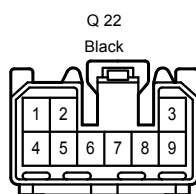
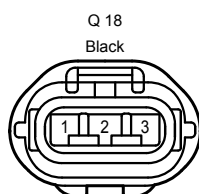

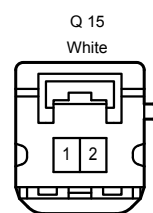
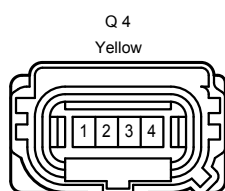



Q 2 Front Seat Outer Belt Assembly RH  
 Q 3 Front Seat Outer Belt Assembly RH  
 Q 4 Rear Side Airbag Sensor Assembly RH  
 Q 8 Front Door Courtesy Light Switch Assembly RH  
 Q 15 Rear Header Speaker Assembly RH  
 Q 16 Rear Power Point Socket Assembly  
 Q 18 Theft Warning Siren Assembly  
 Q 22 Power Outlet Socket  
 Q 23 Junction Connector  
 Q 24 Junction Connector  
 Q 27 Voltage Inverter Assembly  
 Q 29 Curtain Shield Airbag Assembly RH  
 Q 30 No. 1 Speaker with Box Assembly  
 Q 31 Rear Combination Light Assembly RH  
 Q 32 Rear Speaker Set RH

R 2 Front Seat Outer Belt Assembly LH  
 R 3 Front Seat Outer Belt Assembly LH  
 R 4 Rear Side Airbag Sensor Assembly LH  
 R 7 Front Door Courtesy Light Switch Assembly LH  
 R 9 Back Door Courtesy Light Switch Assembly  
 R 13 Rear Header Speaker Assembly LH  
 R 15 No. 3 Indoor Electrical Key Antenna Assembly  
 R 16 Outside Luggage Electrical Key Antenna  
 R 17 Door Control Receiver  
 R 22 Rear Combination Light Assembly LH  
 R 23 Trailer Socket  
 R 27 Junction Connector  
 R 28 Junction Connector  
 R 29 Junction Connector  
 R 30 Junction Connector  
 R 31 Junction Connector  
 R 35 Curtain Shield Airbag Assembly LH  
 R 37 Rear Speaker Set LH  
 R 39 Fuel Tank Sub-Assembly  
 R 40 Fuel Sender Gauge Assembly

# Position of Parts in Body <RHD 3-Door>



Position of Parts in Body <RHD 3-Door>

---

