


Position of Parts in Engine Compartment <RHD 1KD-FTV>

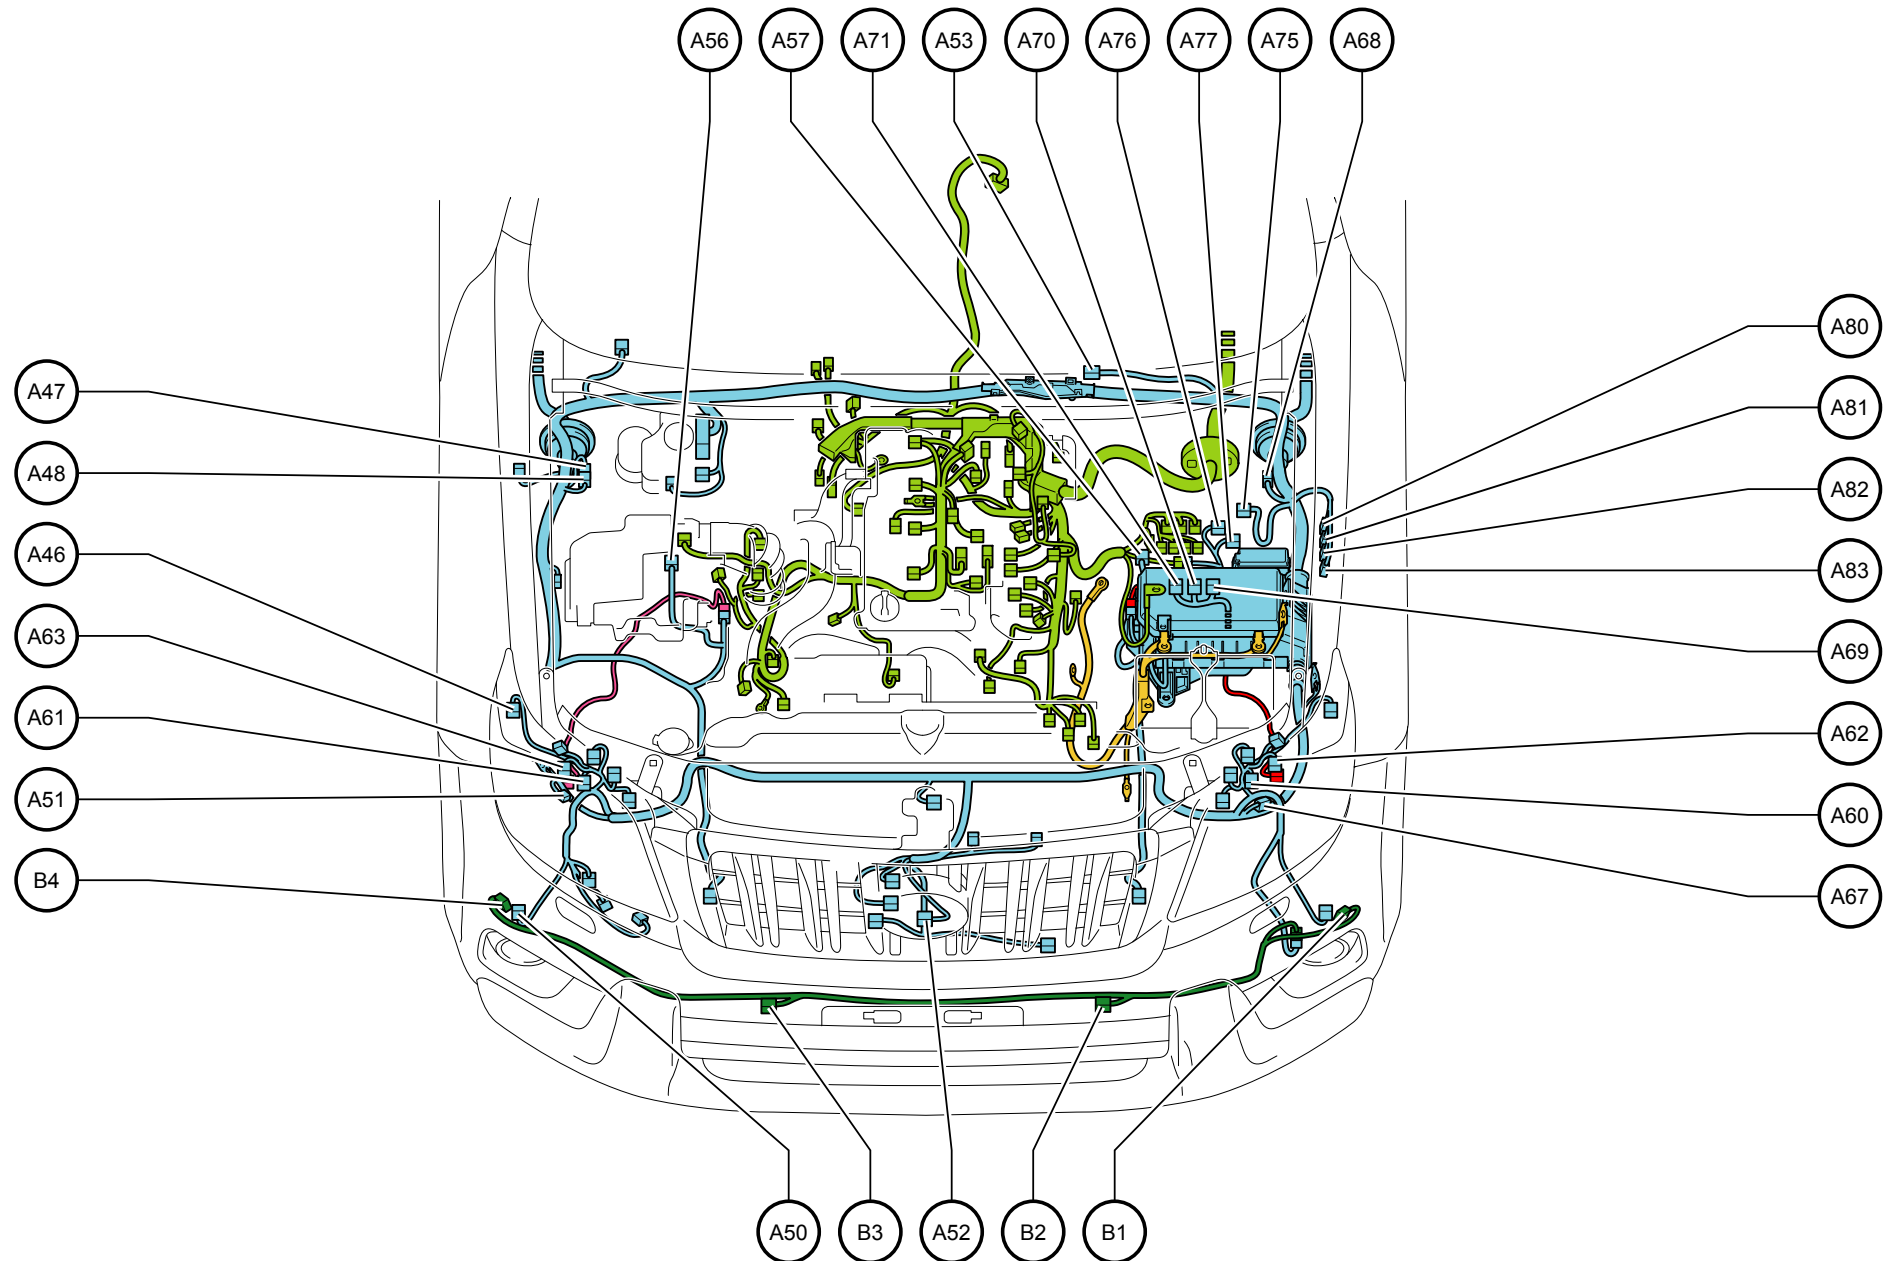

- A 46 Headlight Assembly RH
- A 47 Short Connector
- A 48 Short Connector
- A 50 Fog Light Assembly RH
- A 51 Noise Filter (Condenser Fan)
- A 52 Front Television Camera Assembly
- A 53 Front Wiper Deicer (Windshield Glass)
- A 56 Front Absorber Control Actuator RH
- A 57 Front Absorber Control Actuator LH
- A 60 Headlight Assembly LH
- A 61 Headlight Assembly RH
- A 62 Headlight Assembly LH
- A 63 Headlight Assembly RH
- A 67 Junction Connector
- A 68 Junction Connector
- A 69 Junction Connector
- A 70 Junction Connector
- A 71 Junction Connector
- A 75 Fuel Filter Warning Switch
- A 76 Level Warning Switch (Fuel Filter Assembly)
- A 77 Fuel Heater Assembly
- A 80 Glow Plug Controller
- A 81 Glow Plug Controller
- A 82 Glow Plug Controller
- A 83 Glow Plug Controller

- B 1 Front No. 1 Ultrasonic Sensor LH
- B 2 Front No. 1 Ultrasonic Sensor Center LH
- B 3 Front No. 1 Ultrasonic Sensor Center RH
- B 4 Front No. 1 Ultrasonic Sensor RH

