

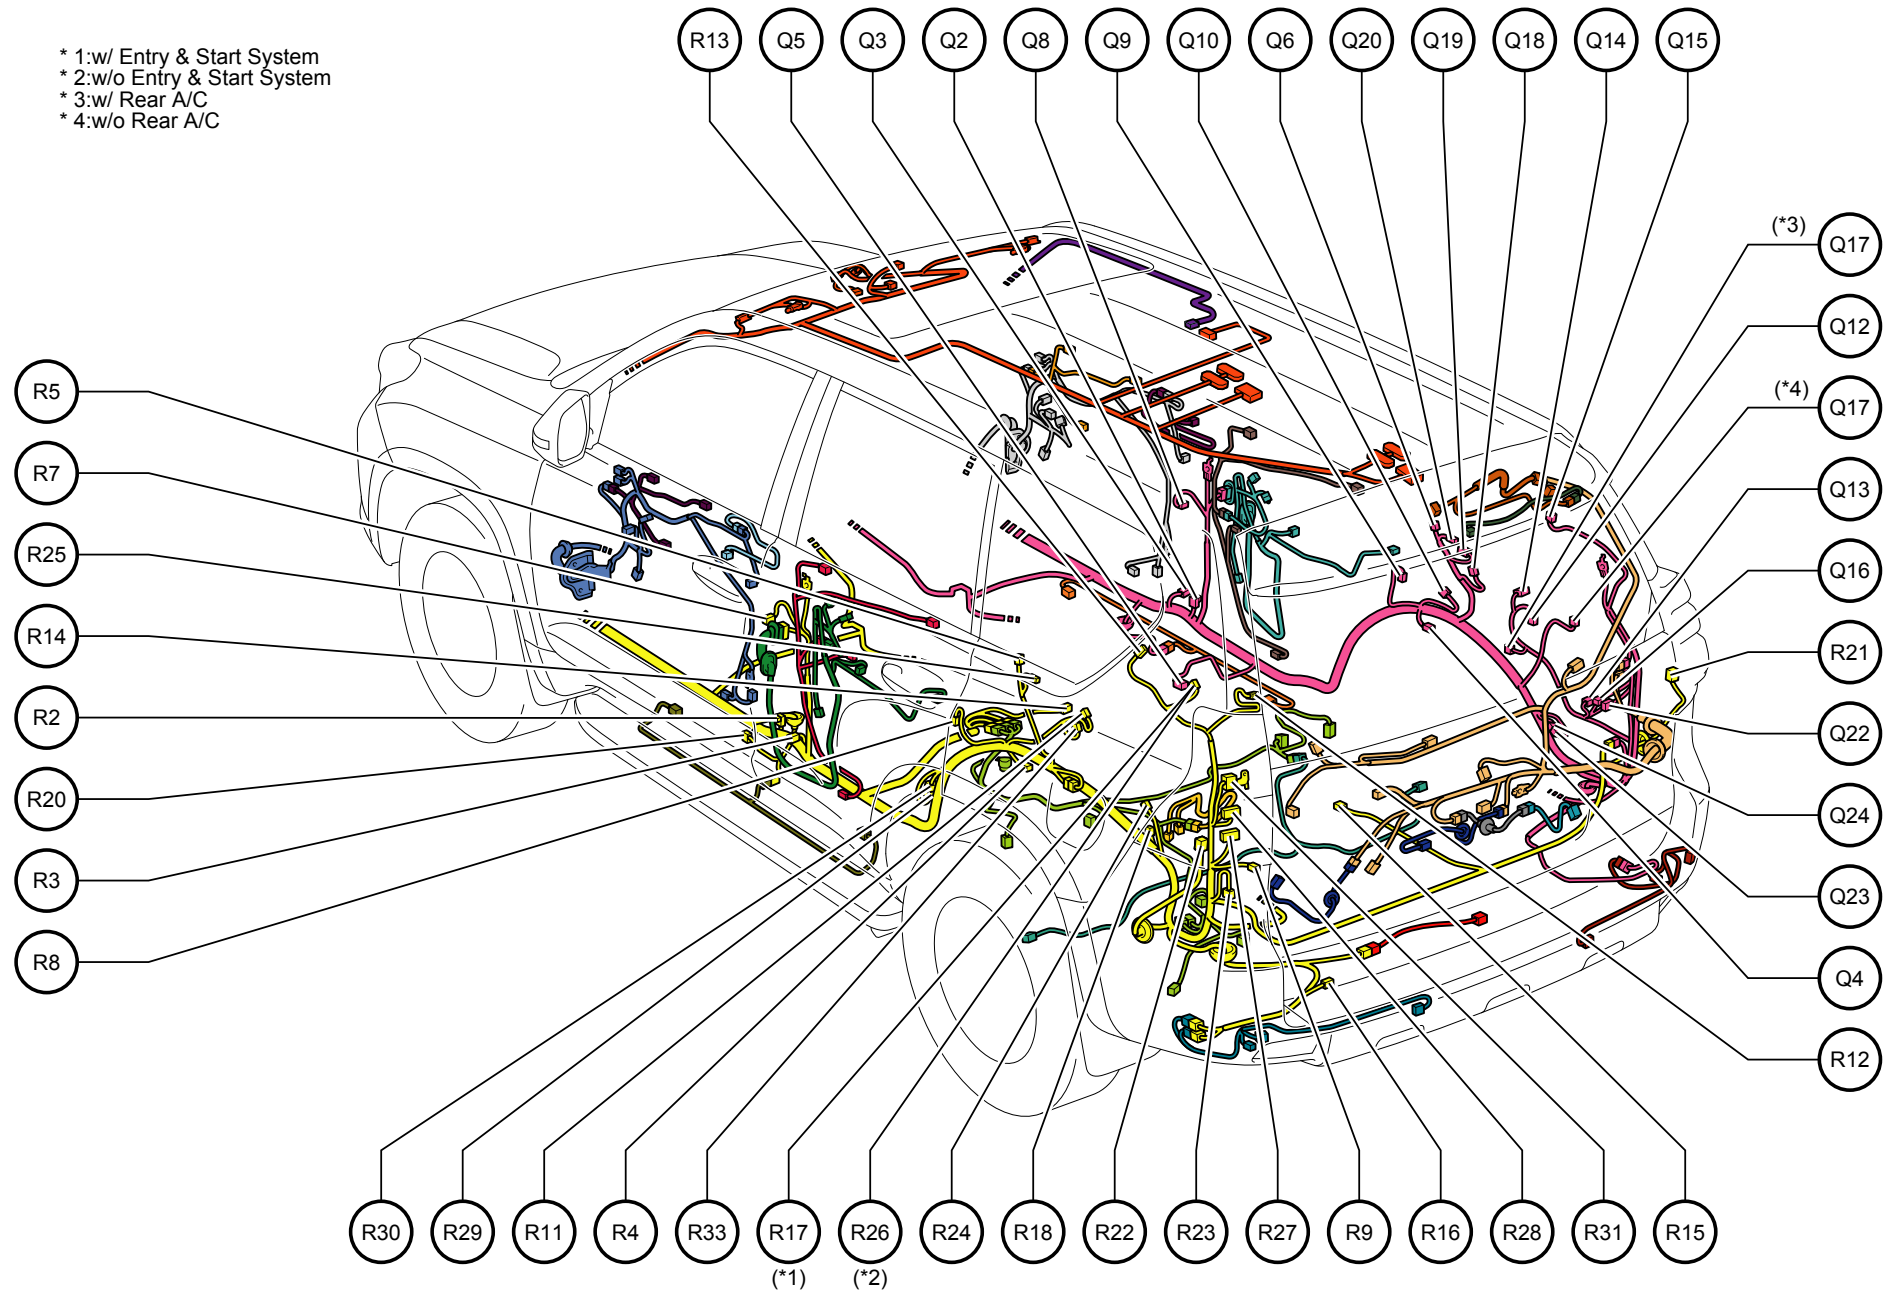
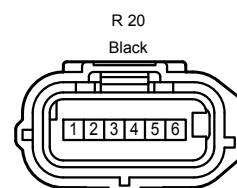
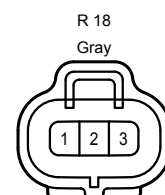
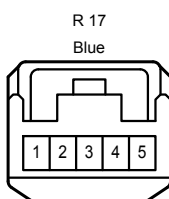
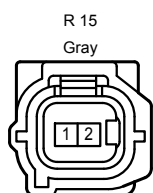
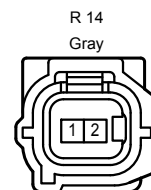
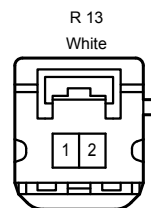
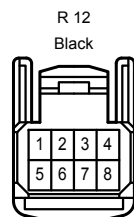
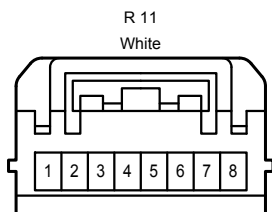



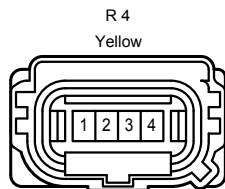


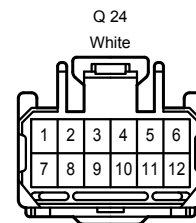
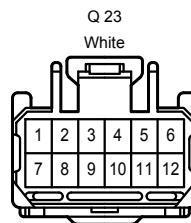
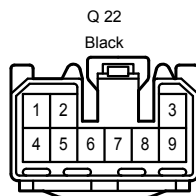

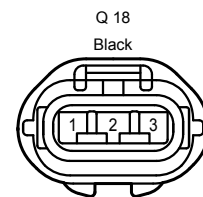
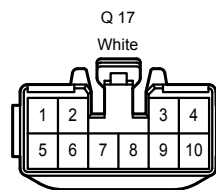

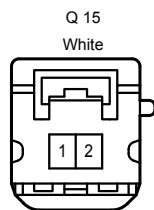
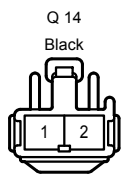
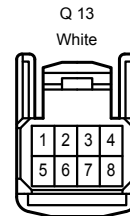
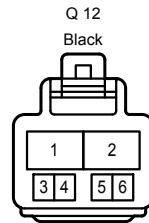
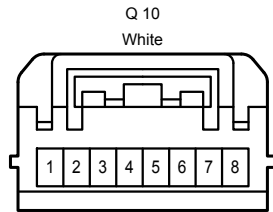

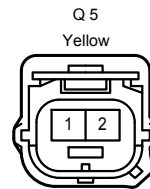
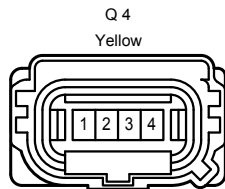


Position of Parts in Body <RHD 5-Door>



- Q 2 Front Seat Outer Belt Assembly RH
- Q 3 Front Seat Outer Belt Assembly RH
- Q 4 Rear Side Airbag Sensor Assembly RH
- Q 5 Rear Floor Side Airbag Sensor
- Q 6 Curtain Shield Airbag Assembly RH
- Q 8 Front Door Courtesy Light Switch Assembly RH
- Q 9 Rear Door Courtesy Light Switch Assembly RH
- Q 10 Rear Power Seat Switch RH
- Q 12 Rear Blower with Fan Motor Sub-Assembly
- Q 13 Rear A/C Blower Assembly
- Q 14 Rear Blower with Fan Motor Sub-Assembly
- Q 15 Rear Header Speaker Assembly RH
- Q 16 Rear Power Point Socket Assembly
- Q 17 Voltage Inverter Assembly
- Q 18 Theft Warning Siren Assembly
- Q 19 Rear No. 1 Cooler Thermistor
- Q 20 Glass Breakage Sensor RH (Quarter Glass RH)
- Q 22 Power Outlet Socket
- Q 23 Junction Connector
- Q 24 Junction Connector
  
- R 2 Front Seat Outer Belt Assembly LH
- R 3 Front Seat Outer Belt Assembly LH
- R 4 Rear Side Airbag Sensor Assembly LH
- R 5 Curtain Shield Airbag Assembly LH
- R 7 Front Door Courtesy Light Switch Assembly LH
- R 8 Rear Door Courtesy Light Switch Assembly LH
- R 9 Back Door Courtesy Light Switch Assembly
- R 11 Rear Power Seat Switch LH
- R 12 No. 2 Fold Seat Switch Assembly
- R 13 Rear Header Speaker Assembly LH
- R 14 No. 2 Indoor Electrical Key Antenna Assembly
- R 15 No. 3 Indoor Electrical Key Antenna Assembly
- R 16 Outside Luggage Electrical Key Antenna
- R 17 Door Control Receiver
- R 18 Rear Acceleration Sensor Assembly
- R 20 Stabilizer Control with Accumulator Housing Assembly
- R 21 Rear Combination Light Assembly RH
- R 22 Rear Combination Light Assembly LH
- R 23 Trailer Socket
- R 24 No. 1 Speaker with Box Assembly
- R 25 Glass Breakage Sensor LH (Quarter Glass LH)
- R 26 Door Control Receiver
- R 27 Junction Connector
- R 28 Junction Connector
- R 29 Junction Connector
- R 30 Junction Connector
- R 31 Junction Connector
- R 33 No. 1 Fold Seat Switch Assembly

Position of Parts in Body <RHD 5-Door>



Position of Parts in Body <RHD 5-Door>


R 21  
Blue




R 22  
Blue




R 23  
White

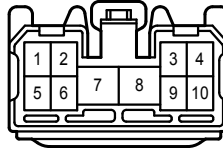


R 24  
White

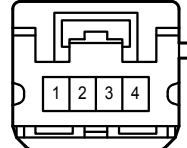


R 25  
White




R 26  
White

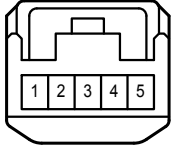


R 27  
Dark Gray

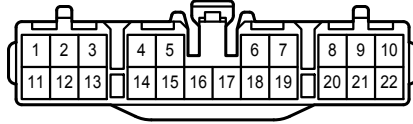


R 28  
White

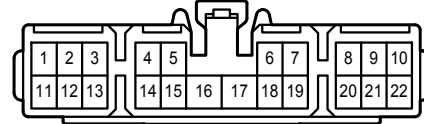


R 29  
Blue

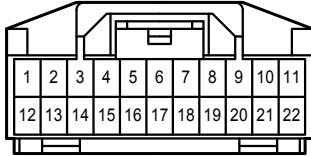

R 30  
Blue

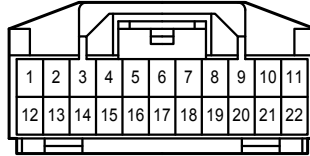

R 31  
White

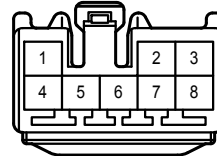

R 33  
Black

