


Position of Parts in Body <LHD 3-Door>



























* 1:w/ Entry & Start System
 * 2:w/o Entry & Start System

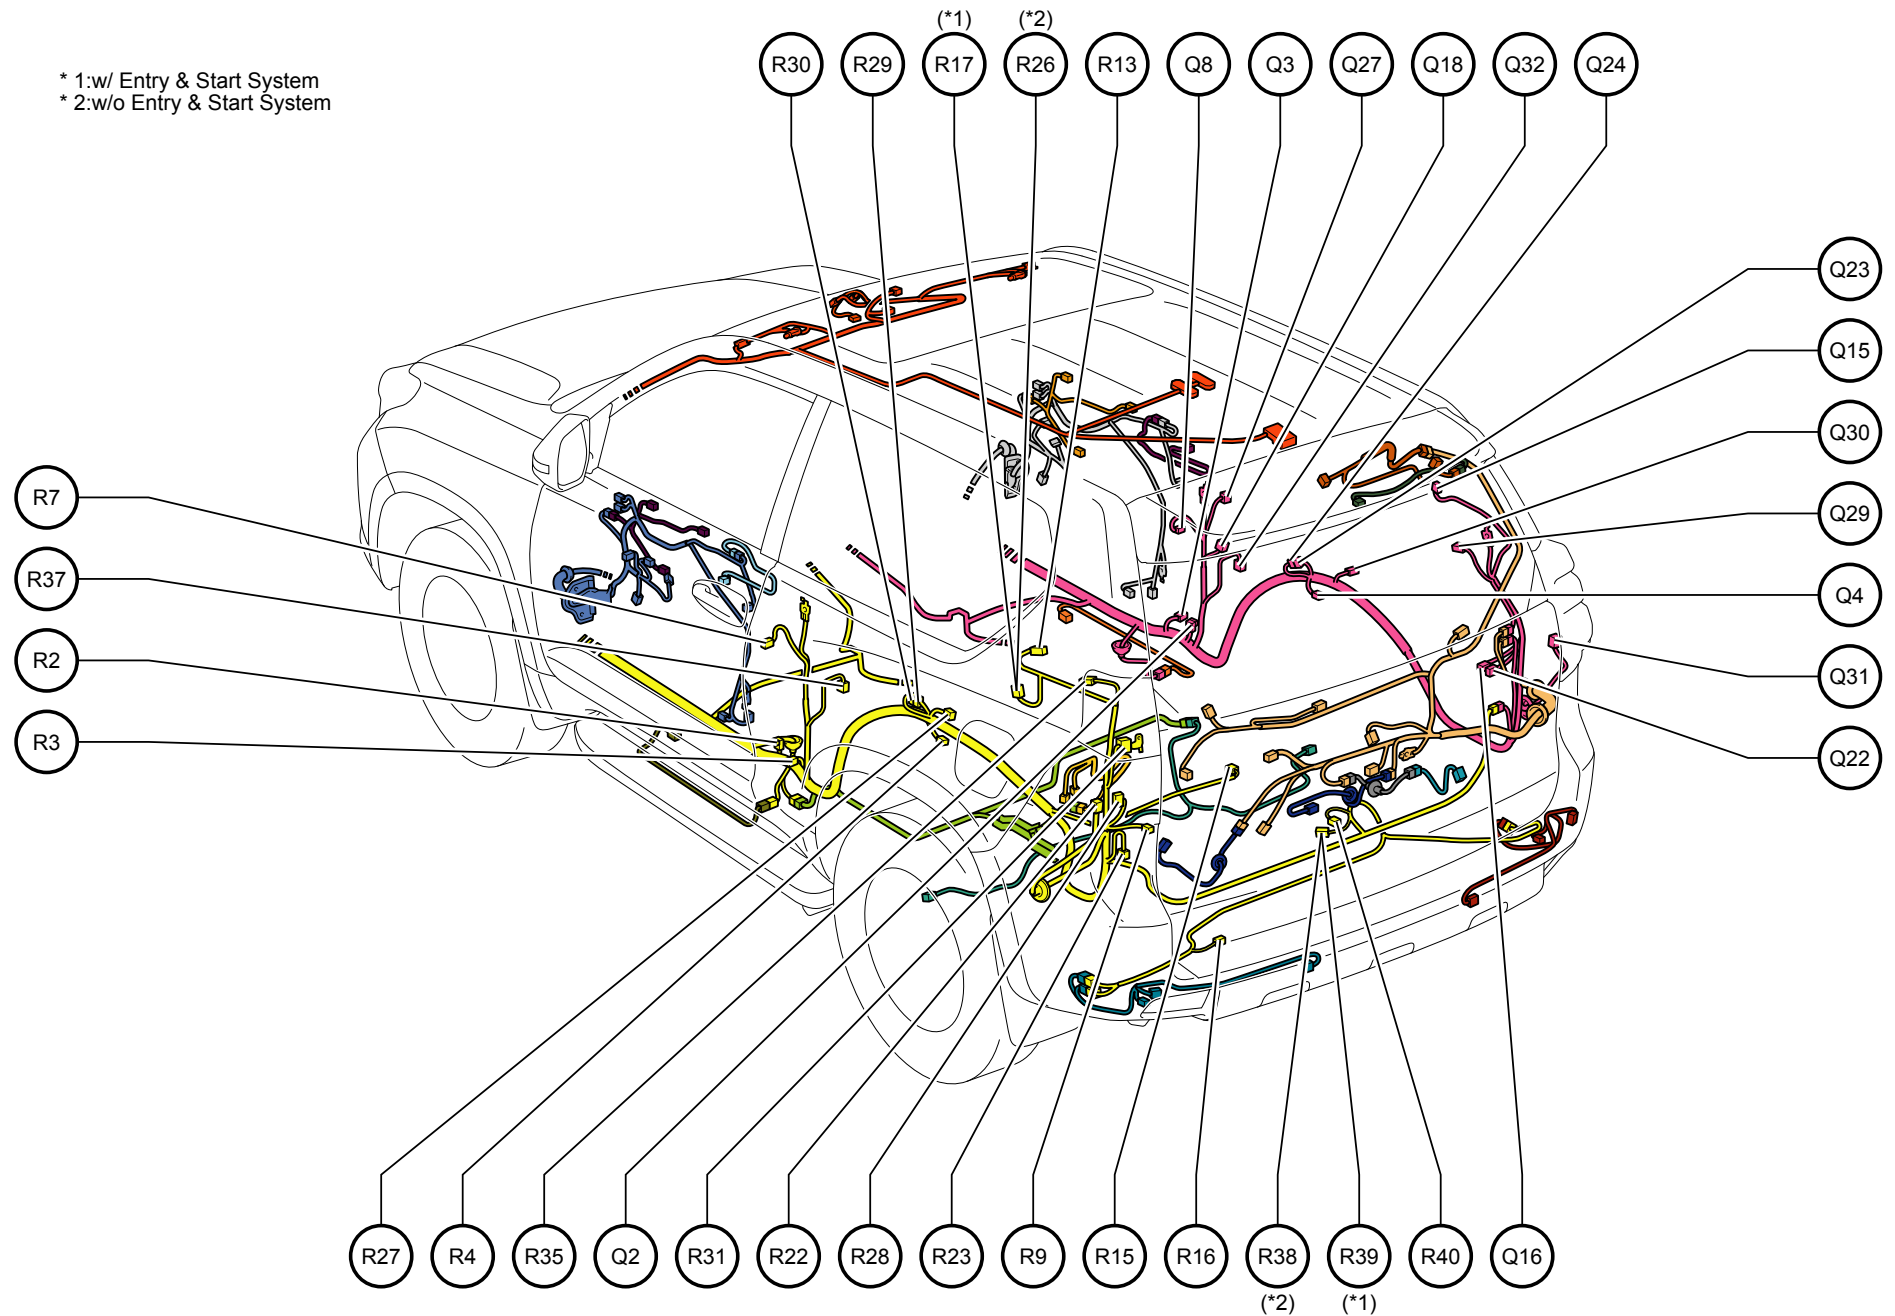

Q 2 Front Seat Outer Belt Assembly RH
Q 3 Front Seat Outer Belt Assembly RH
Q 4 Rear Side Airbag Sensor Assembly RH
Q 8 Front Door Courtesy Light Switch Assembly RH
Q 15 Rear Header Speaker Assembly RH
Q 16 Rear Power Point Socket Assembly
Q 18 Theft Warning Siren Assembly
Q 22 Power Outlet Socket
Q 23 Junction Connector
Q 24 Junction Connector
Q 27 Voltage Inverter Assembly
Q 29 Curtain Shield Airbag Assembly RH
Q 30 No. 1 Speaker with Box Assembly
Q 31 Rear Combination Light Assembly RH
Q 32 Rear Speaker Set RH

R 2 Front Seat Outer Belt Assembly LH
R 3 Front Seat Outer Belt Assembly LH
R 4 Rear Side Airbag Sensor Assembly LH
R 7 Front Door Courtesy Light Switch Assembly LH
R 9 Back Door Courtesy Light Switch Assembly
R 13 Rear Header Speaker Assembly LH
R 15 No. 3 Indoor Electrical Key Antenna Assembly
R 16 Outside Luggage Electrical Key Antenna
R 17 Door Control Receiver
R 22 Rear Combination Light Assembly LH
R 23 Trailer Socket
R 26 Door Control Receiver
R 27 Junction Connector
R 28 Junction Connector
R 29 Junction Connector
R 30 Junction Connector
R 31 Junction Connector
R 35 Curtain Shield Airbag Assembly LH
R 37 Rear Speaker Set LH
R 38 Fuel Pump
R 39 Fuel Tank Sub-Assembly
R 40 Fuel Sender Gauge Assembly

Position of Parts in Body <LHD 3-Door>

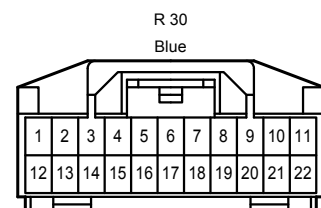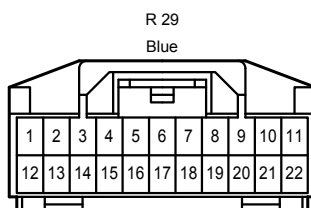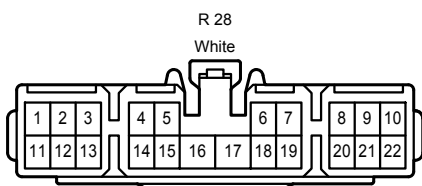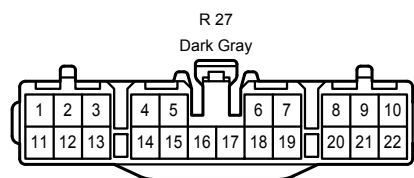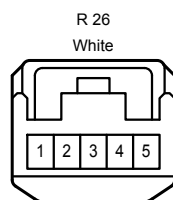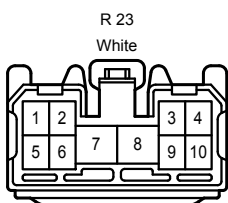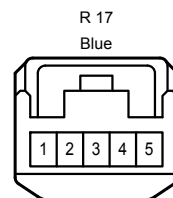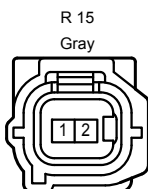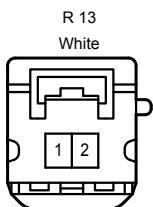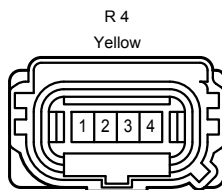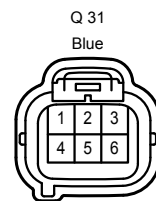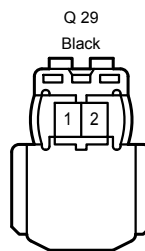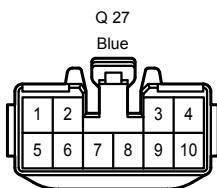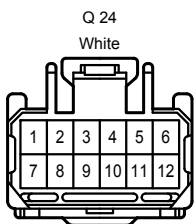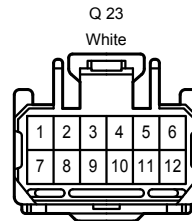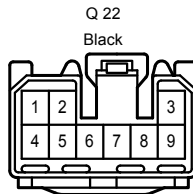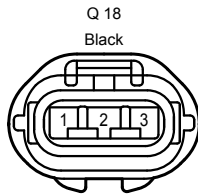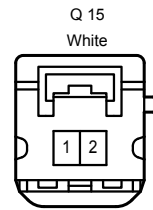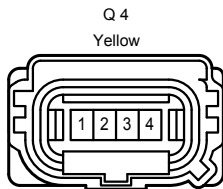

Position of Parts in Body <LHD 3-Door>

