


Position of Parts in Engine Compartment <LHD 1KD-FTV>

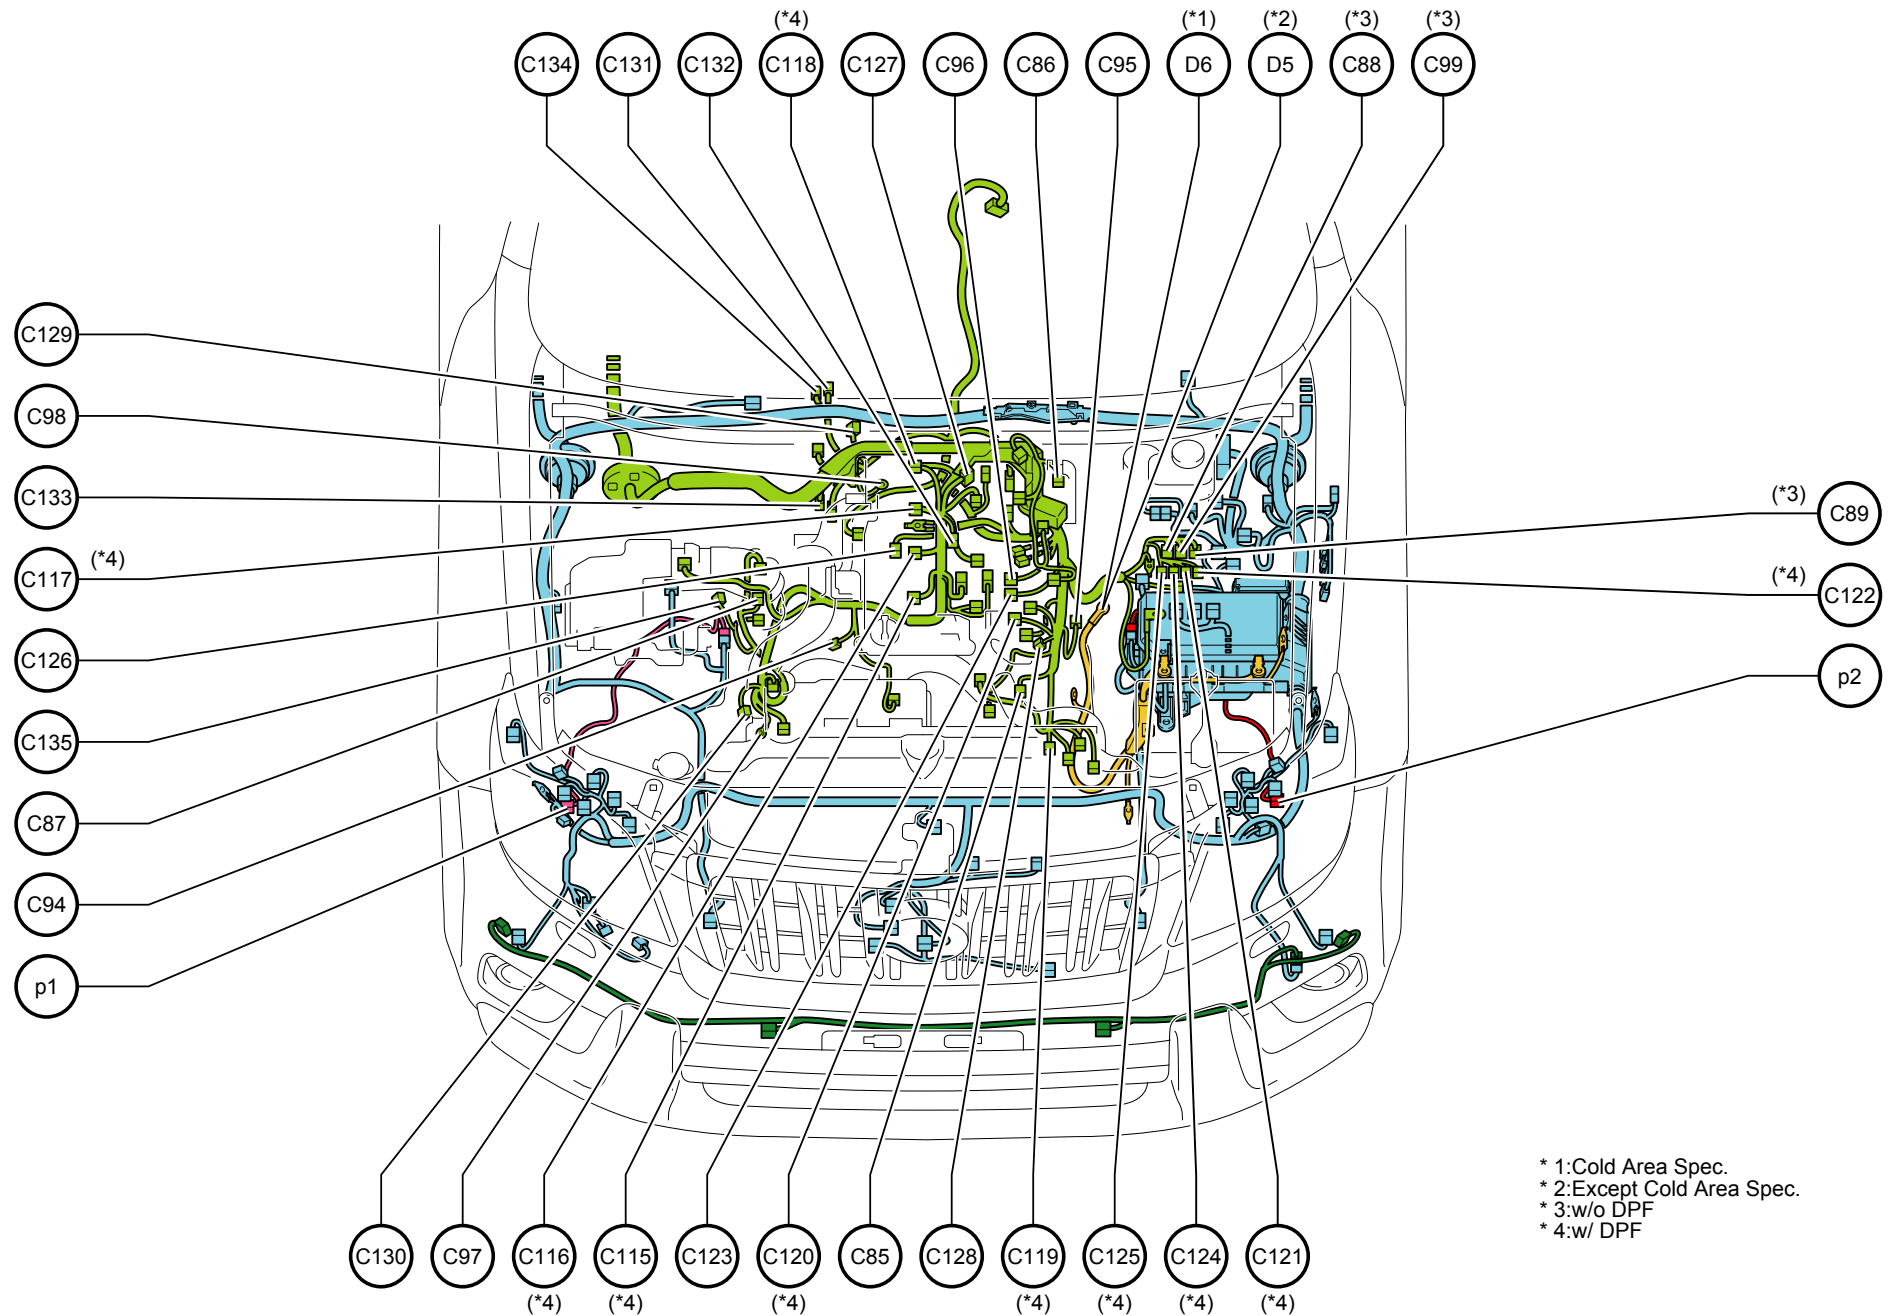

- C 85 Fuel Temperature Sensor
- C 86 Electric EGR Control Valve Sensor
- C 87 Nozzle Vane Position Sensor
- C 88 Injector Driver
- C 89 Injector Driver
- C 94 Viscous with Magnet Clutch Heater Assembly
- C 95 Starter Assembly
- C 96 Engine Oil Pressure Switch Assembly
- C 97 Generator Assembly
- C 98 Glow Plug Assembly
- C 99 Injector Driver
- C 115 Fuel Injector Assembly No. 1
- C 116 Fuel Injector Assembly No. 2
- C 117 Fuel Injector Assembly No. 3
- C 118 Fuel Injector Assembly No. 4
- C 119 Crank Position Sensor
- C 120 No. 2 EGR Valve Assembly
- C 121 Injector Driver
- C 122 Injector Driver
- C 123 Oil Pressure Sender Gage Assembly
- C 124 Injector Driver
- C 125 Injector Driver
- C 126 Exhaust Fuel Addition Injector Assembly
- C 127 Electric EGR Control Valve Assembly
- C 128 VSV (for EGR Cooler)
- C 129 Differential Pressure Sensor Assembly
- C 130 Oil Pressure Switching Valve Assembly
- C 131 Air Fuel Ratio Sensor
- C 132 Glow Plug Assembly
- C 133 No. 2 Exhaust Gas Temperature Sensor
- C 134 No. 3 Exhaust Gas Temperature Sensor
- C 135 No. 1 Exhaust Gas Temperature Sensor

- D 5 Starter Assembly
- D 6 Starter Assembly

- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

Position of Parts in Engine Compartment <LHD 1KD-FTV>


C 85
Dark Gray



C 86
Black




C 87
Black

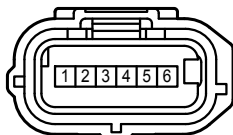

C 88
Dark Gray



C 89
Gray

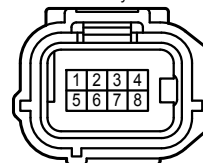

C 94
Gray



C 95
Black



C 96
Black



C 97




C 98




C 99
Black




C115
Black

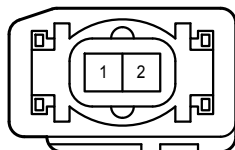


C116
Gray

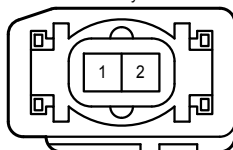

C117
Black

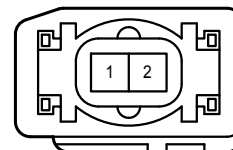


C118
Gray

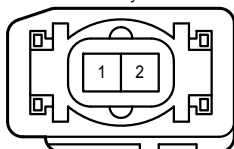

C119
Dark Gray



C120
Blue

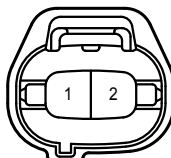


C121
Black




C122
Black



C123
Black

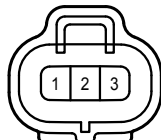

C124
Black

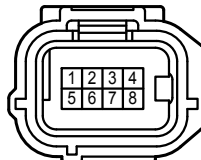

C125
Black




C126
Black



C127
Black




C128
Brown

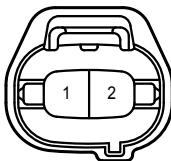

C129
Black



C130
Black

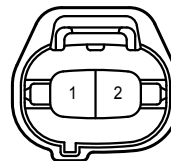

C131
Dark Gray



C132
Black



C133
Black



C134
Dark Gray



C135
Dark Gray



