


Position of Parts in Seat <LHD Front Seat w/ Power Seat>

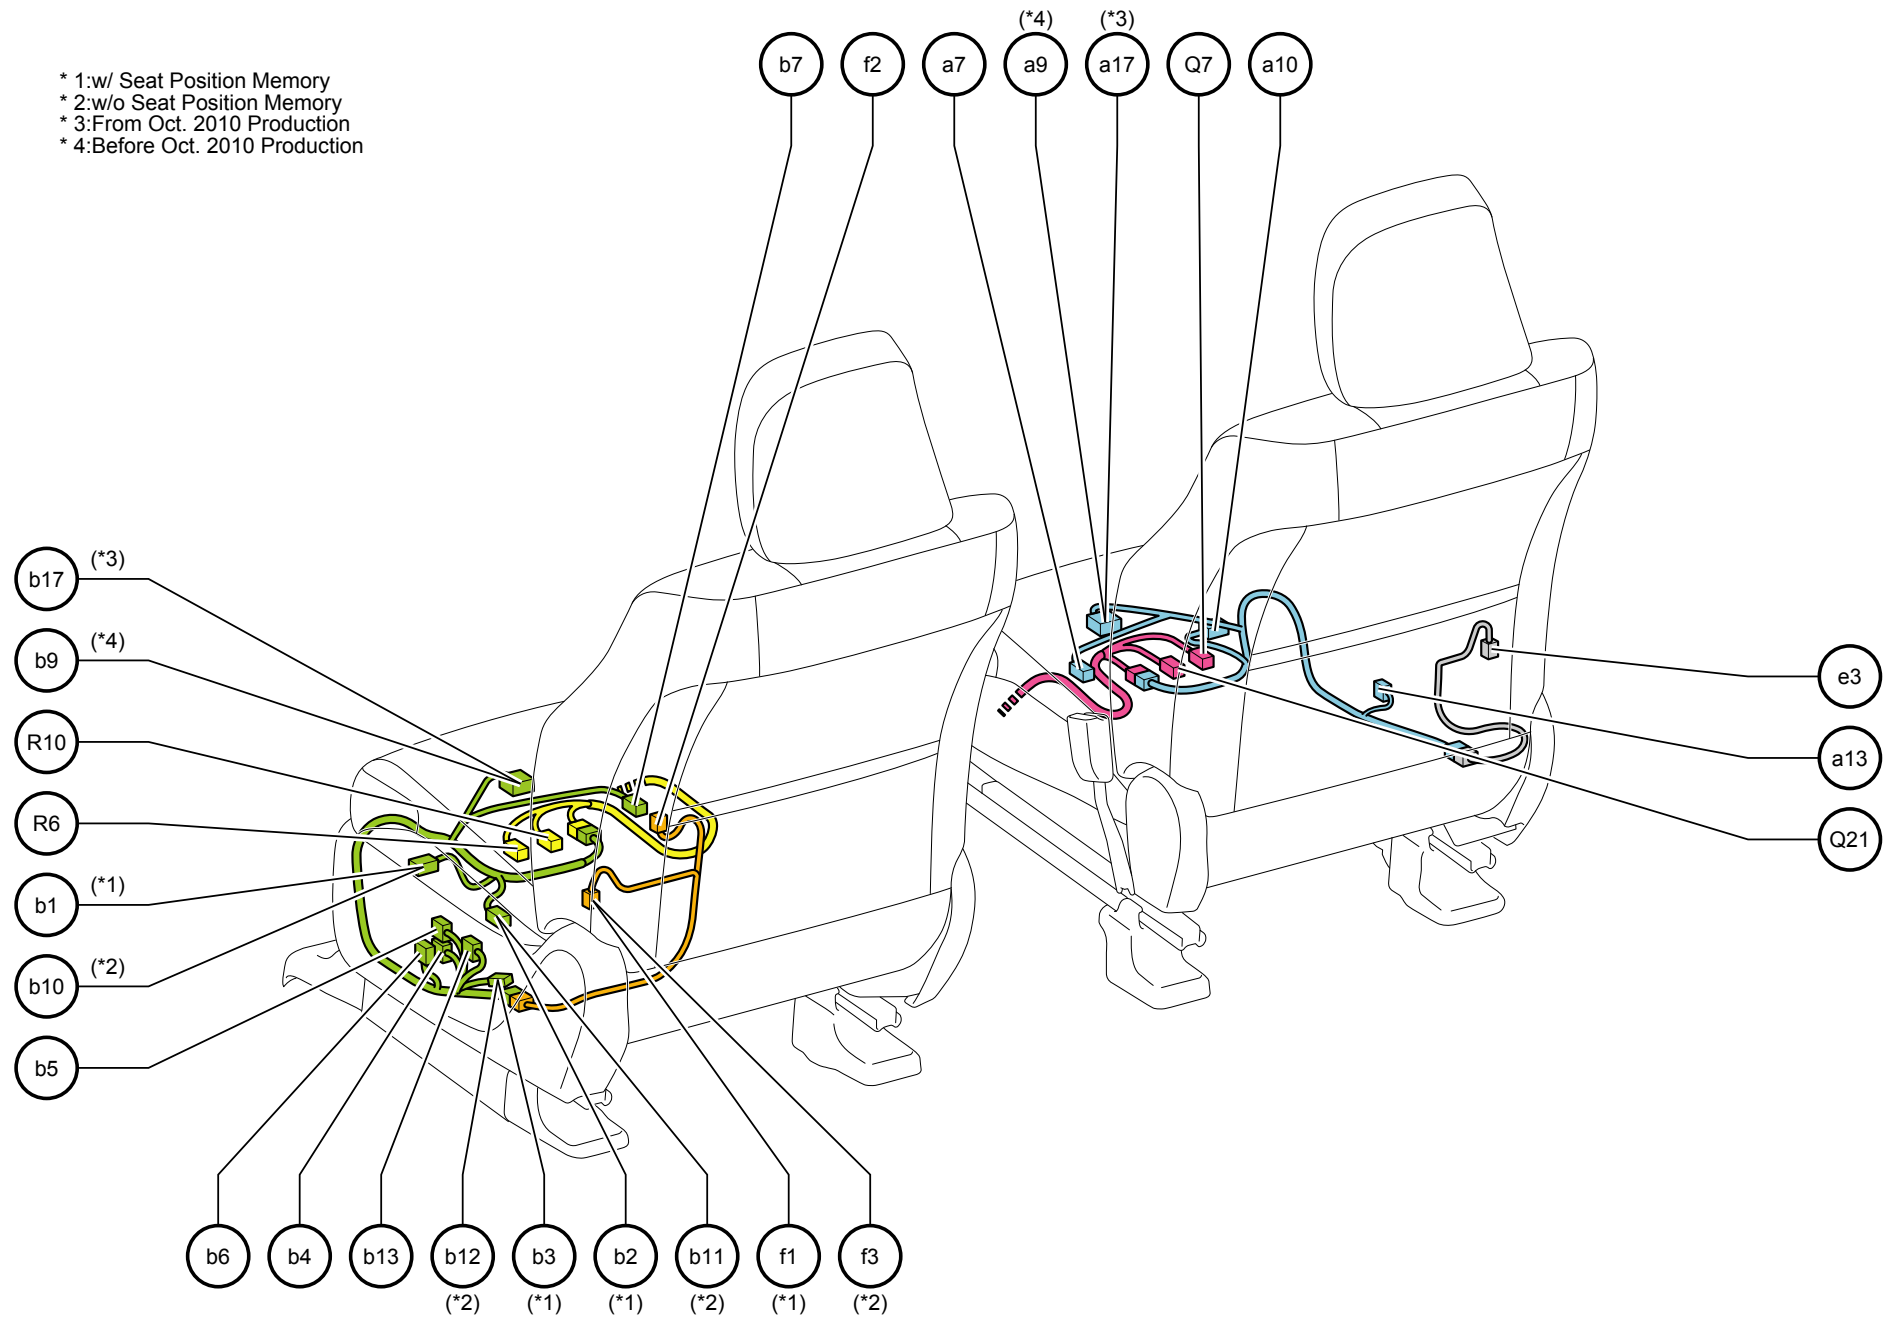

Q 7 Front Side Airbag Squib Circuit RH  
Q 21 Front Seat Inner Belt Assembly RH

R 6 Front Side Airbag Squib Circuit LH  
R 10 Front Seat Inner Belt Assembly LH

a 7 Front Seat Heater Assembly RH  
a 9 Junction Connector  
a 10 Separate Type Front Seat Cushion Spring Assembly RH  
a 13 Front Power Seat Switch RH  
a 17 Junction Connector

b 1 Separate Type Front Seat Cushion Spring Assembly LH  
b 2 Separate Type Front Seat Cushion Spring Assembly LH  
b 3 Separate Type Front Seat Cushion Spring Assembly LH  
b 4 Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)  
b 5 Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)  
b 6 Front Power Seat Switch Assembly LH  
b 7 Front Seat Heater Assembly LH  
b 9 Junction Connector  
b 10 Separate Type Front Seat Cushion Spring Assembly LH  
b 11 Separate Type Front Seat Cushion Spring Assembly LH  
b 12 Separate Type Front Seat Cushion Spring Assembly LH  
b 13 Front Power Seat Switch LH  
b 17 Junction Connector

e 3 Separate Type Front Seat Back Assembly RH

f 1 Separate Type Front Seat Back Assembly LH  
f 2 Separate Type Front Seat Back Assembly LH  
f 3 Separate Type Front Seat Back Assembly LH

Position of Parts in Seat <LHD Front Seat w/ Power Seat>

