


Tandy 1000 Floppy Drive Cable Replacement

First Connect the Ribbon Cable to the two Adapters – They are keyed so it's impossible to get this around the wrong way.

To connect to your External Drive and Tandy 1000, make sure that the writing on the PCB is up the right way. This means the Edge connector will be on the bottom and the Ribbon Cable header at the Top (see below pic). This applies to both ends of the Cable.

NEVER insert the Edge connector upside down as you risk damaging your Tandy 1000.

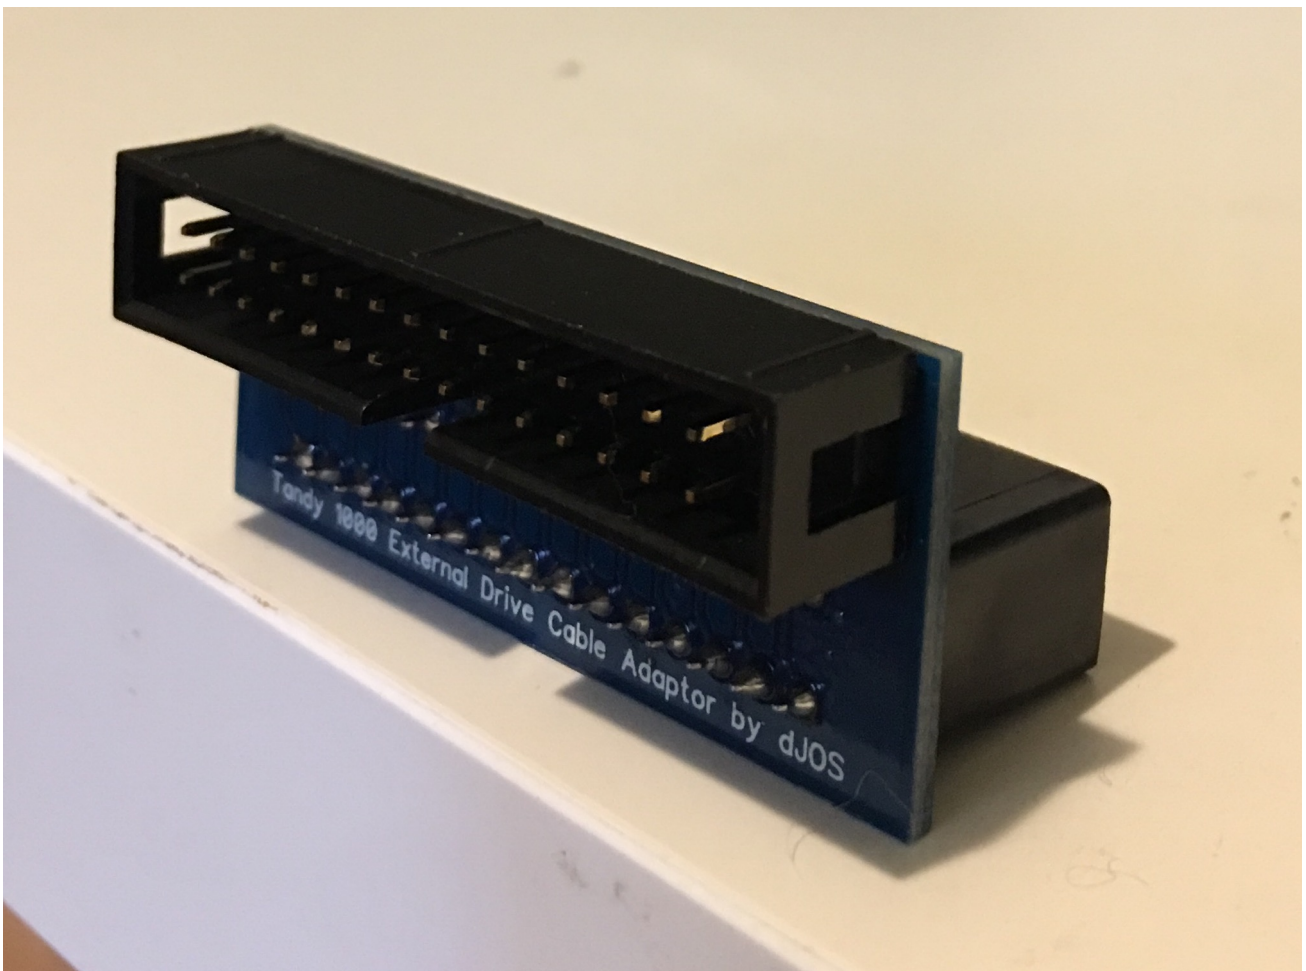

Thanks for buying my product, I hope it provides you with as much enjoyment as I had making them.

Regards dJOS