

Tandy 1000 EX / HX Printer Adapter Instructions

To connect to your Tandy 1000, make sure that the writing on the PCB is up the right way - then Insert the edge connector into the back of your Tandy.



NEVER insert the Edge connector upside down as you risk damaging your Tandy 1000.


Thanks for buying my product, I hope it provides you with as much enjoyment as I had making them.

Regards dJOS

Tandy 1000 Printer Adapter Instructions

First Connect the Ribbon Cable to the Adapter – They are keyed so it's impossible to get this around the wrong way.

To connect to your Tandy 1000, make sure that the writing on the PCB is up the right way and the Ribbon cable folds behind the Adapter - then Insert the edge connector into the back of your Tandy.

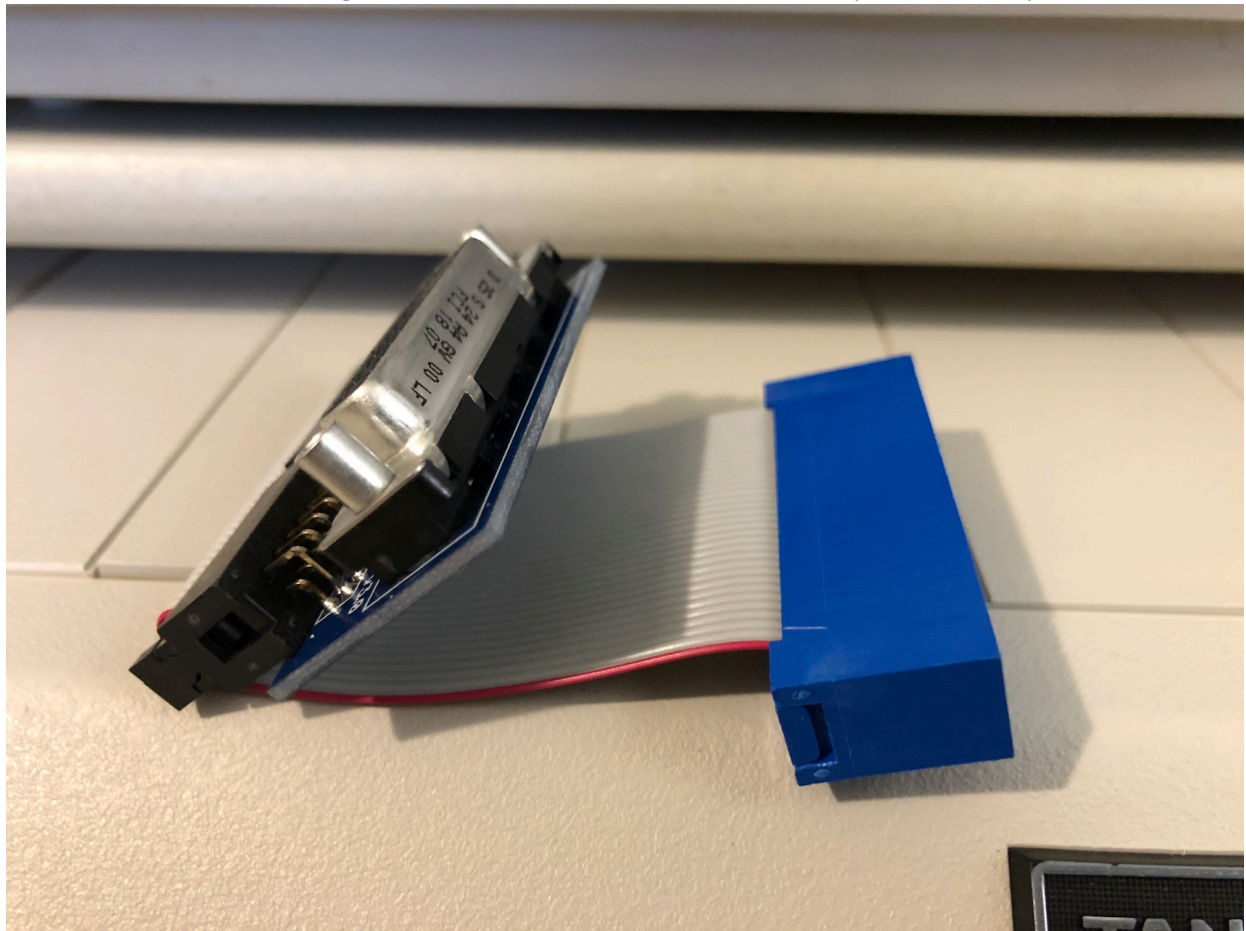

NEVER insert the Edge connector upside down as you risk damaging your Tandy 1000.

Thanks for buying my product, I hope it provides you with as much enjoyment as I had making them.

Regards dJOS