


# USB - CAN converter self-test

1. Open the software, choose the corresponding port and baud rate, click the **Open** button
2. The working mode is set to **Look back + silent mode**

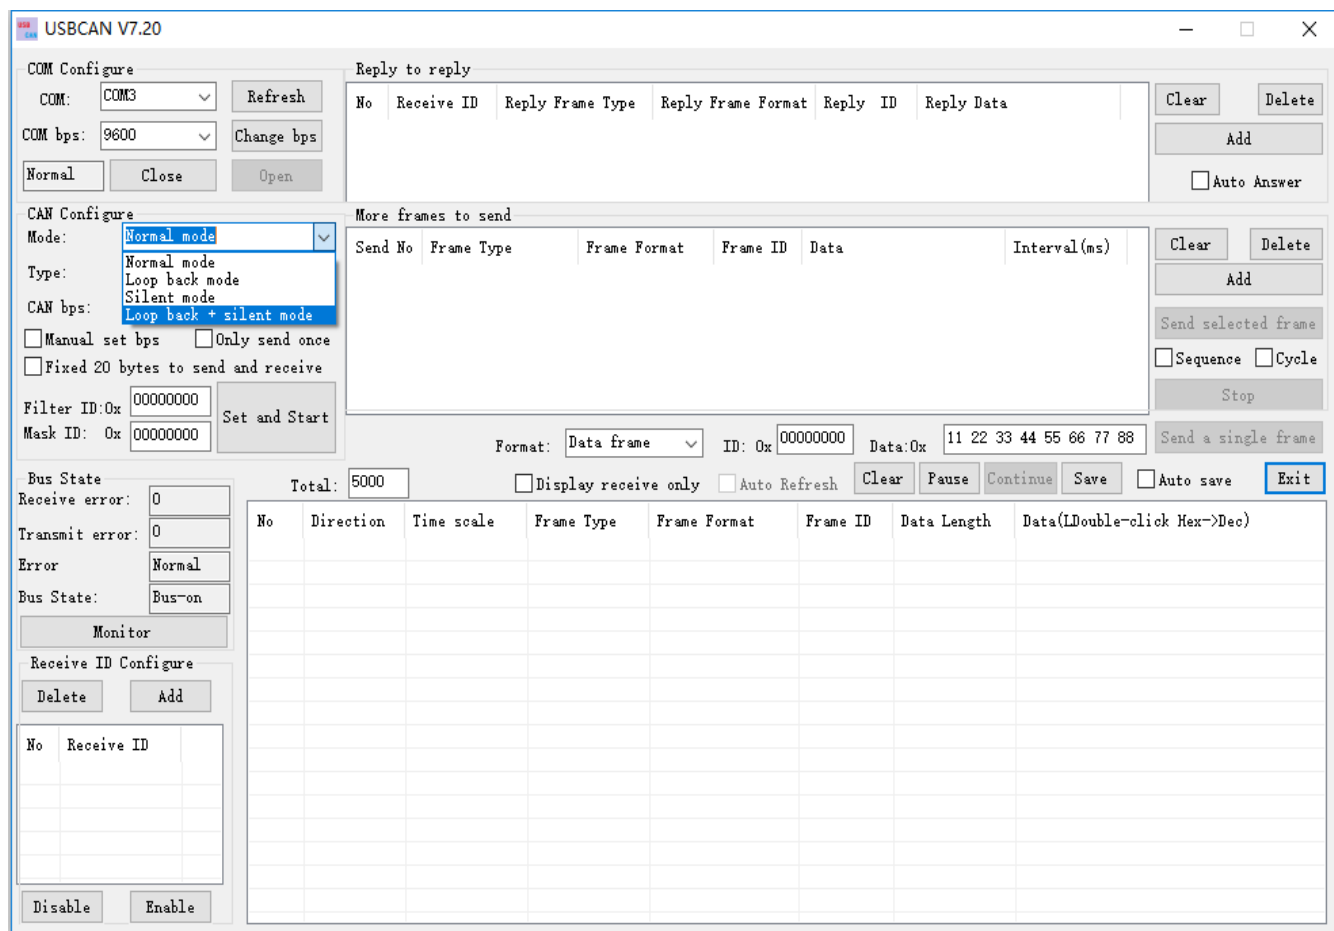

- ### 3. Click **Set and Start** button

## Set and Start

4. Click Send a single frame button, test Self-Sending and Self-Receiving

