

2. The import mappings window opens. Select the source host from which you want to import the volume mappings. As shown in Figure 8-39, we select the host ITS0-VMHOST-01 and click **Import**.

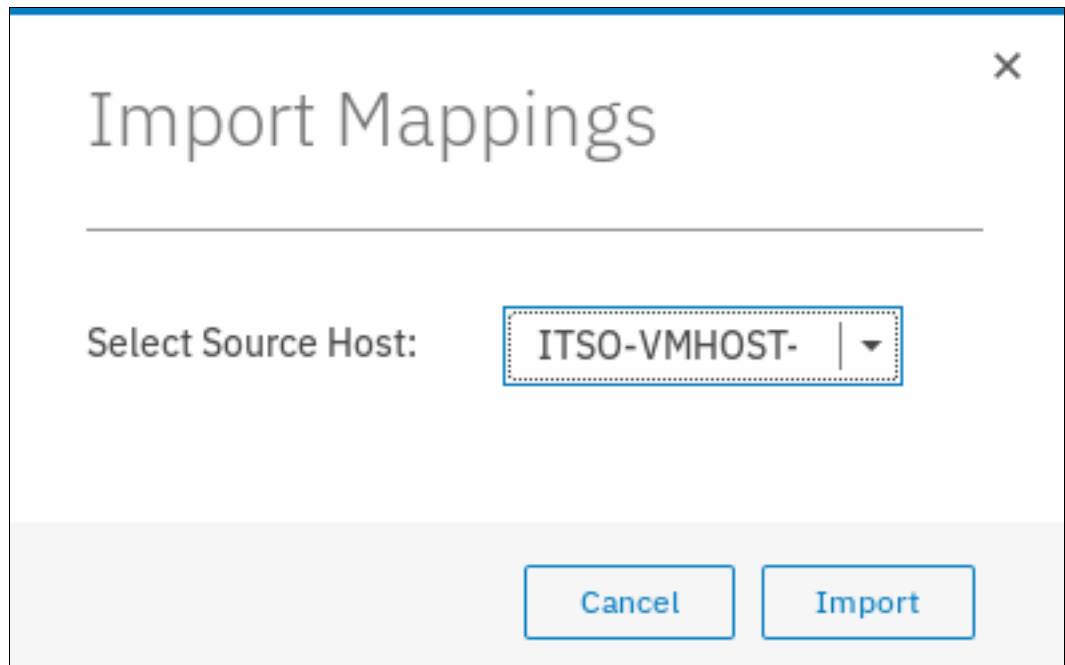


Figure 8-39 import volume mappings source host selection

3. After the task completes, verify that the mappings are as expected from the **Hosts** menu (see Figure 8-26 on page 346), right-click the target host, and select **Properties**. Then, click the **Mapped Volumes** tab and verify that the required volumes were mapped to the new host (see Figure 8-37 on page 353).

Renaming a host

To rename a host, complete the following steps:

1. Select the host, and then right-click and select **Rename** (see Figure 8-40).

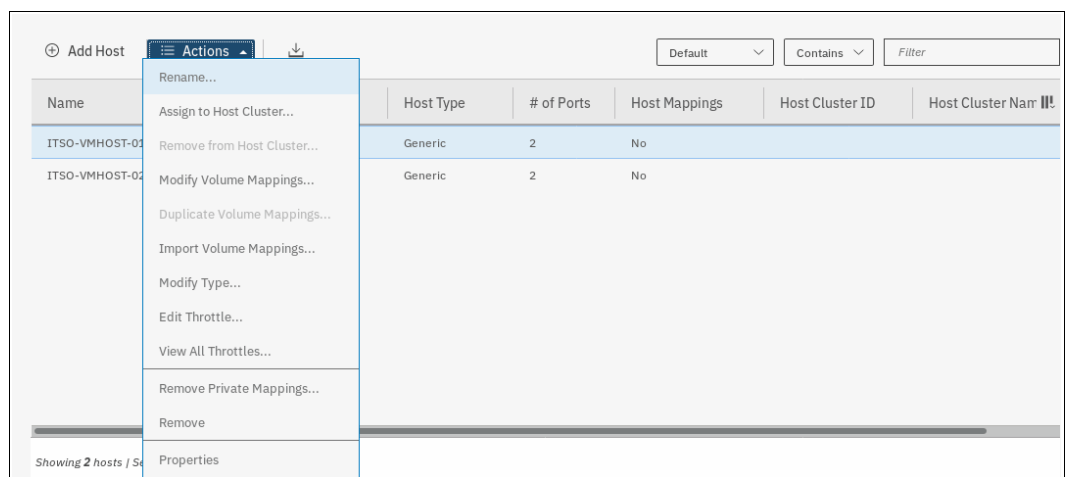


Figure 8-40 Rename a host