




# STM32CubeIDE basics

Board connection

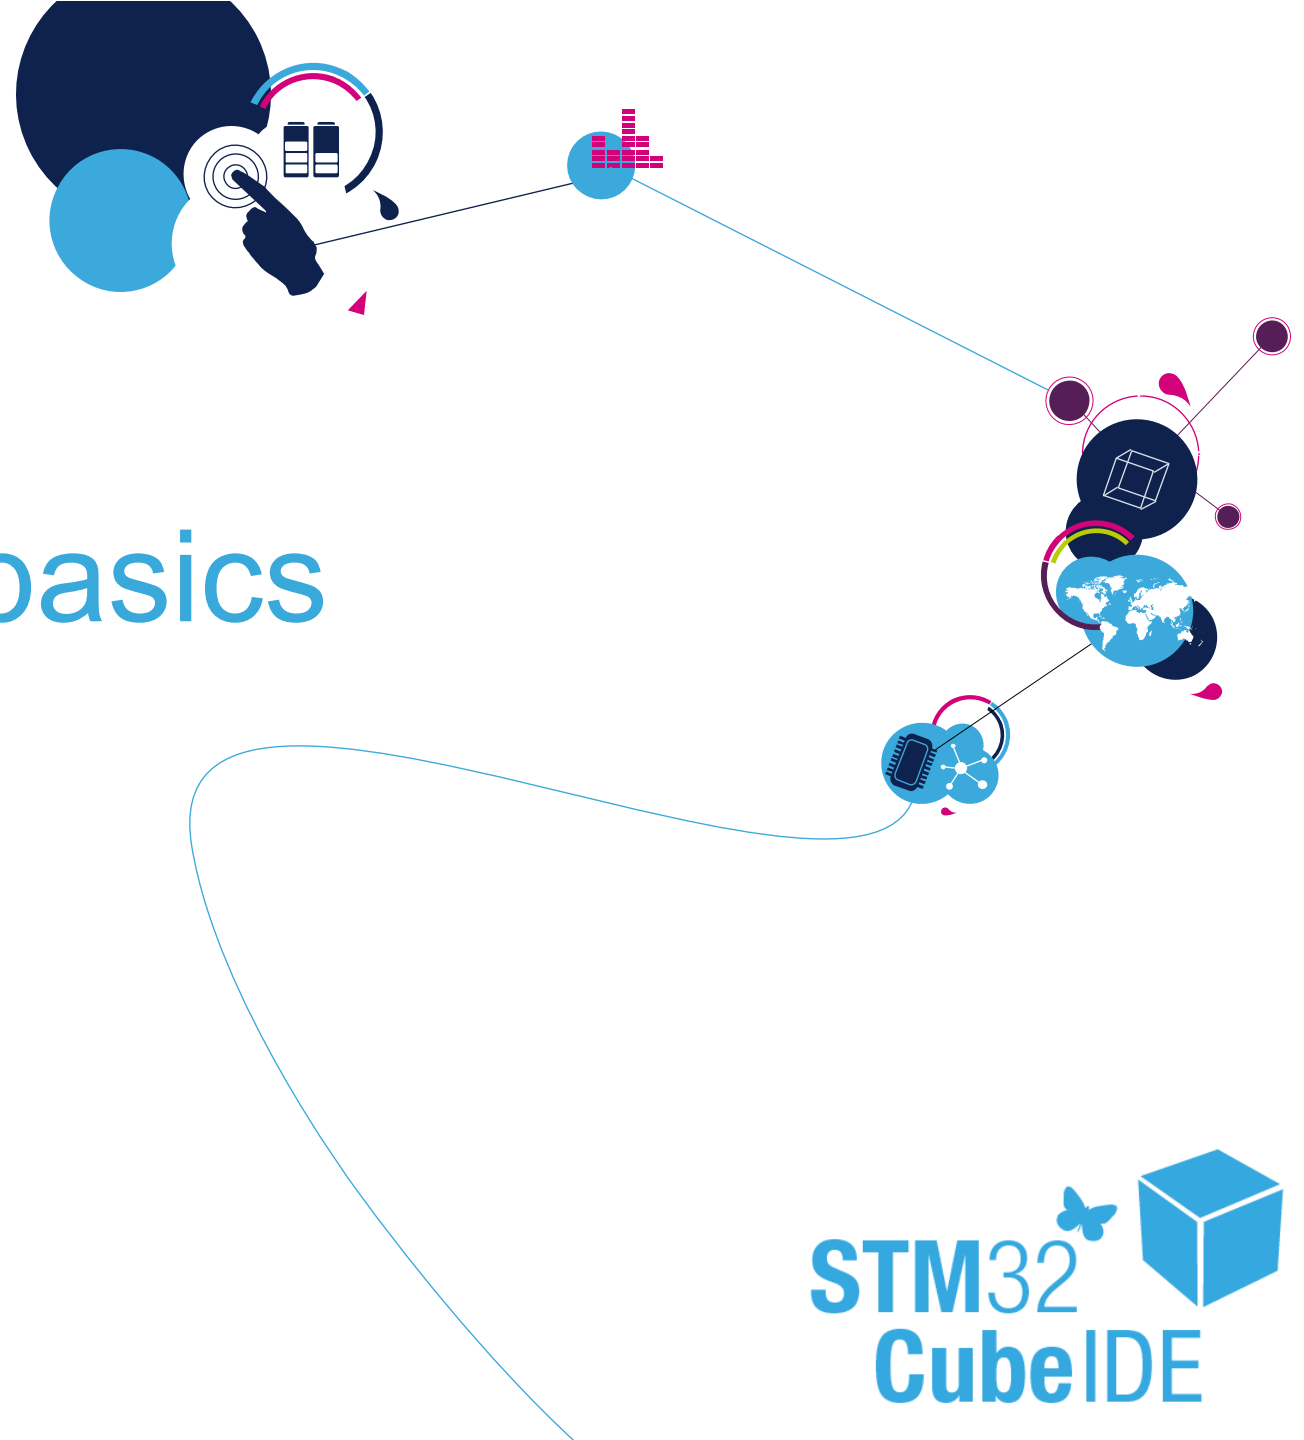

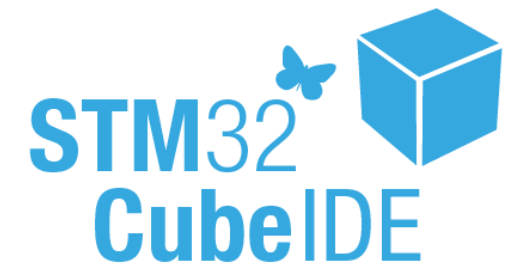

# STM32 NUCLEO features

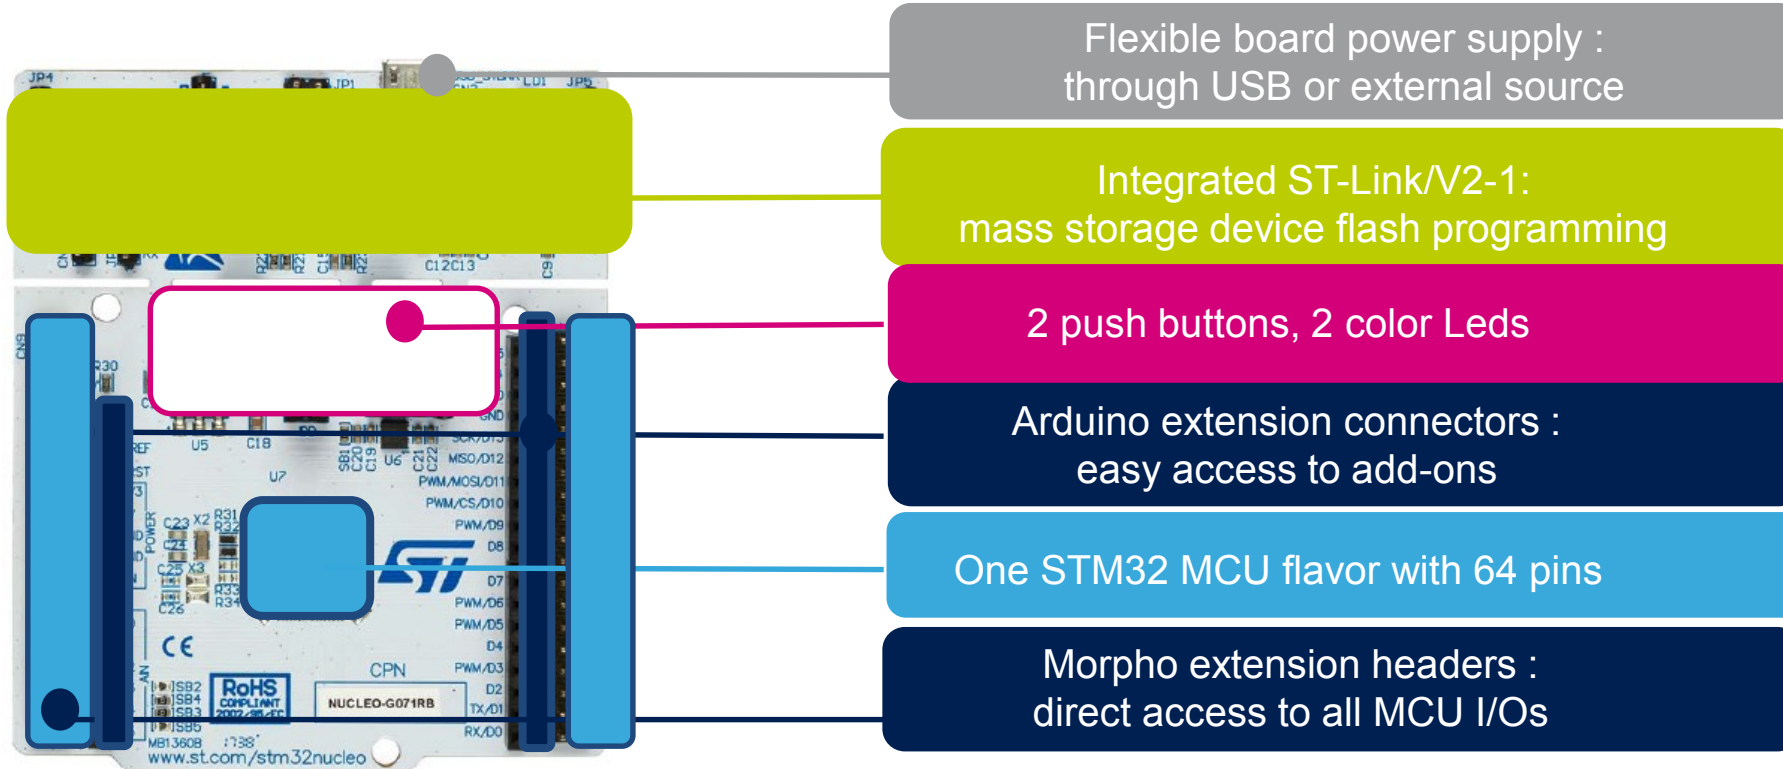

# Board Check

- Connect USB ST-LINK (**CN2**) to your PC
  - ST-LINK driver may be installed if this is the first time the board is plugged in.
- **LD1** should be **ON** and solid **RED** (indicating board power available and ST-Link is functional)

