


Controls and Instruments (Cab)

Front Console Controls

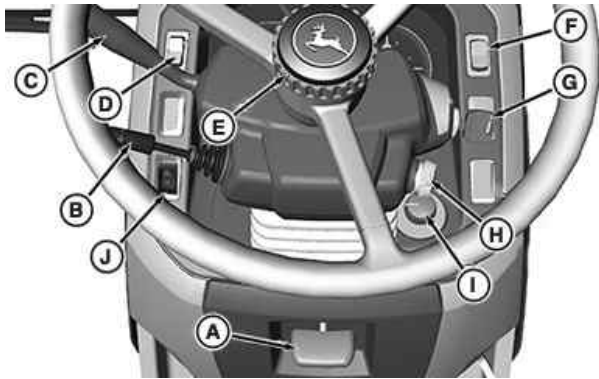


Cab

- A—Steering Wheel Tilt Lever
- B—Turn Signal and Horn
- C—Forward-Neutral-Reverse Lever
- D—Roll Mode Switch
- E—Steering Wheel Telescopic Knob
- F—Exhaust Filter Control Switch
- G—Key Switch
- H—Headlight Switch
- I—Wiper Switch
- J—Hazard Switch

LGCKF7U,0000B4C-19-15APR21

Foot-Operated Controls

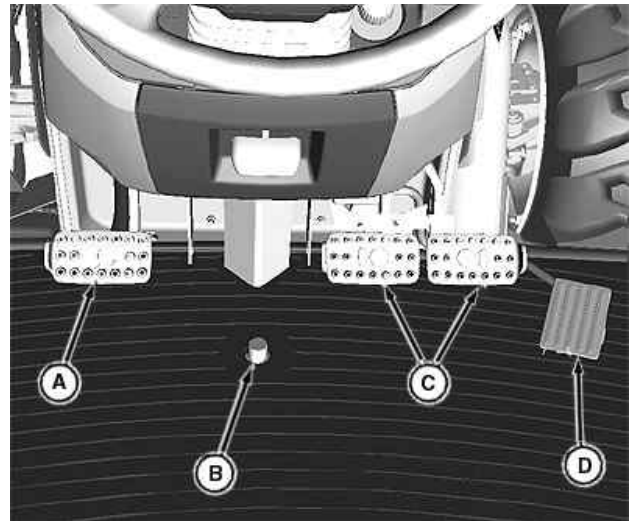

Cab


APY33142—UN—08JUN20

- A—Clutch Pedal
- B—Differential Lock Switch
- C—Brake Pedals
- D—Foot Throttle Pedal

LGCKF7U,0000BAE-19-09MAY21

Right Console Controls

Pickup Hitch Control

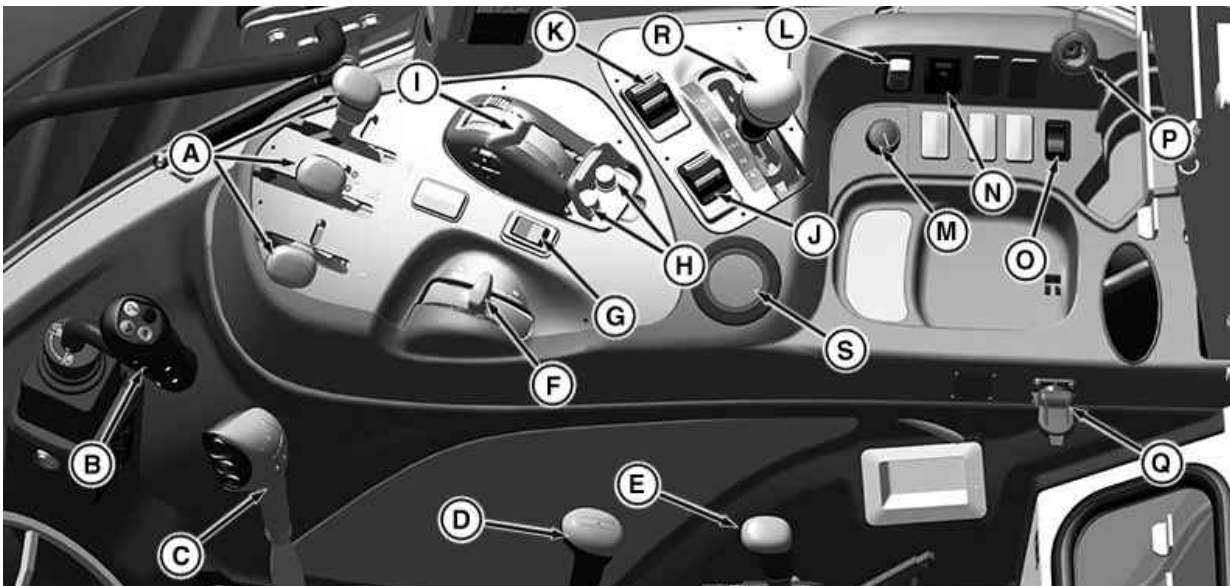

Right-Hand Console

APY33143—UN—08JUN20


- A—Selective Control Valve Levers
- B—Multi-Function lever
- C—Gearshift Lever
- D—Range Shift Lever
- E—Creeper Lever
- F—Hand Throttle
- G—MFWD Switch

- H—Rear Hitch Rate-of-Drop Control and Rear Hitch Height Limit Control
- I—Rear Hitch Control
- J—Rear PTO Engagement Switch
- K—Front PTO Engagement Switch
- L—Remote PTO Switch
- M—Rear Hitch Draft Control Knob

N—Brake Test Switch
O—Rear Wiper Switch
P—Power Outlet


Q—Convenience Outlet
R—PTO Speed Shift Lever
S—Trailer Brake Air Gauge

Mechanical Hitch Control

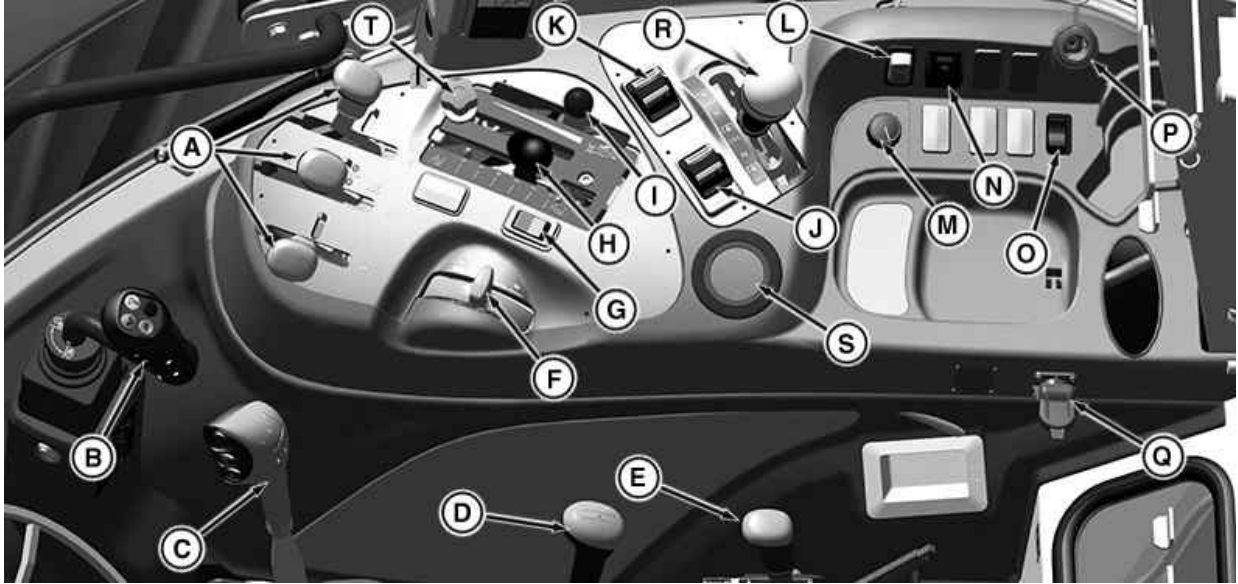

Right-Hand Console

APY33144—UN—08JUN20

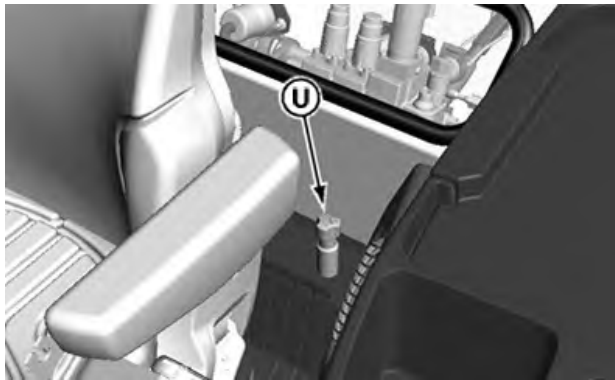

APY33173—UN—08JUN20


A—Selective Control Valve Levers
B—Multi-Function Lever
C—Gearshift Lever

D—Range Shift Lever
E—Creeper Lever
F—Hand Throttle
G—MFWD Switch
H—Hitch Position Lever
I—Draft Sensing Lever
J—Rear PTO Engagement Switch
K—Front PTO Engagement Switch
L—Remote PTO Switch
M—Rear Hitch Draft Control Knob
N—Brake Test Switch
O—Rear Wiper Switch
P—Power Outlet
Q—Convenience Outlet
R—PTO Speed Shift Lever
S—Trailer Brake Air Gauge
T—Hitch Lever Stop
U—Rate-of-Drop Knob

LGCKF7U,0000BAF-19-11JUN21

Transmission Controls

Gear Shift and Range Shift Lever

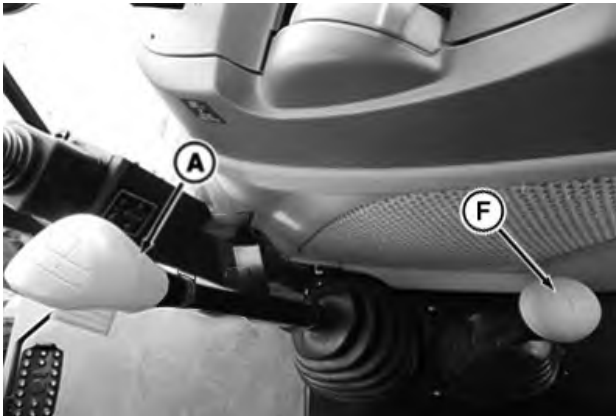

APY33147—UN—08JUN20



APY33163—UN—08JUN20

Gear Shift Lever - Declutch with Hi/Lo



APY33148—UN—08JUN20

Gear Shift Lever - no Declutch without Hi/Lo



APY33162—UN—08JUN20

Gear Shift Lever - Declutch without Hi/Lo

- A—Gear Shift Lever
- B—Gear Shift Lever - no Declutch without Hi/Lo
- C—Declutch Button
- D—High Range Select Button
- E—Low Range Select Button
- F—Range Shift lever


Left-Hand Reverser



APY33164—UN—08JUN20

A—Left-Hand Reverser Lever


Secondary Brake Control

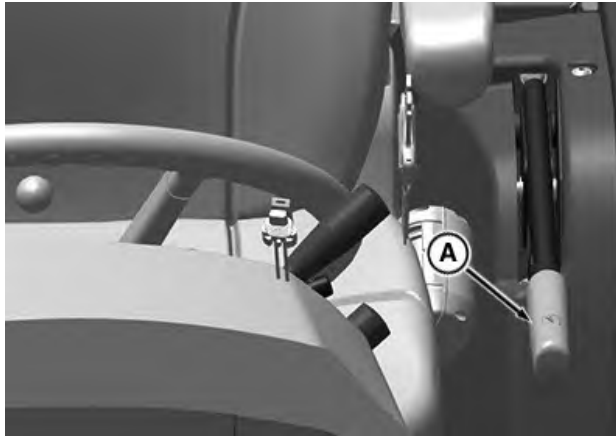

APY33150—UN—08JUN20

A—Secondary Brake Lever

Creeper Shift Lever

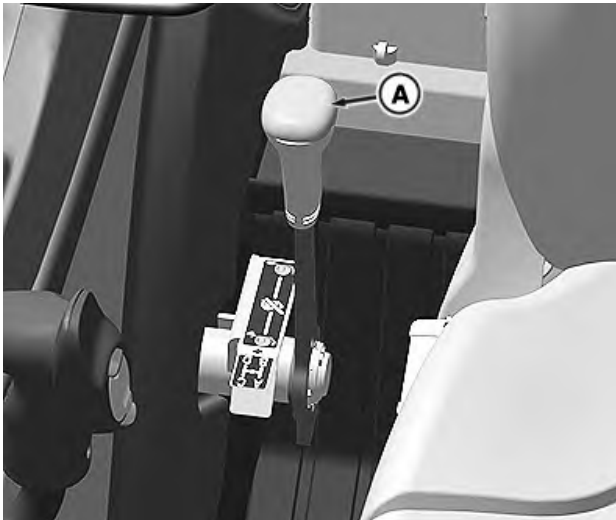


RXA0157551—UN—16FEB17

Cab

A—Creeper Shift Lever

LGCKF7U,0000BB0-19-09MAY21

Multi-Function Lever/Mid-SCV Controls

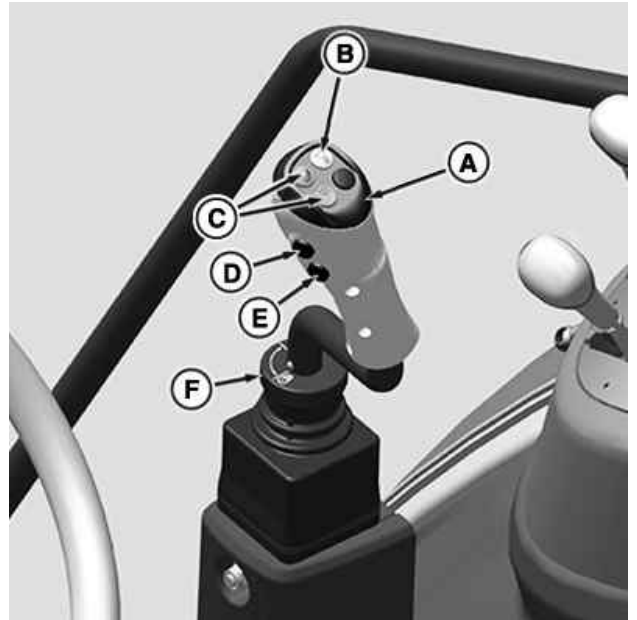


RXA0162109—UN—16FEB18

- A—Multi-Function/Mid-SCV Lever**
- B—Activate Front Loader Dampening**
- C—HI/LO Gear Shift Buttons**
- D—Diverter 1 Button**
- E—Diverter 2 Button**
- F—Loader Lock**

HK75640,00007A0-19-06MAY20

Rear SCV Controls

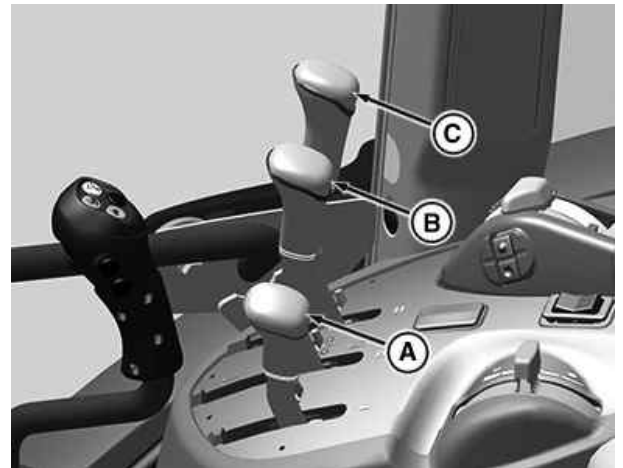


APY48003—UN—13APR21

- A—SCV I Lever**
- B—SCV II Lever**
- C—SCV III Lever**


LGCKF7U,0000B30-19-13APR21

Rear Hitch Controls

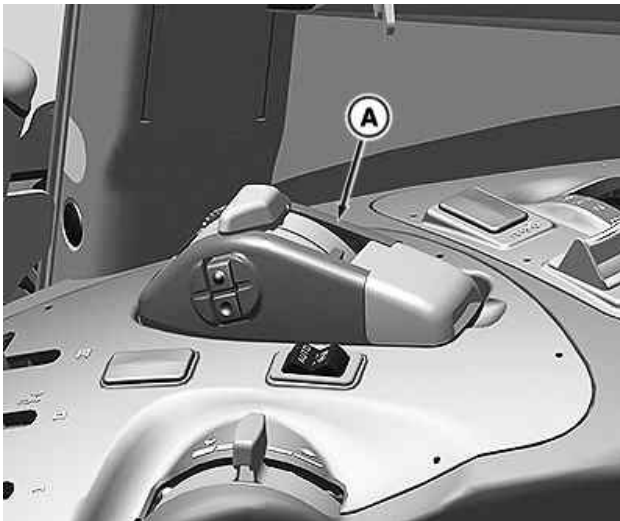

APY48005—UN—13APR21

Electrohydraulic Hitch Controls

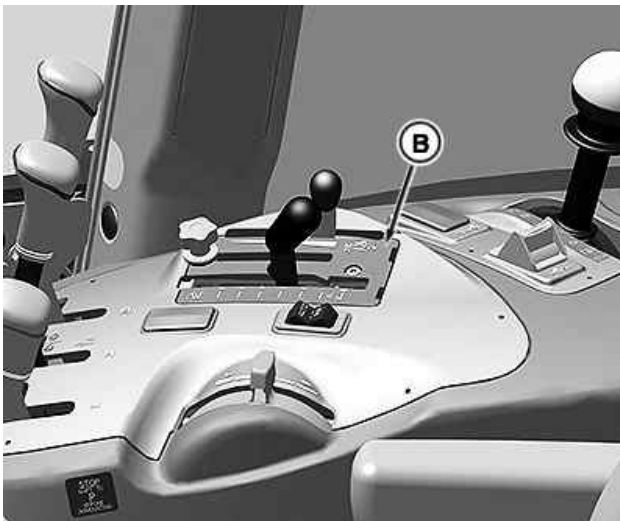

APY48004—UN—13APR21

Mechanical Hitch Controls



APY47901—UN—14DEC20


Electrohydraulic Hitch Controls

A—Electrohydraulic Rear Hitch Control


B—Mechanical Rear Hitch Control
C—Rear Hitch Fender Switch

LGCKF7U,0000B31-19-13APR21

PTO Controls

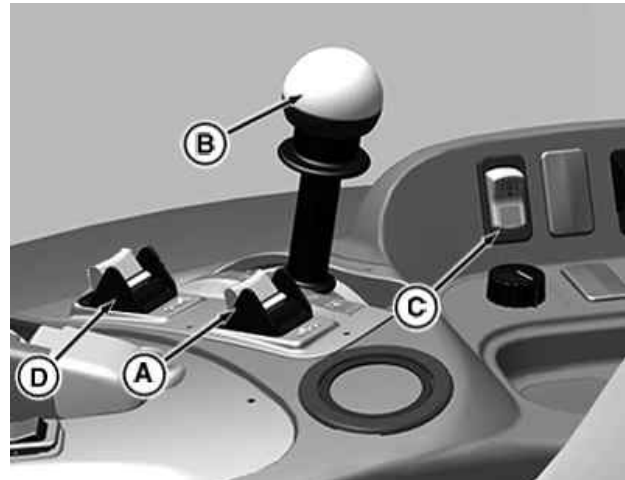

APY33152—UN—08JUN20

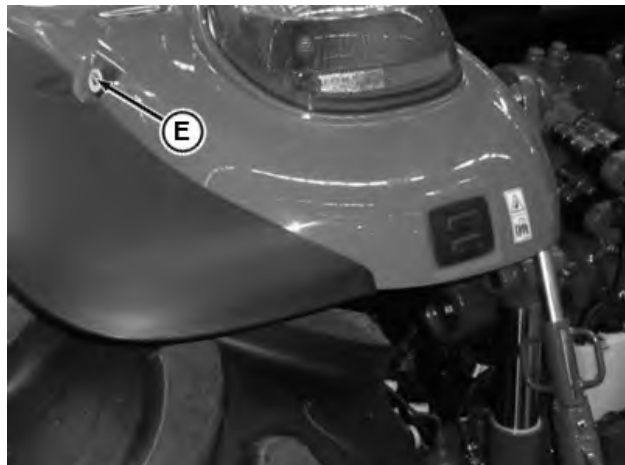

APY48032—UN—21APR21

Left-Hand Side Fender

A—Rear PTO Switch
B—2-Speed Rear PTO Shift Lever
C—Remote PTO Switch
D—Front PTO Switch
E—Rear PTO Fender Switch (Only CAB)

LGCKF7U,0000B4D-19-21APR21

Heat and Air Conditioning Controls




LV14499—UN—28JUL11

- A—Air Conditioning/Defrost Switch
- B—Air Conditioning Control Knob
- C—Heat Control Knob
- D—Fan Speed Knob

HK75640,00007A4-19-06APR20

Controls and Instruments (IOOS)

Front-Console Controls

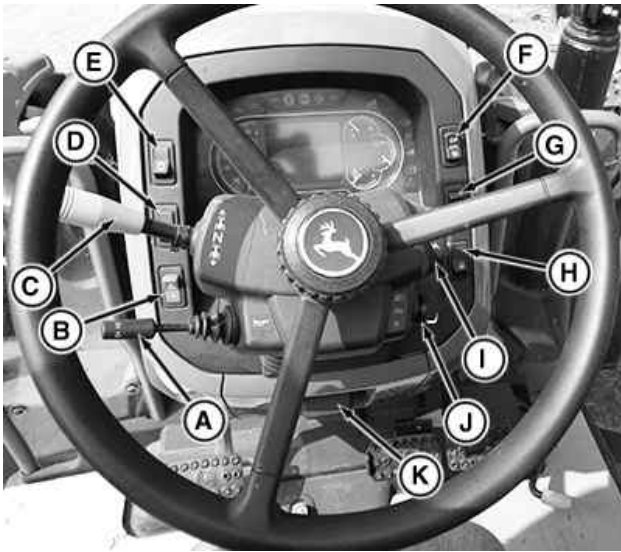

APY33140—UN—08JUN20


OOS

- A—Turn Signal and Horn
- B—Hazard Light Switch
- C—Forward-Neutral-Reverse Lever
- D—Beacon Light Switch
- E—Roll Mode Switch
- F—Exhaust Filter Control Switch
- G—MFWD Switch
- H—Worklight Switch
- I—Key Switch
- J—Headlight Switch

K—Steering Wheel Tilt Lever

LGCKF7U,0000BB1-19-09MAY21

Foot Operated Controls

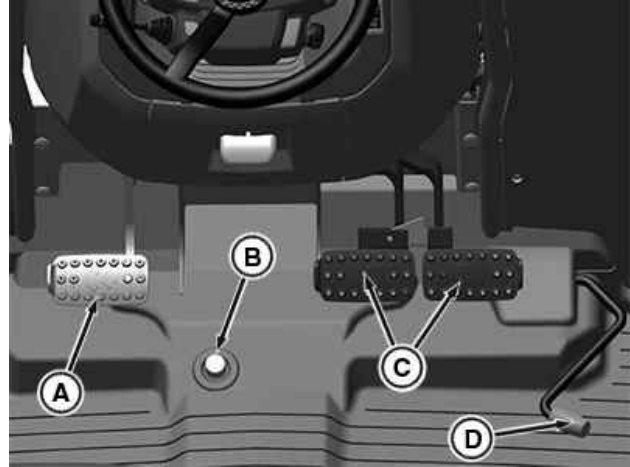

PY42142—UN—04AUG17


OOS

- A—Clutch Pedal
- B—Differential Lock Switch
- C—Brake Pedals
- D—Foot Throttle Pedal

HK75640,00007BB-19-14APR20

Console Controls

Electrohydraulic Hitch Control

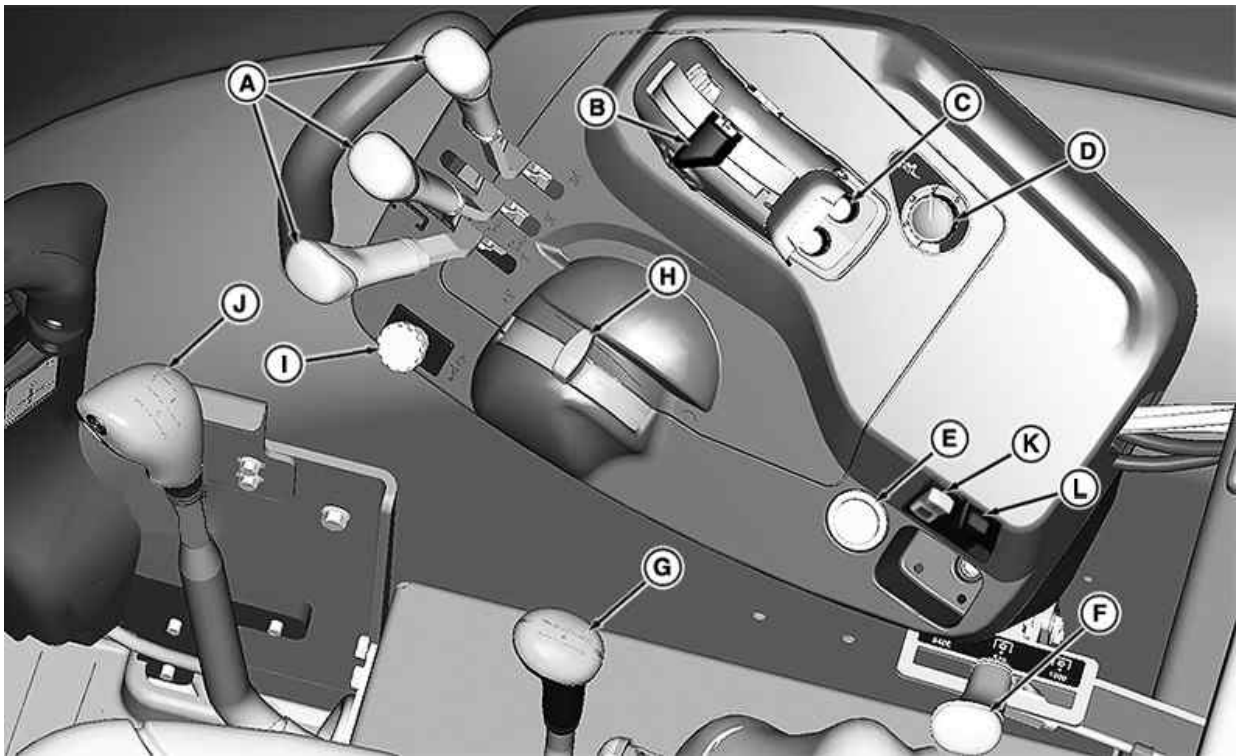


APY33159—UN—08JUN20

Right-Hand Console


- | | |
|---|---------------------------------|
| A—Selective Control Valve Levers | G—Range Shift Lever |
| B—Rear Hitch Control | H—Hand Throttle |
| C—Rear Hitch Rate-of-Drop Control and Rear Hitch Height Limit Control | I—Rear PTO Engagement Switch |
| D—Rear Hitch Draft Control | J—Gearshift Lever |
| E—Power Outlet | K—Remote PTO Switch |
| F—Rear PTO Speed Shift Lever | L—Air Trailer Brake Test Switch |

Mechanical Hitch Control

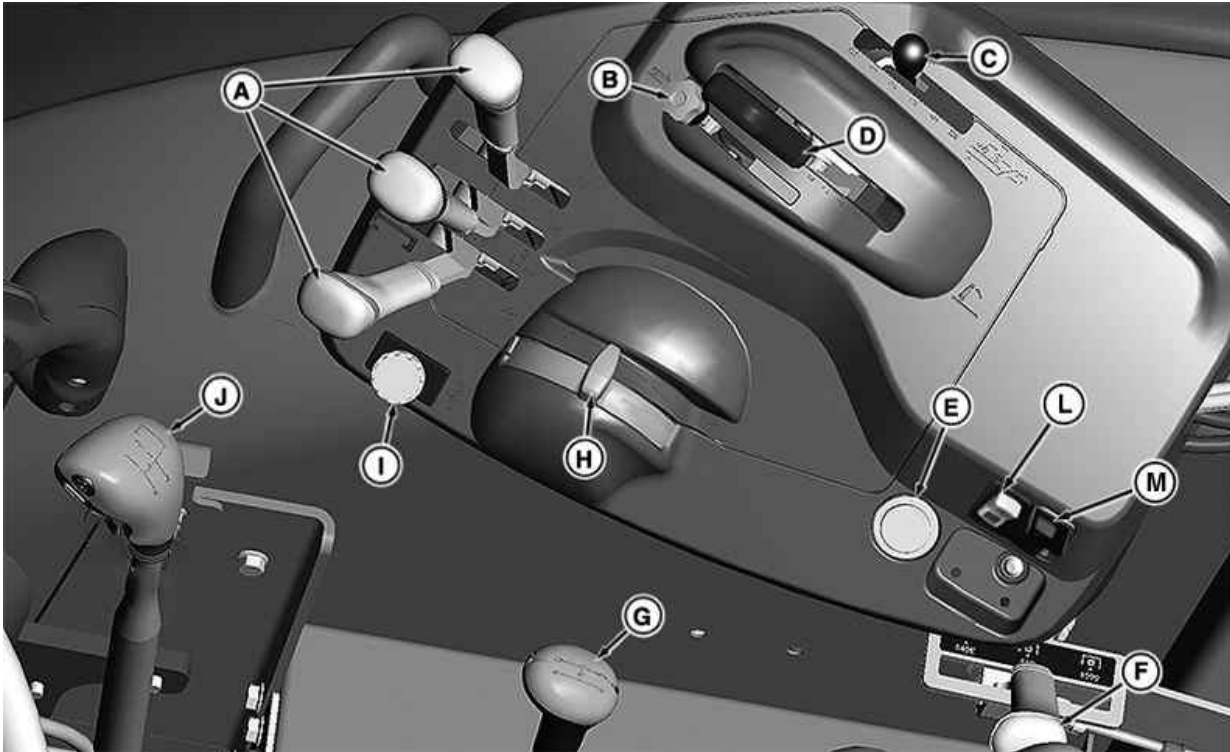

APY33160—UN—08JUN20

Right-Hand Console

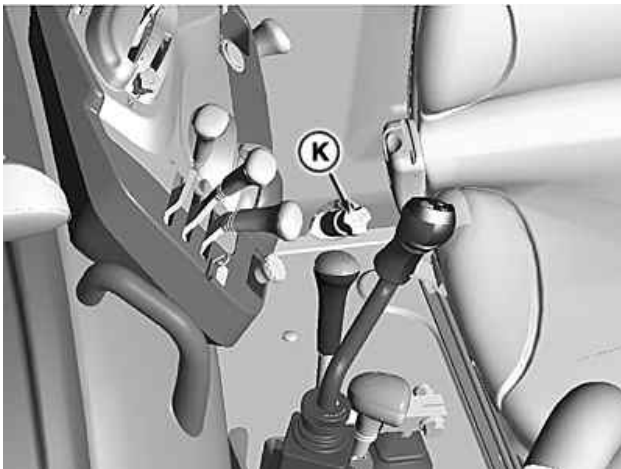


RXA0158637—UN—25APR17

Rate-of-Drop Knob (on left-side behind operator's seat)

- A—Selective Control Valve Levers
- B—Position Control Stop Knob
- C—Draft Control
- D—Rear Hitch Position Lever
- E—Power Outlet
- F—Rear PTO Speed Shift Lever
- G—Range Shift Lever
- H—Hand Throttle
- I—Rear PTO Engagement Switch
- J—Gearshift Lever
- K—Rate-of-Drop Knob
- L—Remote PTO Switch
- M—Air Trailer Brake Test Switch

Left-Hand Controls

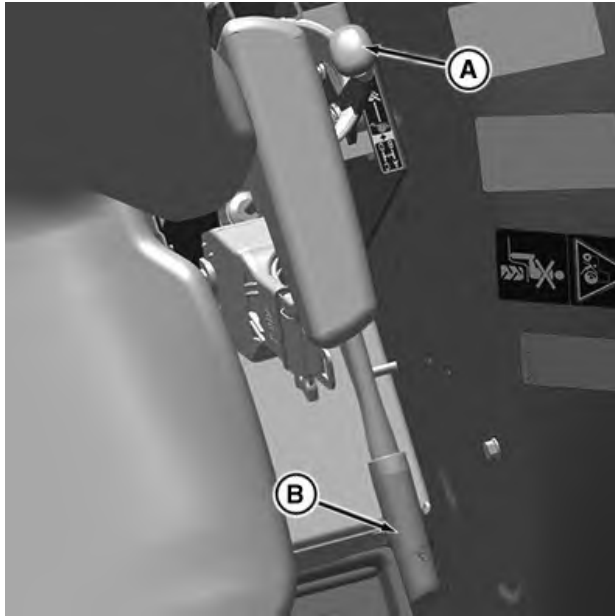

A—Creeper Lever
B—Parking Brake Lever

APY48007—UN—13APR21

LGCKF7U,0000B50-19-15APR21




APY33148—UN—08JUN20

Gear Shift Lever - no Declutch without Hi/Lo



APY33162—UN—08JUN20

Gear Shift Lever - Declutch without Hi/Lo

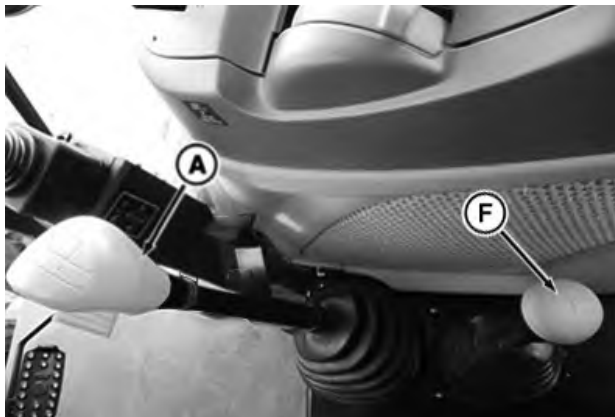

APY33147—UN—08JUN20



APY33163—UN—08JUN20

Gear Shift Lever - Declutch with Hi/Lo

A—Gear Shift Lever

- B—Gear Shift Lever - no Declutch without Hi/Lo
- C—Declutch Button
- D—High Range Select Button
- E—Low Range Select Button
- F—Range Shift Lever


Left-Hand Reverser



APY33164—UN—08JUN20

A—Left-Hand Reverser Lever

Secondary Brake Control and Creeper Shift Lever

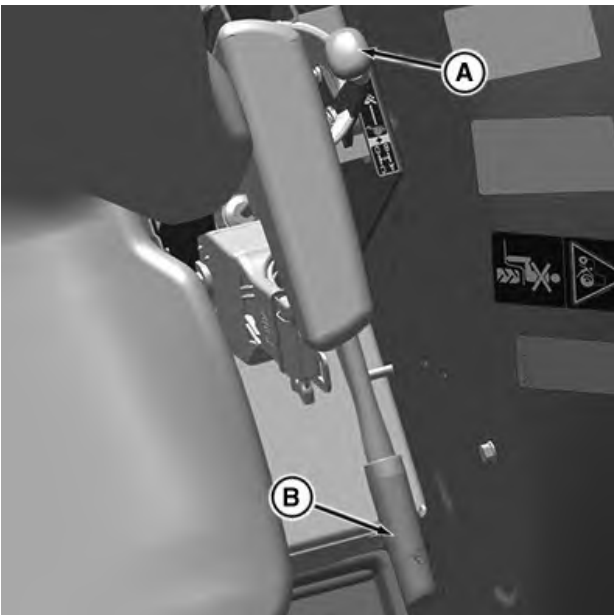


APY48007—UN—13APR21

A—Creeper Shift Lever
B—Secondary Brake Lever

LGCKF7U,0000BB2-19-09MAY21

Multi-Function Lever/Mid-SCV Controls

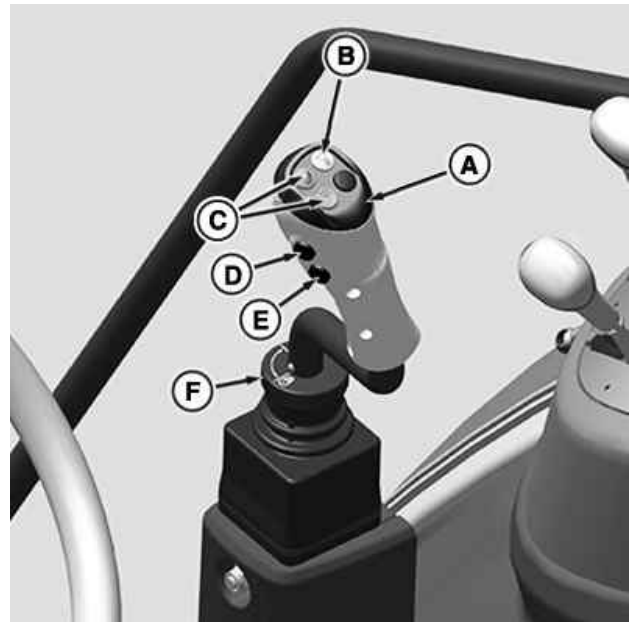


RXA0162109—UN—16FEB18

A—Multi-Function/Mid-SCV Lever
B—Activate Front Loader Dampening
C—HI/LO Gear Shift Buttons
D—Diverter 1 Button
E—Diverter 2 Button
F—Loader Lock

HK75640,00007BF-19-06MAY20

Rear SCV Controls

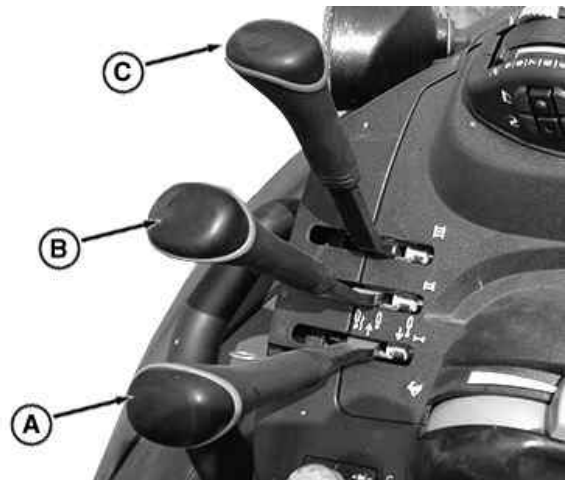

APY33165—UN—08JUN20

A—SCV I Lever
B—SCV II Lever
C—SCV III Lever

HK75640,00007C0-19-14APR20

Rear Hitch Controls



APY33166—UN—08JUN20

Electrohydraulic- Hitch Controls



APY48033—UN—21APR21

Electrohydraulic- Rear Hitch Fender Switch




APY33168—UN—08JUN20

Mechanical Hitch Controls

- A—Electrohydraulic Rear Hitch Controls**
- B—Electrohydraulic Rear Hitch Fender Switch**
- C—Mechanical Rear Hitch Controls**

LGCKF7U,0000CE3-19-21MAY21

Rear PTO Controls

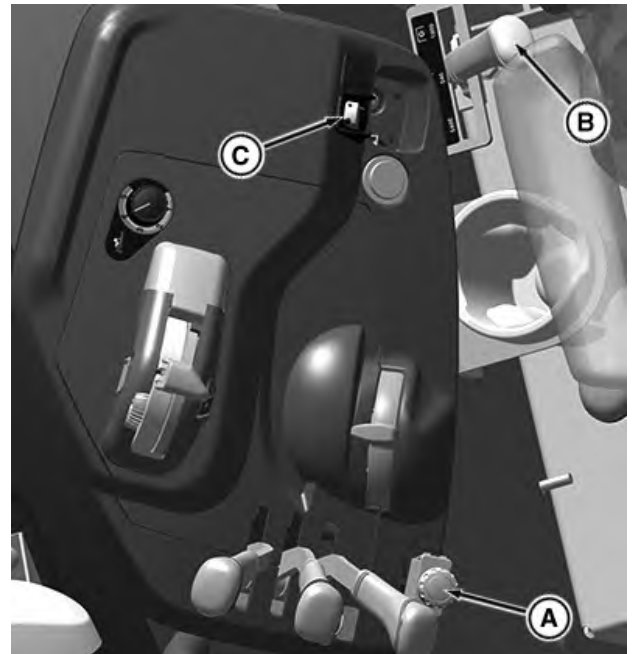

APY33169—UN—08JUN20

- A—Rear PTO Switch**
- B—Rear PTO Shift Lever**
- C—Remote PTO Switch**

HK75640,00007C2-19-14APR20

Controls and Instruments Maintenance

General Controls and Instruments Maintenance

- Ensure that controls and instruments are clean and no bindings are present. See John Deere dealer for recommended cleaners to prolong life of products.
- Adjust mechanical SCV levers, shiftable PTO lever, and creeper lever. See John Deere dealer for proper adjustments.

HK75640,000106E-19-14SEP20