


Displays, Software, and Electronics Operation

Primary Display

NOTE: Moisture may cause fogging on the inside of the primary display. An anti-fogging agent is used to prevent fogging and may not have been applied correctly. It is normal for the primary display glass to have some moisture inside it on open station machines in certain environments. The primary display is not sealed fully, temperature swings and air moisture content naturally cause condensation. The anti-fog coating disperses the moisture into water droplets so that the operator can see through it. The water droplets should not be any larger than a pencil lead. If the primary display builds moisture that does not bead up after 20 minutes, it is recommended to replace the primary display.

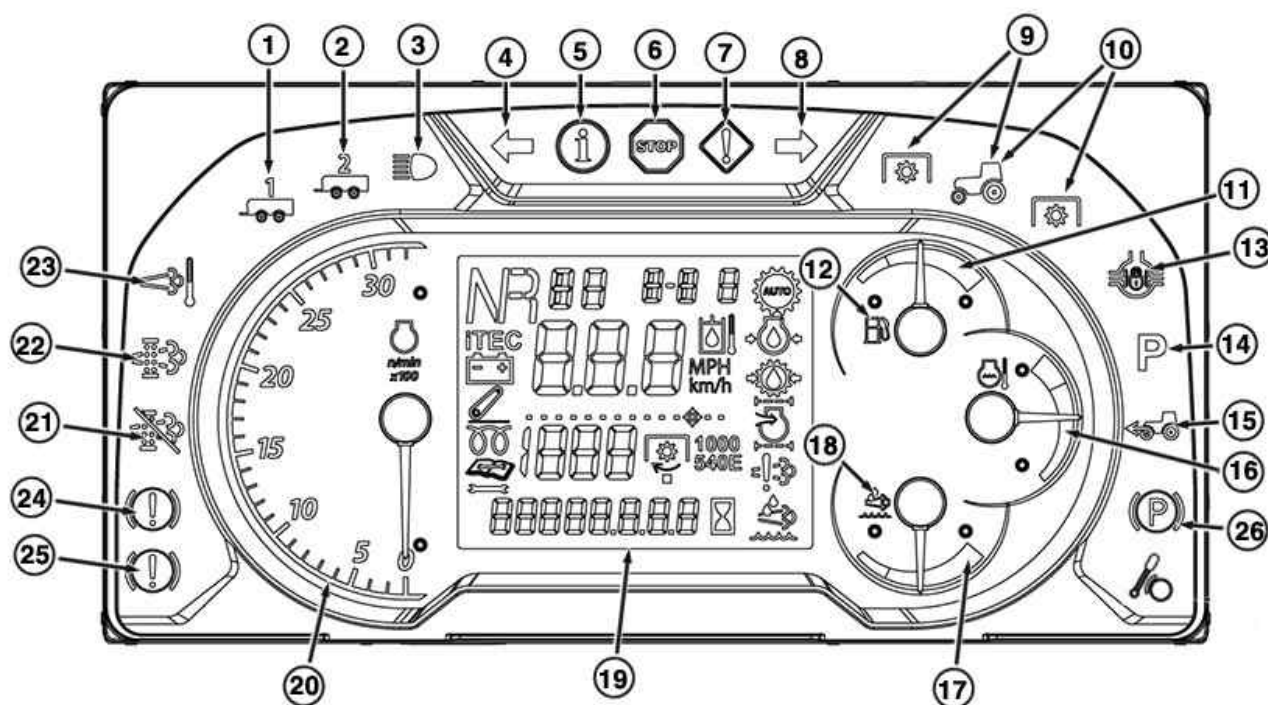


APY47903—UN—15APR21

Display Icon	Icon Name	Icon Description
1	Trailer 1 Indicator	Flashes when one or two trailers are connected and indicator lights are working.
2	Trailer 2 Indicator	Flashes when two trailers are connected and indicator lights are working.
3	High Beam Indicator	Illuminates when the headlights are switched to high beam.
4	Left Turn Indicator	Flashes when turn signal switch is switched to the left-hand side.
5	Information Alert Indicator	Illuminates when a Diagnostic Trouble Code (DTC) is present. If necessary, have your John Deere dealer diagnose vehicle.
6	STOP Indicator	Illuminates when a serious malfunction occurs. Shut off engine IMMEDIATELY and determine the cause (review error message in Information Display). If necessary, have John Deere dealer diagnose vehicle.
7	Warning Indicator	Illuminates when a malfunction occurs (review error message in Information Display). If necessary, have John Deere dealer diagnose vehicle.
8	Right Turn Indicator	Flashes when turn signal switch is switched to the right-hand side.
9	Front PTO Indicator	Illuminates when front PTO is activated.

Display Icon	Icon Name	Icon Description
10	Rear PTO Indicator	Illuminates when rear PTO is activated.
11	Fuel Level Indicator Gauge	Indicates amount of fuel remaining in tank.
12	Low Fuel Indicator	Illuminates when fuel level indicator moves into the red zone.
13	Differential Lock Indicator	Illuminates when differential lock is engaged.
14	Park Indicator	Illuminates when transmission has been placed in park.
15	MFWD Engaged Indicator	Illuminates when mechanical front-wheel drive is engaged.
16	Engine Coolant Temperature Gauge	Indicates engine coolant temperature. Red area indicates overheating (coolant level too low, dirty radiator, or clogged screen). Shutoff engine IMMEDIATELY to prevent damage. If necessary, have your John Deere dealer diagnose vehicle.
17	Diesel Exhaust Fluid (DEF) Level Indicator Gauge	Indicates amount of diesel exhaust fluid (DEF) remaining in tank. Not used on 5075M.
18	Low Diesel Exhaust Fluid (DEF) Indicator	Illuminates when DEF level indicator moves into the red zone. Icon flashes if DEF level falls below "low" indicating level. Not used on 5075M.
19	Information Display	Displays various vehicle information outputs.
20	Tachometer	Indicates engine speed, revolutions per minute (rpm).
21	Auto Cleaning Disabled Indicator	Illuminates when operator has engaged the disable auto exhaust filter cleaning function.
22	Exhaust Filter Indicator	Illuminates when exhaust filter cleaning is in progress, aftertreatment system has a fault, or exhaust filter is in need of cleaning.
23	Engine Emissions Temperature Indicator	Illuminates when exhaust gas temperature is high, elevated idle is active, or exhaust filter cleaning is in progress.
24	Brake System Warning Indicator	Illuminates when a brake system malfunction occurs. Brake system does not perform as expected. Have John Deere dealer diagnose machine.
25	Brake System Stop Indicator	Illuminates when a serious brake system malfunction occurs. Brake system does not perform as expected. Have John Deere dealer diagnose machine immediately.
26	Park Warning	Illuminates when a park brake malfunction occurs. Have John Deere dealer diagnose machine immediately.

Information Display

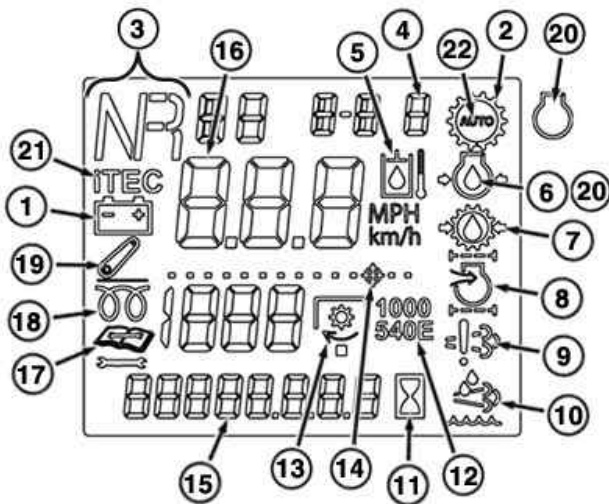

RXA0158298—UN—16MAR17

Display Icon	Icon Name	Icon Description
1	Charging System Indicator	Illuminates when charging system malfunction occurs. If necessary, have your John Deere dealer diagnose vehicle.
2	Transmission Indicator	Illuminates when transmission DTC is active. If necessary, have your John Deere dealer diagnose vehicle.
3	F—N—R Indicator	Illuminates to indicate transmission position. F = Forward N = Neutral R = Reverse
4	High-Low Indicator	Indicates H (high) or L (low).

Displays, Software, and Electronics Operation

Display Icon	Icon Name	Icon Description
5	Hydraulic Oil Temperature	Illuminates when hydraulic oil overheats. If necessary, have your John Deere dealer diagnose vehicle.
6	Engine Oil Filter Pressure	Entire icon illuminates to indicate abnormal oil filter pressure. If necessary, have your John Deere dealer diagnose vehicle.
7	Transmission Oil Pressure Indicator	Illuminates to indicate abnormal transmission oil pressure. If necessary, have your John Deere dealer diagnose vehicle.
8	Engine Intake-Combustion Air Filter Indicator	Illuminates when air cleaner element is clogged (clean or replace element). If necessary, have your John Deere dealer diagnose vehicle.
9	Engine Emission Systems Malfunction Indicator	Illuminates when there is a malfunction or failure to the emissions system. If necessary, have your John Deere dealer diagnose vehicle.
10	Diesel Exhaust Fluid (DEF) Indicator	Illuminates when DEF is low. Not used on 5075M.
11	Engine Hours Indicator	Illuminates when display is indicating engine hours.
12	PTO rpm Indicator	Indicates what mode PTO is in (540, 540E, or 1000 rpm).
13	PTO Engaged Indicator	Illuminates when rear PTO is engaged.
14	PTO Target Speed Indicator	Illuminates when set PTO target speed has been achieved.
15	Vehicle Information Display	Displays engine hours, diagnostic trouble codes, and regeneration status.
16	Vehicle Speed Display	Displays current vehicle speed.
17	Diagnostic Code Display	Illuminates when active diagnostic trouble codes are being displayed.
18	Cold Start Status	Illuminates when air intake heater is energized. When illuminated, remaining starting aid time shows at vehicle speed display.
19	Rear Hitch Indicator	Illuminates when rear hitch malfunction occurs. If necessary, have your John Deere dealer diagnose vehicle.
20	Engine Malfunction Indicator	Only engine portion of icon (6) illuminates to indicate engine malfunction. To prevent damage, shut off engine IMMEDIATELY. If necessary, have your John Deere dealer diagnose vehicle.
21	ITEC Indicator	Not Used
22	AUTO Mode Indicator	Not Used

LGCKF7U,00008BB-19-10MAY21