



## INSTALLATION


1. **INSTALL INSTRUMENT PANEL CUSHION**
2. **INSTALL NO. 1 INSTRUMENT PANEL PIN**
  - (a) Install the 4 No. 1 instrument panel pins with the 4 screws <D>.
3. **INSTALL ANTENNA CORD SUB-ASSEMBLY** (See page [AV-95](#))

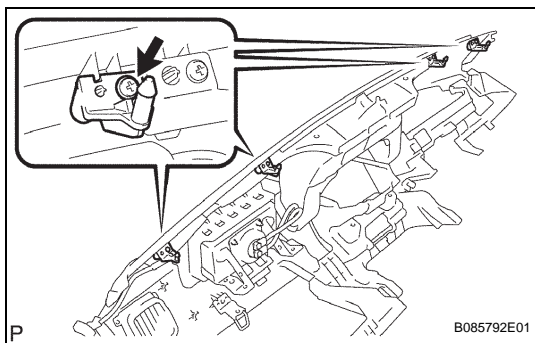


IP

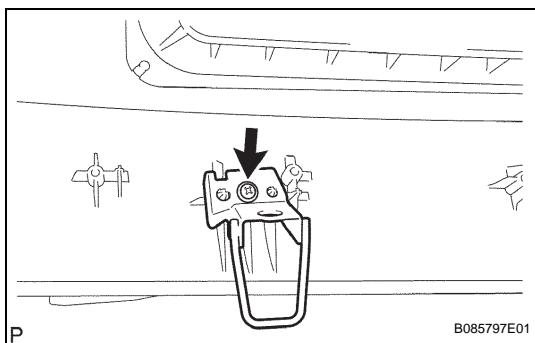


4. **INSTALL INSTRUMENT PANEL CENTER BRACKET SUB-ASSEMBLY**
  - (a) Install the instrument panel center bracket sub-assembly with the screw <D>.

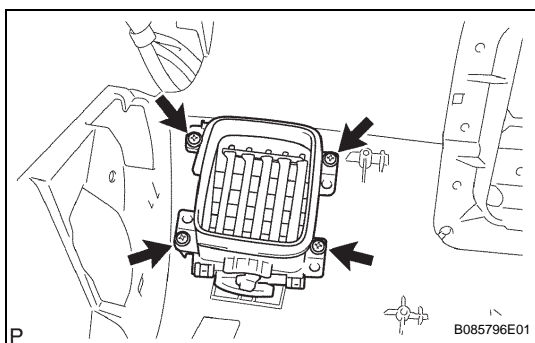

5. **INSTALL NO.1 INSTRUMENT PANEL REGISTER ASSEMBLY**
  - (a) Install the instrument panel register with the 4 screws <D> with the fins closed.
6. **INSTALL FRONT PASSENGER AIRBAG ASSEMBLY**

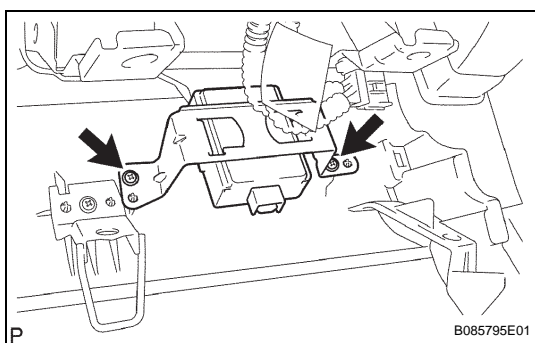


7. **INSTALL DOOR CONTROL RECEIVER**
  - (a) Install the door control receiver with the 2 screws <D>.

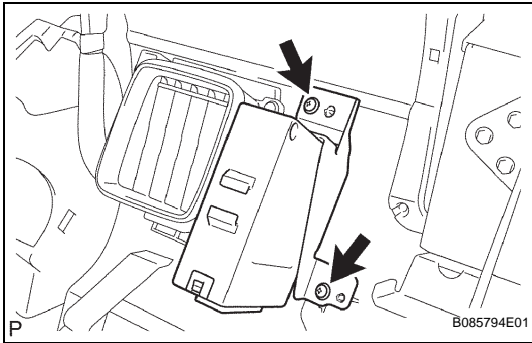**8. INSTALL FOUR WHEEL DRIVE CONTROL ECU**

- (a) Install the four wheel drive control ECU with the 2 screws <D>.

**Torque: 1.2 N\*m (12 kgf\*cm, 11 in.\*lbf)**

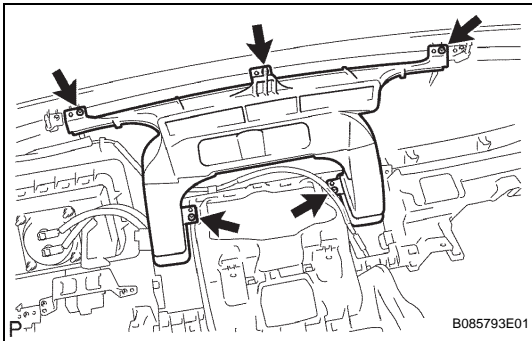**9. INSTALL DEFROSTER NOZZLE ASSEMBLY W/ NO.2 HEATER TO REGISTER DUCT**

- (a) Install the defroster nozzle w/ No. 2 heater to register duct with the 5 screws <D>.


**10. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY W/ PASSENGER AIRBAG ASSEMBLY**

- (a) Install the instrument panel sub-assembly w/ passenger air bag assembly with the 8 bolts and nut.


**Torque: 20 N\*m (205 kgf\*cm, 15 ft.\*lbf) for bolt <C>**

- (b) Engage the 5 clamps and connect the 4 connectors.

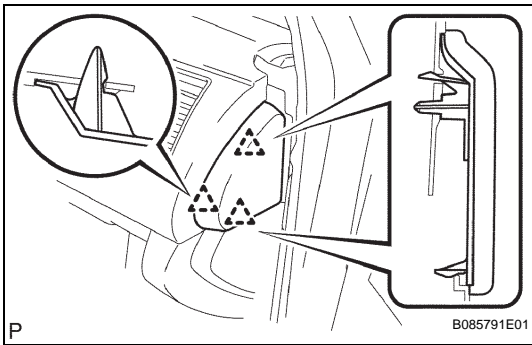


**12. INSTALL INSTRUMENT SIDE PANEL RH**


- (a) Engage the 3 claws and install the instrument side RH.

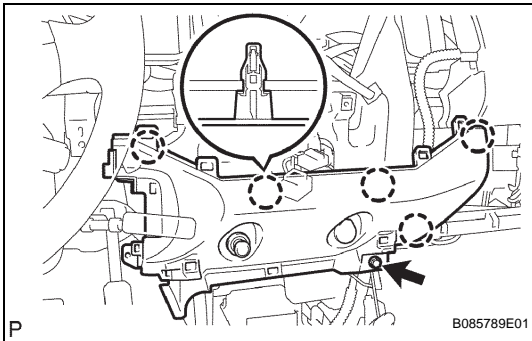**13. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY**


- (a) Connect the 2 connectors.
- (b) Engage the 5 clips and install the instrument lower cover.
- (c) Install the bolt <B>.

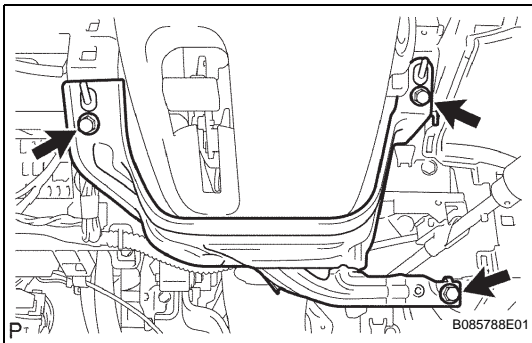**14. INSTALL LOWER INSTRUMENT PANEL LH**


- (a) Install the lower instrument panel LH with the 3 bolts <B>.

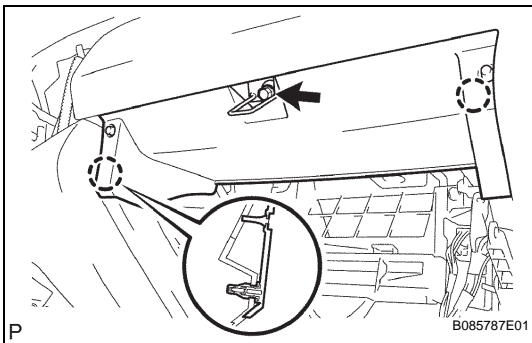**15. INSTALL INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH**

- (a) Engage the 2 clips and install the instrument panel lower finish panel sub-assembly RH.
- (b) Install the bolt <B>.

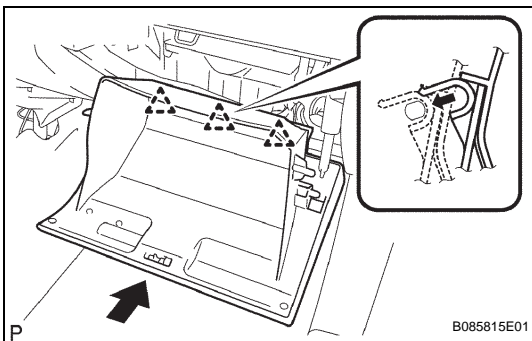**16. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY**


- (a) Install the glove compartment door assembly with 3 hinges, holding it horizontal.

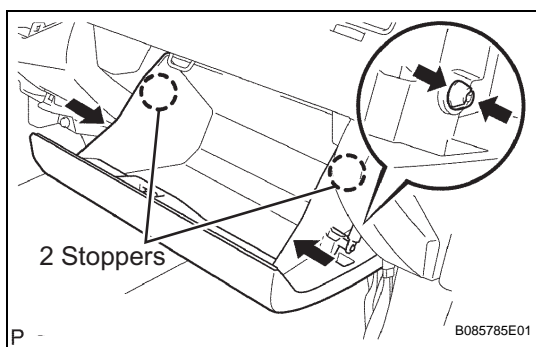

- (b) Slightly deform the upper part of the glove compartment door assembly, and install the glove compartment door assembly.
- (c) Install the glove compartment door stopper onto the glove compartment door.

#### 17. INSTALL INSTRUMENT CLUSTER CENTER FINISH PANEL SUB-ASSEMBLY


- (a) Engage the 10 clips and install the instrument cluster center finish panel sub-assembly.

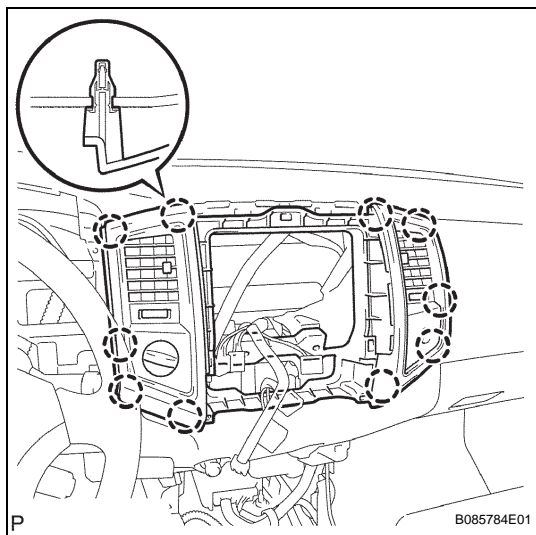

#### 18. INSTALL COMBINATION METER ASSEMBLY


- (a) Connect the 2 connectors.
- (b) Install the combination meter assembly with the 4 screws <E>.

**Torque: 7.0 N\*m (71 kgf\*cm, 62 in.\*lbf)**

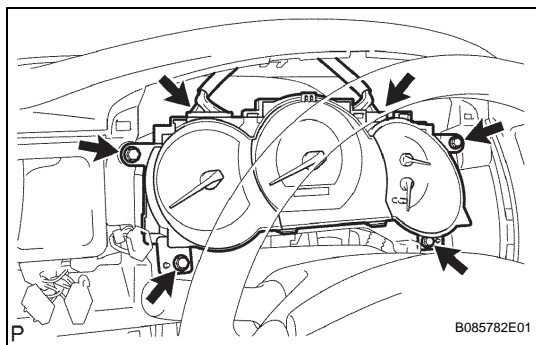

#### 19. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

- (a) Connect the connectors.
- (b) Engage the 6 clips and install the instrument cluster finish panel sub-assembly.
- (c) Install the 2 clips.

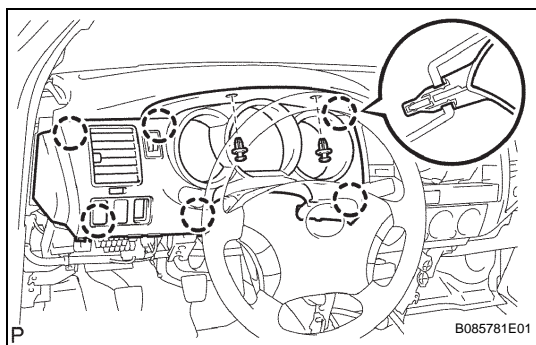




## 20. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

- Connect the connectors.
- Engage the 3 clips and install the lower NO. 1 instrument panel finish panel sub-assembly.
- Install the 2 bolts <B>.


## 21. CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-8](#))

## 22. INSTALL RADIO RECEIVER ASSEMBLY (See page [AV-70](#))

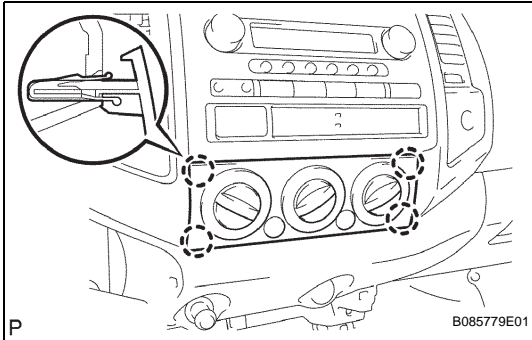


## 23. INSTALL AIR CONDITIONING CONTROL ASSEMBLY

- Connect the 2 connectors.
- Engage the 4 clips and install the air conditioning control assembly.

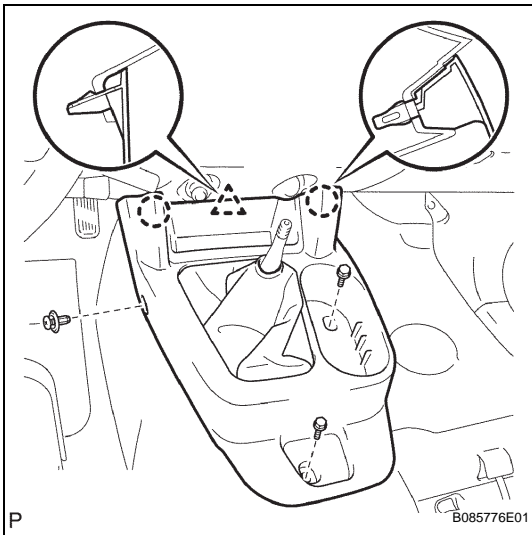


## 24. INSTALL FRONT CONSOLE BOX (for Manual Transmission on Bench Seat Type)

- Engage the 2 clips and claw, and install the front console box.
- Install the clip and 2 bolts <A>.

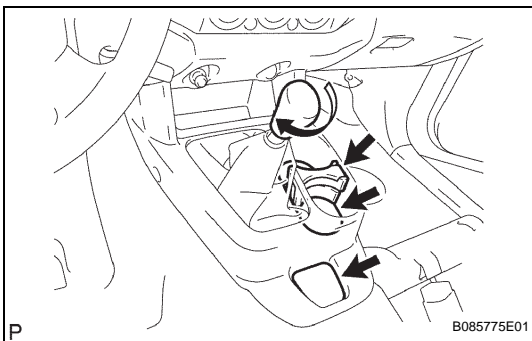


- Install the No. 2 box bottom mat.
- Install the instrument panel cup holder.
- Install the box bottom mat.
- Install the shift knob.

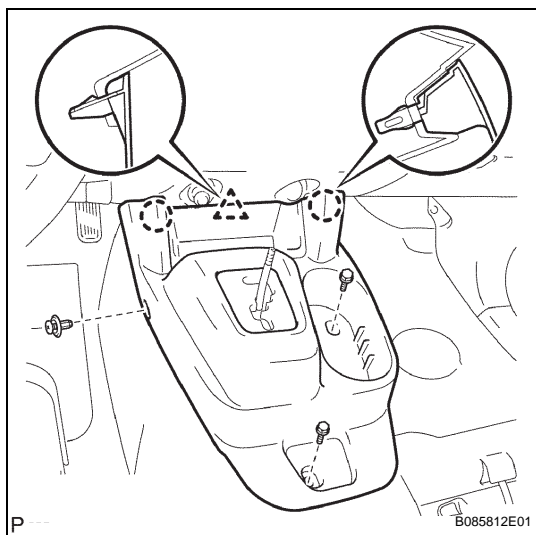


## 25. INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Bench Seat Type)

- (a) Engage the 2 clips and claw, and install the front console box.
- (b) Install the clip and 2 bolts <A>.

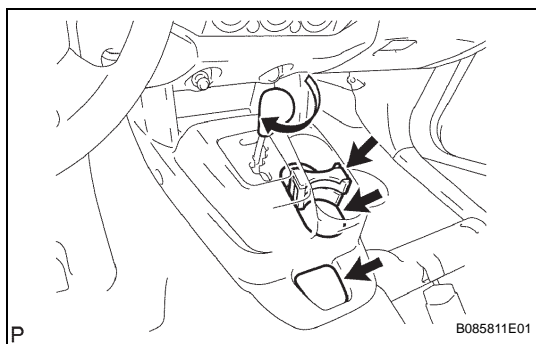


- (c) Install the No. 2 box bottom mat.
- (d) Install the instrument panel cup holder.
- (e) Install the box bottom mat.
- (f) Install the shift knob.

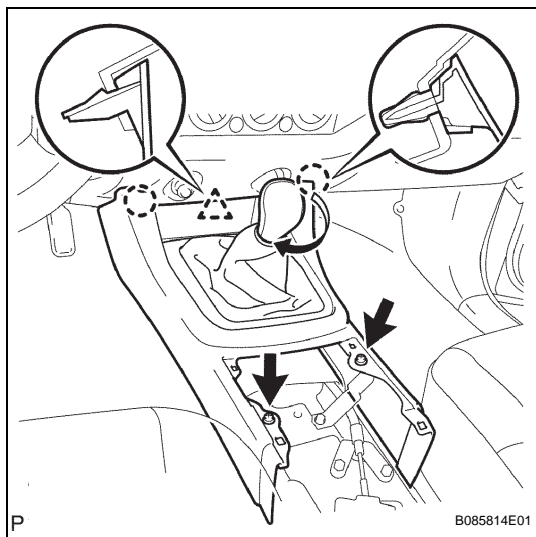


## 26. INSTALL FRONT CONSOLE BOX (for Manual Transmission on Separate Seat Type)

- (a) Engage the 2 clips and claw, and install the front console box.
- (b) Install the 2 screws <F>.
- (c) Install the shift knob.

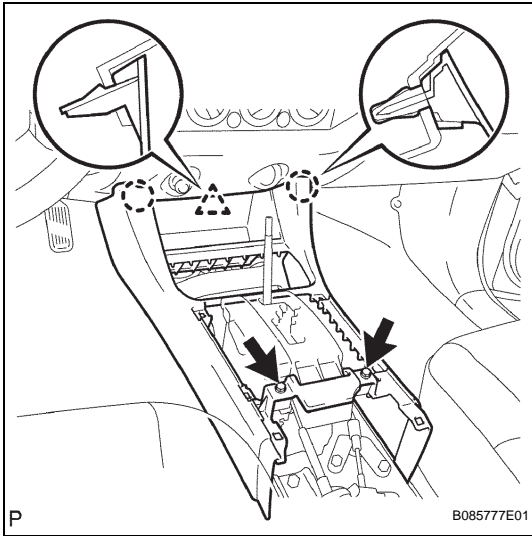


**27. INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Separate Seat Type)**


- (a) Engage the 2 clips and claw, and install the front console box.
- (b) Install the 2 screws <F>.

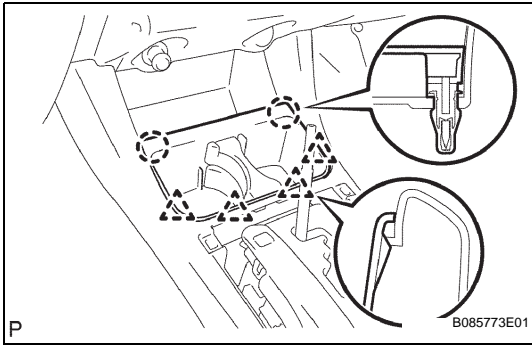**28. INSTALL INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission on Separate Seat Type)**

- (a) Engage the 2 clips and 4 claws, and install the instrument panel cup holder tray.

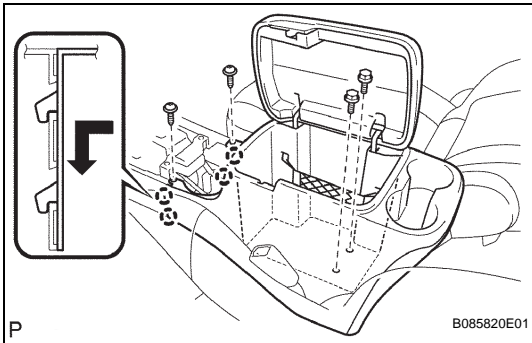
**29. INSTALL REAR CONSOLE BOX ASSEMBLY (for Separate Seat Type)**

- (a) Engage the 4 claws and install the console box rear.
- (b) Install the 2 screws <F> and 2 bolts <B>.

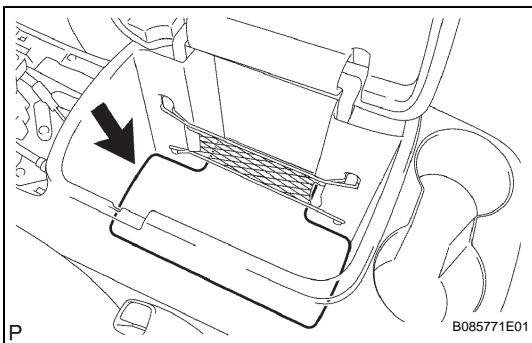


- (c) Install the console box carpet.



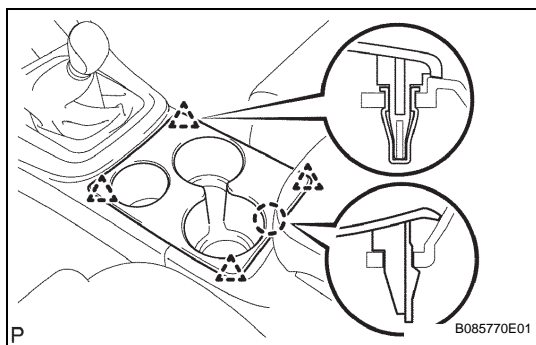


**30. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Manual Transmission on Separate Seat Type)**

- (a) Engage the 4 clips and claw, and remove the console upper panel sub-assembly.

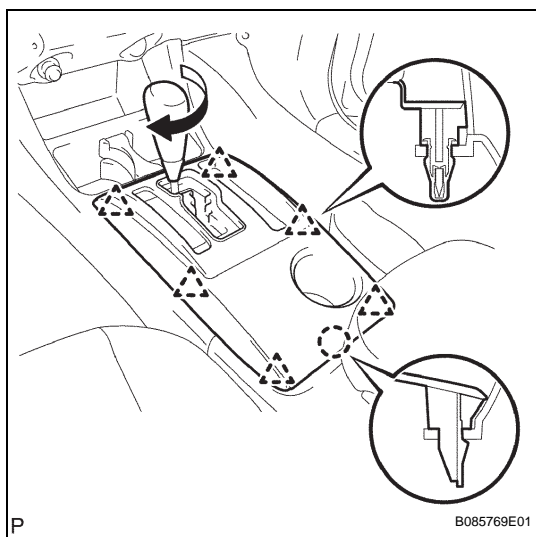


**31. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Automatic Transmission on Separate Seat Type)**

- (a) Engage the 6 clips and claw, and remove the console upper rear panel.  
(b) Install the shift knob.

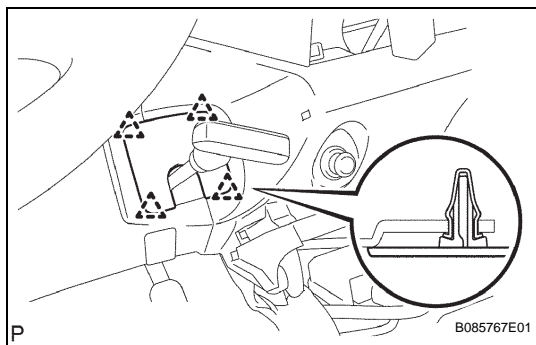

**32. INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake)**

- (a) Engage the 4 clips and install the instrument panel hole cover.

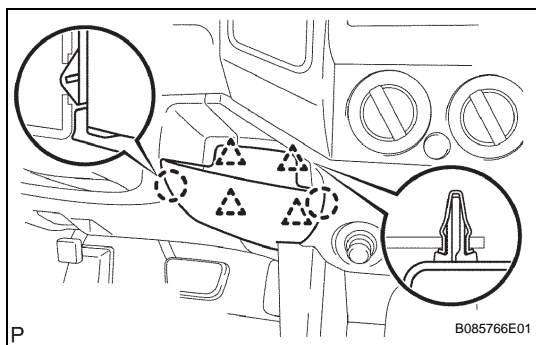

**33. INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake)**

- (a) Engage the 4 clips and 2 claws, and install the instrument panel under tray.

**34. INSTALL FRONT PILLAR GARNISH LH (for Regular Cab) (See page [IR-51](#))**

**35. INSTALL FRONT PILLAR GARNISH LH (for Access Cab) (See page [IR-74](#))**

**36. INSTALL FRONT PILLAR GARNISH LH (for Double Cab) (See page [IR-28](#))**

**37. INSTALL FRONT PILLAR GARNISH RH (for Regular Cab) (See page [IR-52](#))**

**38. INSTALL FRONT PILLAR GARNISH RH (for Access Cab) (See page [IR-74](#))**

39. INSTALL FRONT PILLAR GARNISH RH (for Double Cab) (See page [IR-28](#))
40. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH
41. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH
42. INSTALL COWL SIDE TRIM BOARD LH (for Regular Cab) (See page [IR-52](#))
43. INSTALL COWL SIDE TRIM BOARD LH (for Access Cab) (See page [IR-75](#))
44. INSTALL COWL SIDE TRIM BOARD LH (for Double Cab) (See page [IR-29](#))
45. INSTALL COWL SIDE TRIM BOARD RH (for Regular Cab) (See page [IR-52](#))
46. INSTALL COWL SIDE TRIM BOARD RH (for Access Cab) (See page [IR-75](#))
47. INSTALL COWL SIDE TRIM BOARD RH (for Double Cab) (See page [IR-29](#))
48. INSTALL FRONT DOOR SCUFF PLATE LH (for Regular Cab) (See page [IR-52](#))
49. INSTALL FRONT DOOR SCUFF PLATE LH (for Access Cab) (See page [IR-75](#))
50. INSTALL FRONT DOOR SCUFF PLATE LH (for Double Cab) (See page [IR-29](#))
51. INSTALL FRONT DOOR SCUFF PLATE RH (for Regular Cab) (See page [IR-52](#))
52. INSTALL FRONT DOOR SCUFF PLATE RH (for Access Cab) (See page [IR-75](#))
53. INSTALL FRONT DOOR SCUFF PLATE RH (for Double Cab) (See page [IR-29](#))
54. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))
55. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL  
Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)
56. INSPECT SRS WARNING LIGHT  
(See page [RS-28](#))