


REMOVAL


1. REMOVE REAR SEAT ASSEMBLY

- (a) Remove the 2 bolts and rear seat.

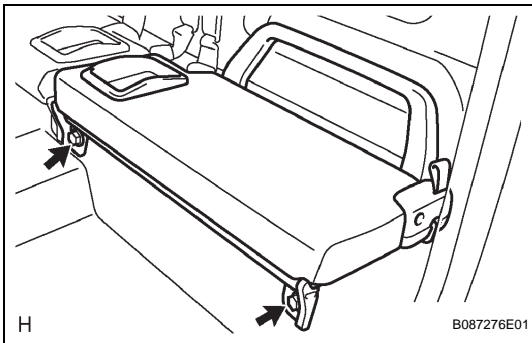


2. REMOVE REAR SEAT BACK LOCK STRIKER SUB-ASSEMBLY

- (a) Open the floor carpet.

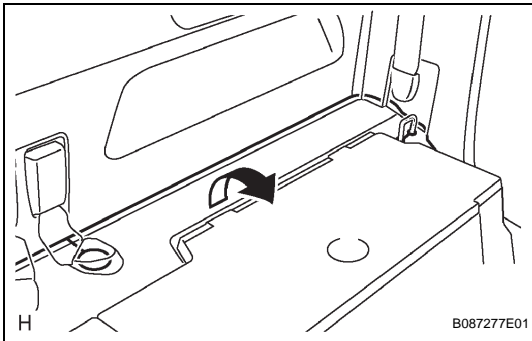


- (b) Remove the 2 bolts and rear seat back lock striker.

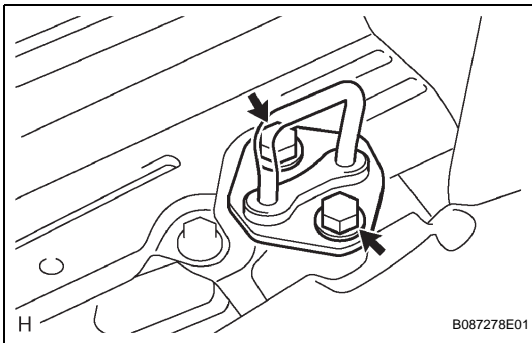


3. REMOVE CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY

- (a) Open the floor carpet.

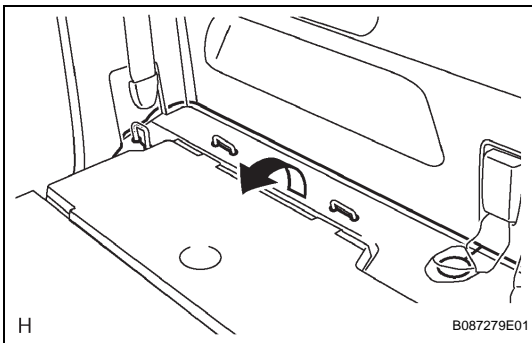


- (b) Remove the 2 bolts and child restraint seat anchor bracket.

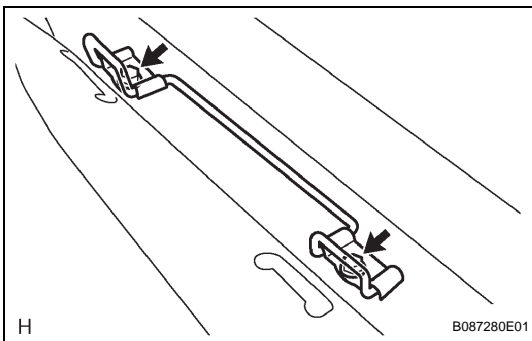

DISASSEMBLY


1. REMOVE REAR SEAT BACK TRAY

- Remove the screw.
- Disengage the 2 claws and remove the sub seat back tray.

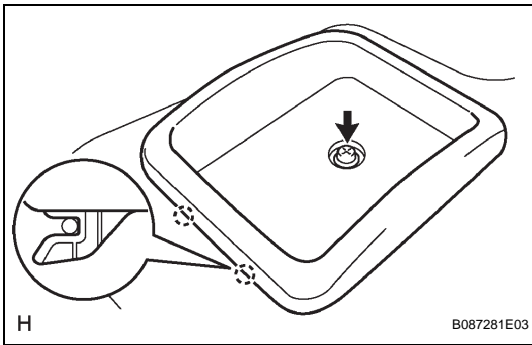


2. REMOVE REAR SEAT BACK COVER

- Remove the 2 screws.
- Disengage the 2 claws and remove the rear seat back cover.

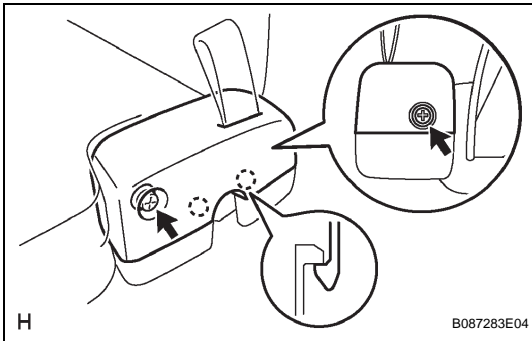


3. REMOVE REAR SEAT BACK LOCK COVER

- Remove the 2 screws and rear seat back lock cover.

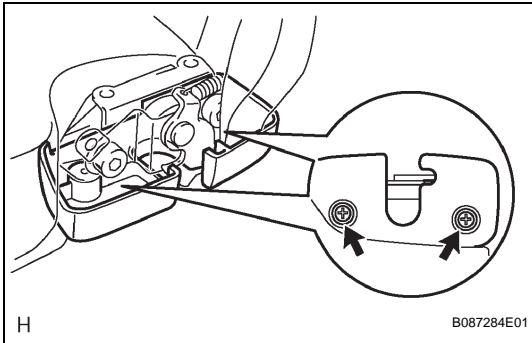

4. REMOVE REAR SEAT BACK LOCK SUB-ASSEMBLY

- Using a socket hexagon wrench 5, remove the 2 bolts and rear seat back lock.

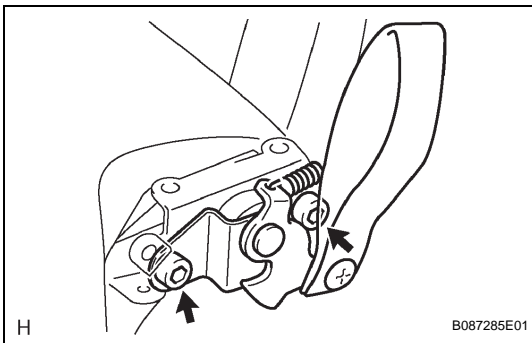


5. REMOVE REAR SEAT CUSHION COVER LH


- Remove the screw and rear seat cushion cover.

6. REMOVE REAR SEAT CUSHION COVER RH


HINT:

Follow the same procedures as for the rear seat cushion cover LH.

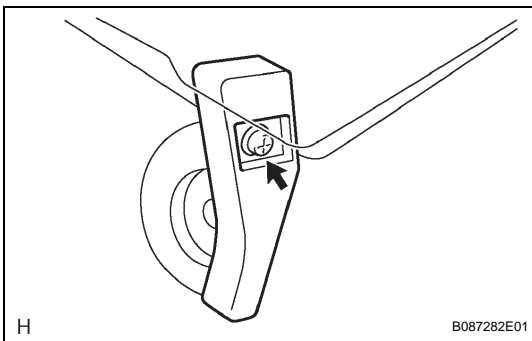


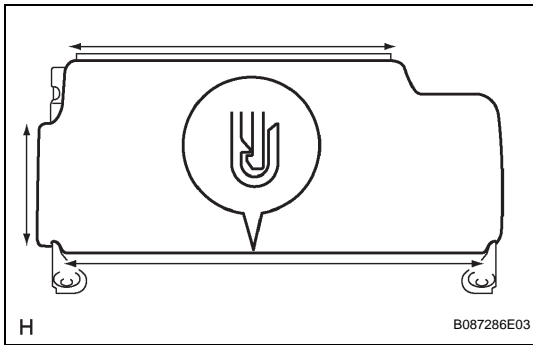**7. REMOVE REAR SEAT CUSHION COVER**


- (a) Disengage the 3 hooks and remove the rear seat cushion cover.

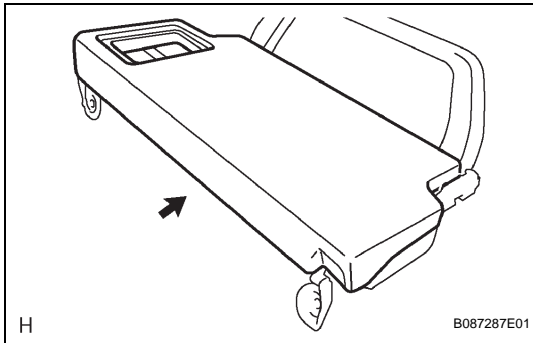**8. REMOVE REAR SEAT CUSHION UPPER PAD**


- (a) Remove the rear seat cushion upper pad.

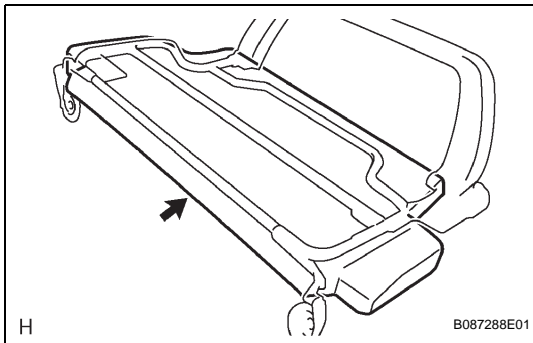**9. REMOVE REAR SEAT CUSHION LOWER PAD**


- (a) Remove the rear seat cushion lower pad.

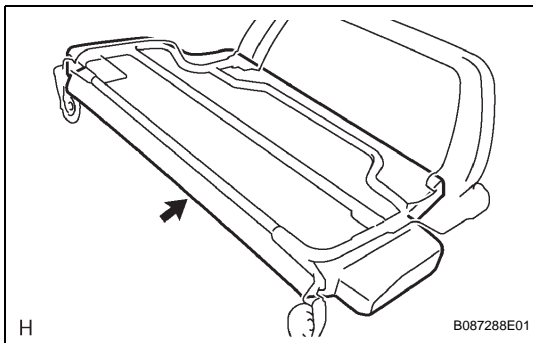**REASSEMBLY****1. INSTALL REAR SEAT CUSHION LOWER PAD**

- (a) Install the rear seat cushion lower pad.

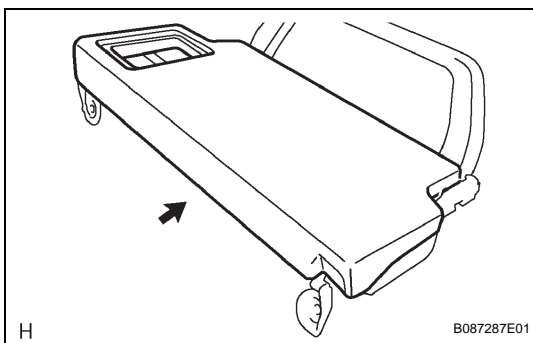
**2. INSTALL REAR SEAT CUSHION UPPER PAD**

- (a) Install the rear seat cushion upper pad.

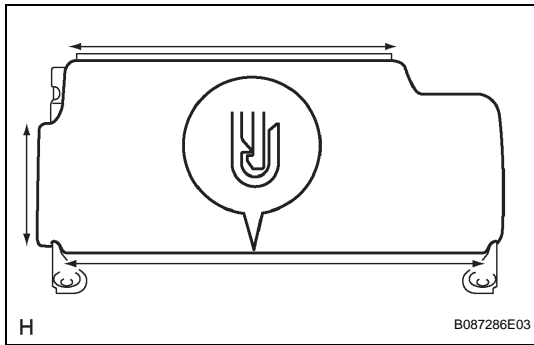

3. INSTALL REAR SEAT CUSHION COVER

- (a) Engage the 3 hooks and install the rear seat cushion cover.

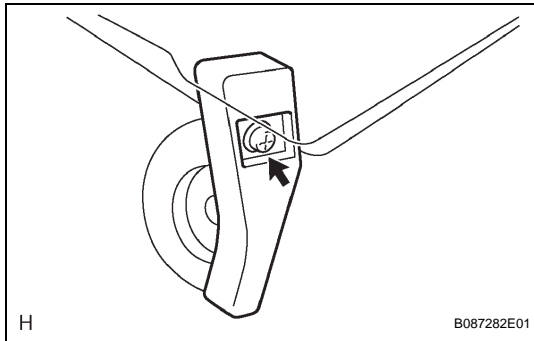


4. INSTALL REAR SEAT CUSHION COVER LH

- (a) Install the rear seat cushion cover with the screw.

5. INSTALL REAR SEAT CUSHION COVER RH

HINT:


Follow the same procedures as for the rear seat cushion cover LH.

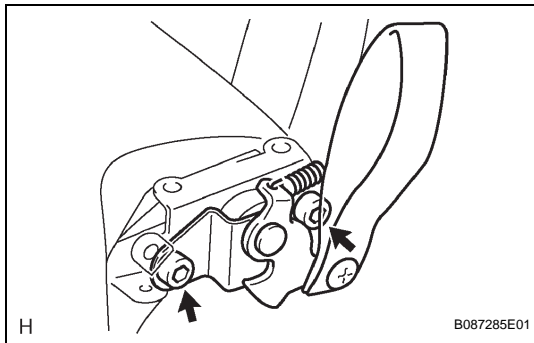

6. INSTALL REAR SEAT BACK LOCK SUB-ASSEMBLY


- (a) Using a socket hexagon wrench 5, install the rear seat back lock with the 2 bolts.

Torque: 7.0 N*m (70 kgf*cm, 62 in.*lbf)

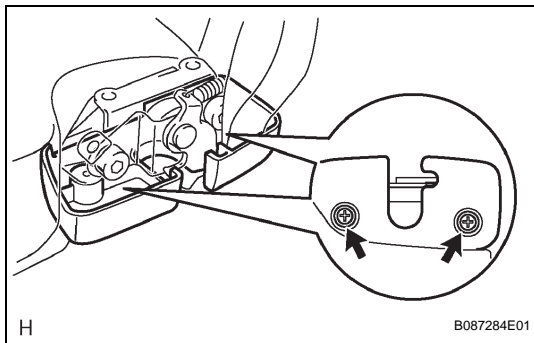


7. INSTALL REAR SEAT BACK LOCK COVER

- (a) Install the rear seat back lock cover with the 2 screws.

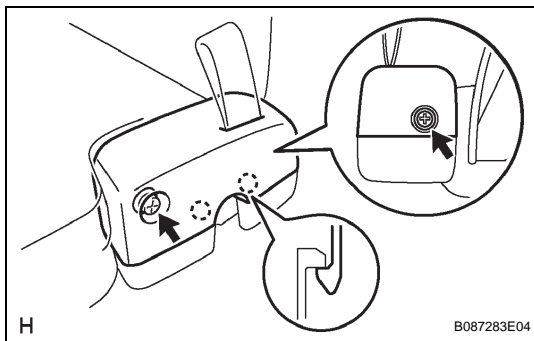


8. INSTALL REAR SEAT BACK COVER

- (a) Engage the 2 claws and install the rear seat back cover.
(b) Tighten the 2 screws.

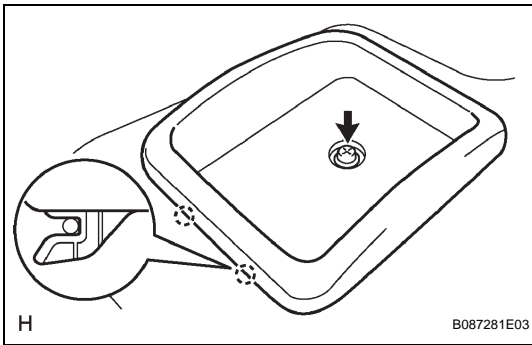**9. INSTALL REAR SEAT BACK TRAY**


- (a) Engage the 2 claws and install the sub seat back tray.
- (b) Tighten the screw.

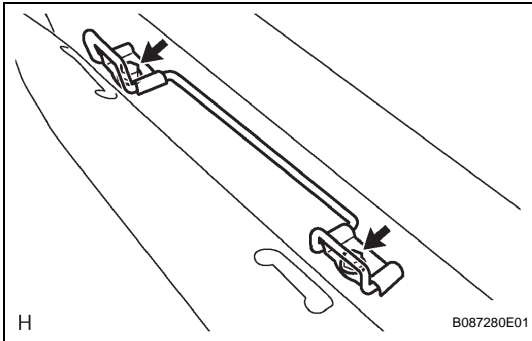**INSTALLATION****1. INSTALL CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY**

- (a) Install the child restraint seat anchor bracket with the 2 bolts.

Torque: 18 N*m (185 kgf*cm, 13 ft.*lbf)


- (b) Close the floor carpet.

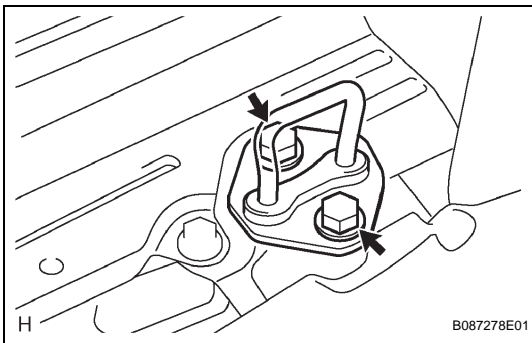**2. INSTALL REAR SEAT BACK LOCK STRIKER SUB-ASSEMBLY**

- (a) Install the rear seat back lock striker with the 2 bolts.

Torque: 18 N*m (185 kgf*cm, 13 ft.*lbf)

- (b) Close the floor carpet.

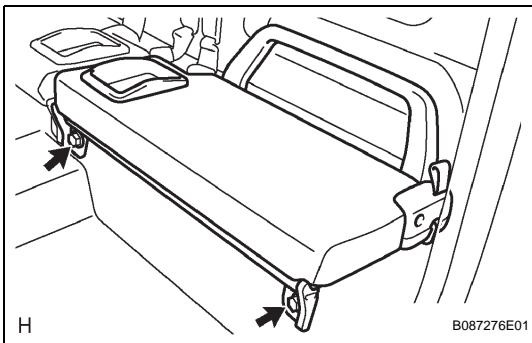**3. INSTALL REAR SEAT ASSEMBLY**

- (a) Install the rear seat with the 2 bolts.

Torque: 18 N*m (185 kgf*cm, 13 ft.*lbf)