


FRONT SEAT INNER BELT ASSEMBLY (for Bench Seat Type)

COMPONENTS

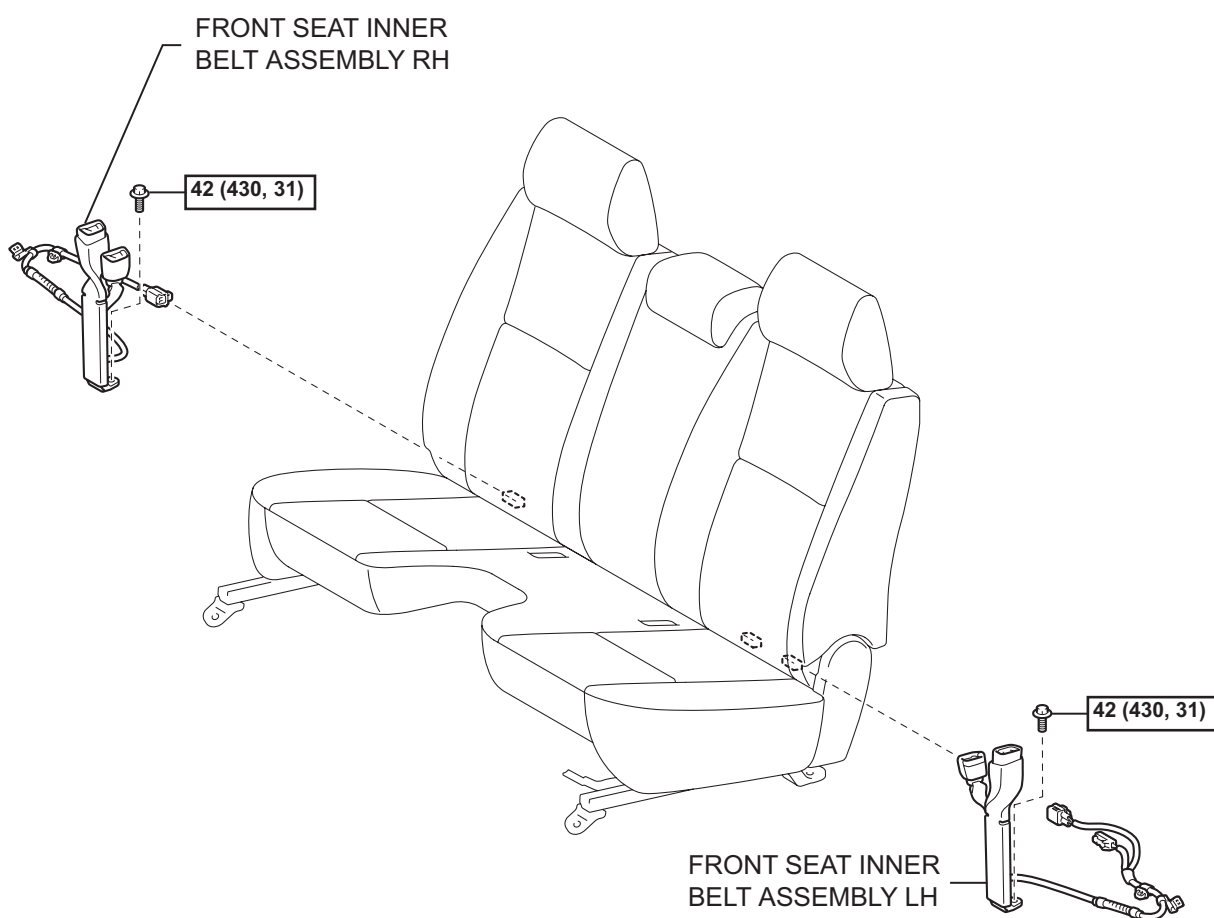


N*m (kgf*cm, ft*lb) : Specified torque

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

2. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

- Slide the front seat to the most forward position.
- Disengage the hook.
- Disconnect the 2 connectors.
- Using a clip remover, remove the wiring harness clamp.
- Remove the wiring harness clamp.
- Remove the bolt and the front seat inner belt.

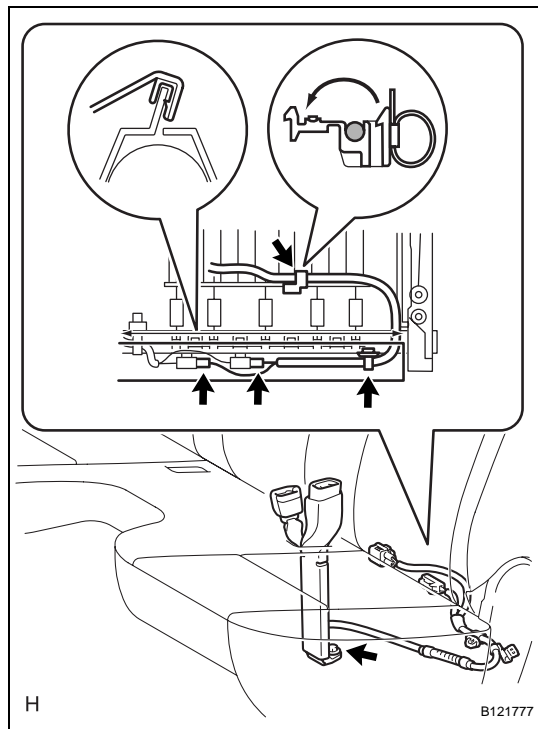

3. REMOVE FRONT SEAT INNER BELT ASSEMBLY RH

- Slide the front seat to the most forward position.
- Disengage the hook.
- Disconnect the connector.
- Using a clip remover, remove the wiring harness clamp.
- Remove the wiring harness clamp.
- Remove the bolt and the front seat inner belt.

