


FOG LIGHT ASSEMBLY

COMPONENTS


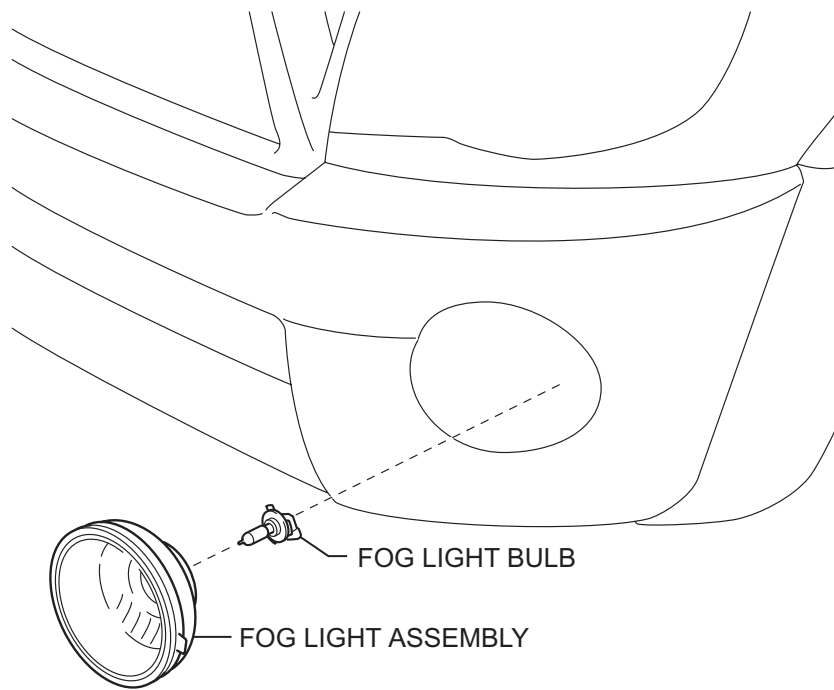


REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

2. REMOVE FOG LIGHT ASSEMBLY

- (a) Disconnect the connector.
- (b) Disengage the 2 claws and remove the fog light assembly LH.

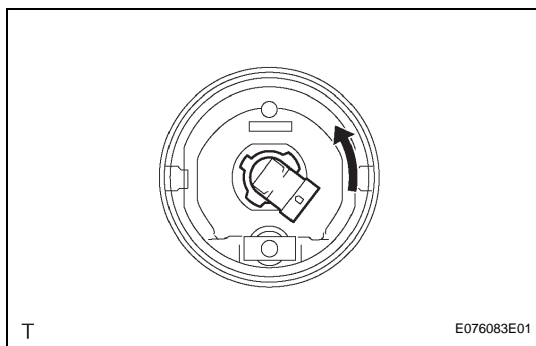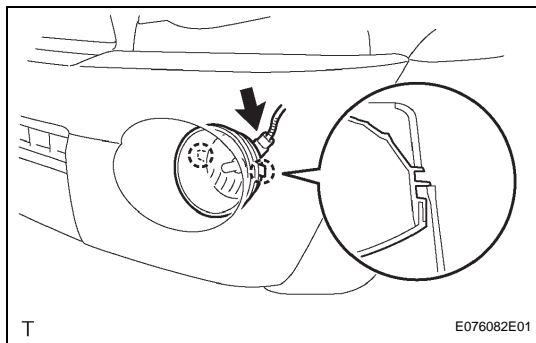

- (c) To remove the fog light socket and bulb, turn them in the direction indicated by the arrow in the illustration.
- (d) Remove the fog light bulb from the light socket.