

REASSEMBLY

CAUTION:



Wear protective gloves. Sharp surface on the rear seat back frame could cause injuries to your hands.

1. INSTALL REAR SEAT BACK COVER

- (a) Using hog ring pliers, install the rear seat back cover with new hog rings.


NOTICE:

- Do not contaminate or scratch the rear seat back cover.
- When installing the hog rings, minimize wrinkles as far as possible.

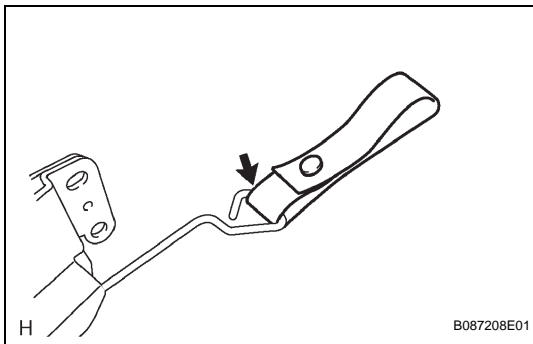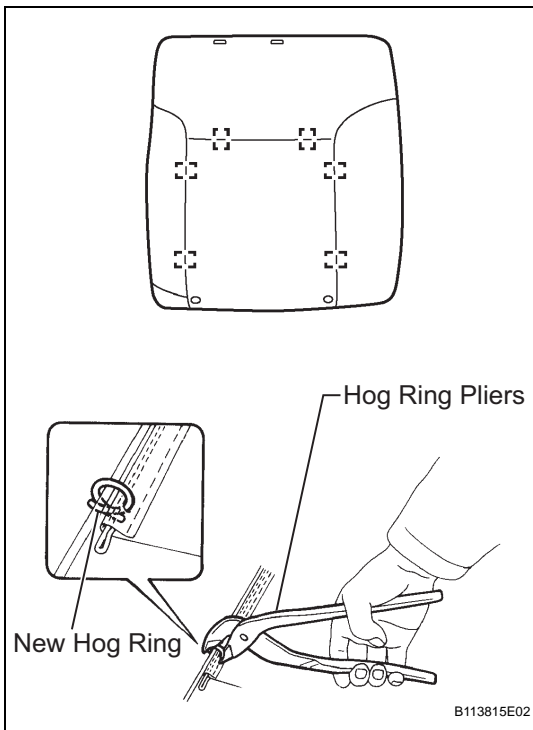


2. INSTALL REAR SEAT LOCK HANDLE

- (a) Install the rear seat lock handle onto the rear seat back lock.

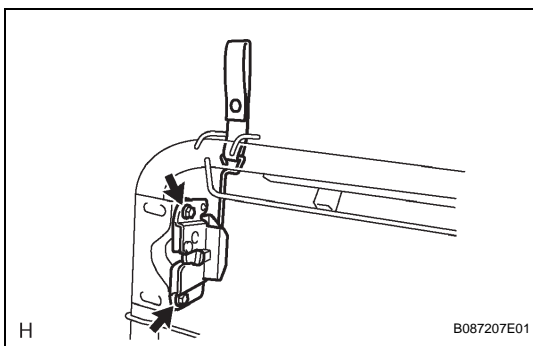


3. INSTALL REAR SEAT BACK LOCK ASSEMBLY

- (a) Install the rear seat back lock with the 2 bolts.
Torque: 30 N*m (305 kgf*cm, 22 ft.*lbf)

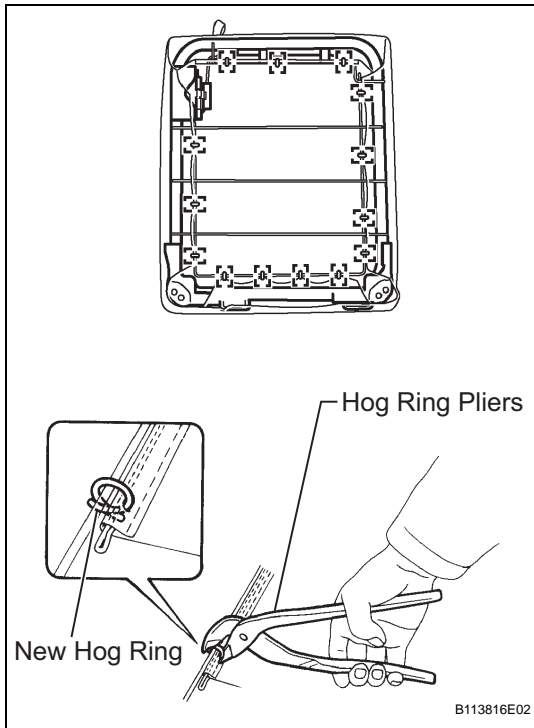

4. INSTALL REAR SEAT BACK FRAME SUB-ASSEMBLY

- Install the rear seat back spring into the rear seat back pad.
- Using hog ring pliers, install new hog rings.

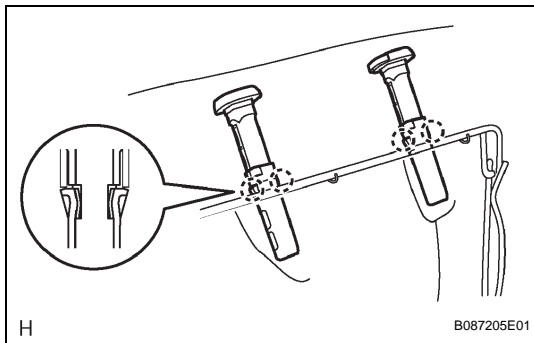


5. INSTALL REAR SEAT HEADREST SUPPORT

HINT:


Follow the same procedures as for the opposite side.

- Engage the 2 claws and install the front seat headrest support.

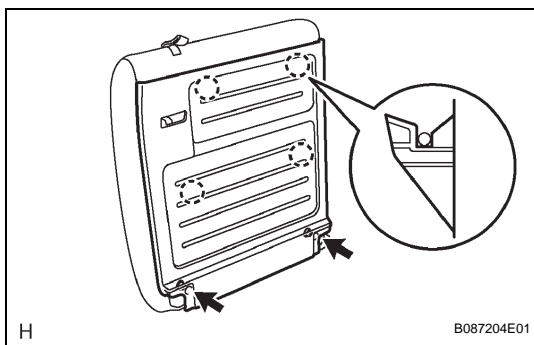


6. INSTALL REAR SEAT BACK BOARD SUB-ASSEMBLY

- Engage the 4 claws and install the rear seat back board.
- Tighten the 2 screws.

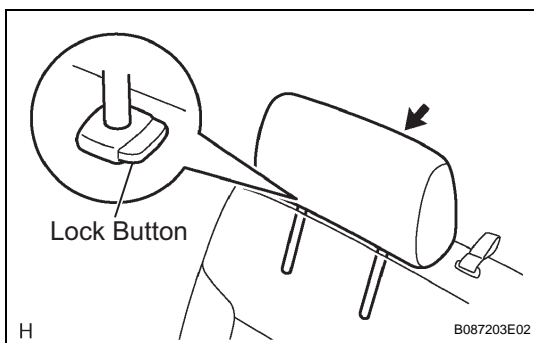

7. INSTALL REAR SEAT HEADREST ASSEMBLY

- Disengage the lock button of the rear seat headrest support and install the rear seat headrest.

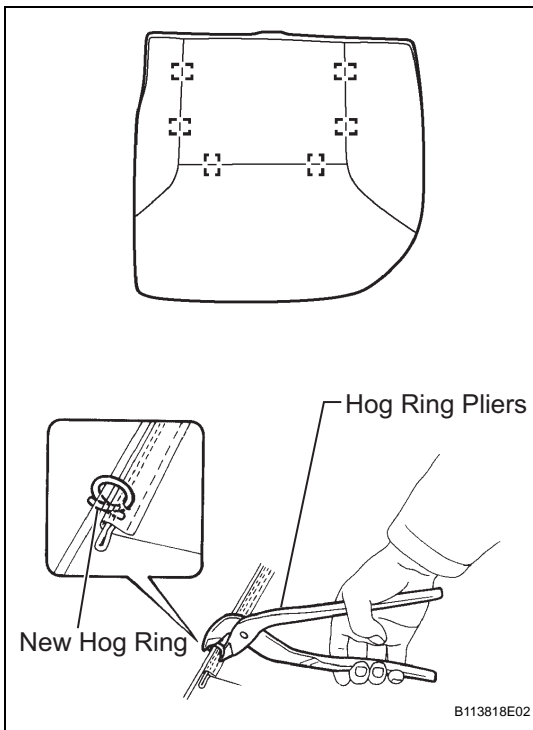


8. INSTALL REAR SEAT CUSHION COVER

- (a) Using hog ring pliers, install the rear seat cushion cover with new hog rings.


NOTICE:

- Do not contaminate or scratch the rear seat cushion cover.
- When installing the hog rings, minimize wrinkles as far as possible.

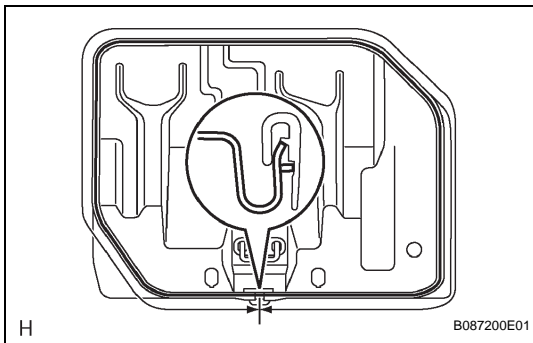

9. INSTALL REAR SEAT CUSHION FRAME SUB-ASSEMBLY

- (a) Engage the hook and install the rear seat cushion frame.

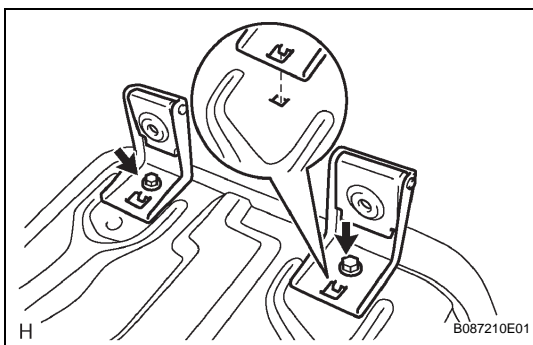


10. INSTALL REAR SEAT CUSHION HINGE SUB-ASSEMBLY

HINT:

Follow the same procedures as for the opposite side.

- (a) Install the rear seat cushion hinge with the bolts.

Torque: 21 N*m (215 kgf*cm, 16 ft.*lbf)

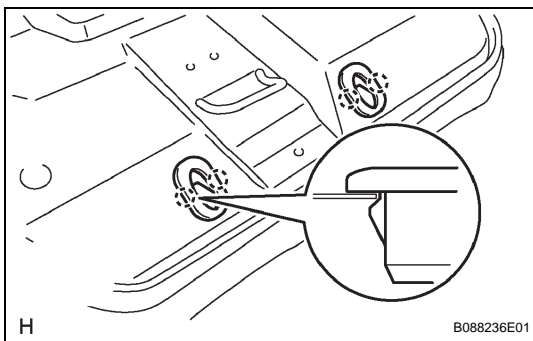


11. INSTALL REAR SEAT HEADREST HOLDER

HINT:


Follow the same procedures as for the opposite side.

- (a) Engage the 2 claws and install the rear seat headrest holder.

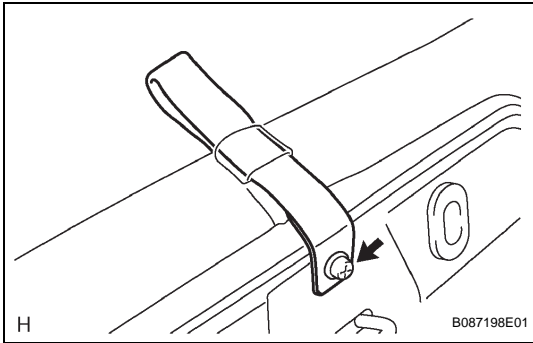

12. INSTALL REAR SEAT CUSHION BAND

- (a) Install the rear seat cushion band with the screw.

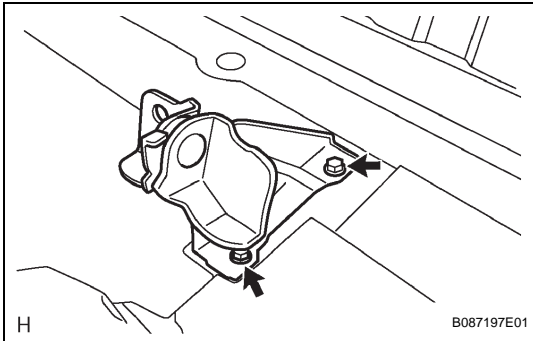


INSTALLATION

1. INSTALL REAR SEAT BACK CENTER HINGE SUB-ASSEMBLY

- (a) Install the rear seat back center hinge with the 2 bolts.

Torque: 18 N*m (185 kgf*cm, 14 ft.*lbf)


2. INSTALL LUGGAGE COMPARTMENT SIDE TRAY (See page [IR-26](#))

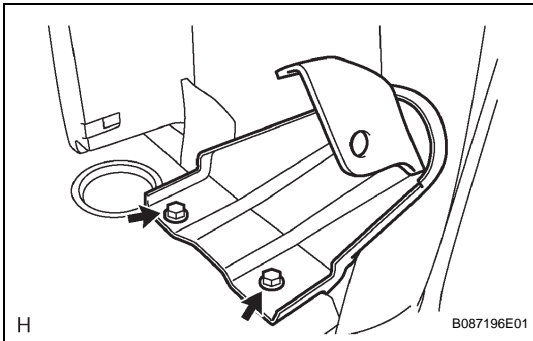

3. INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY

- (a) Install the rear seat back hinge with the 2 bolts.

Torque: 18 N*m (185 kgf*cm, 14 ft.*lbf)

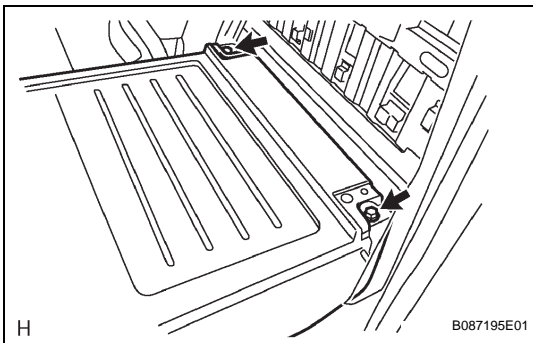


4. INSTALL REAR SEAT BACK ASSEMBLY LH

- (a) Install the rear seat back with the 2 bolts.

Torque: 37 N*m (375 kgf*cm, 27 ft.*lbf)

5. INSTALL REAR SEAT BACK ASSEMBLY RH (See page [SE-90](#))

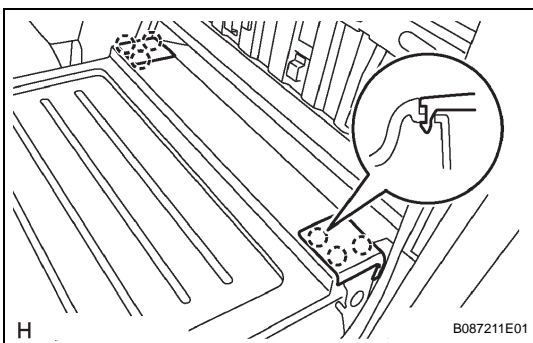

6. INSTALL REAR SEAT BACK HINGE COVER

- (a) for LH Side:

HINT:

Follow the same procedures as for the opposite side.

- (1) Engage the 3 claws and install the rear seat back hinge cover.

- (b) for RH Side:

- (1) Remove the rear seat back hinge cover (See page [SE-90](#)).