


REMOVAL

1. **PRECAUTION**
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY** (for Automatic Transmission on Separate Seat Type) (See page [IP-9](#))
4. **REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY** (for Manual Transmission on Separate Seat Type) (See page [IP-9](#))
5. **REMOVE REAR CONSOLE BOX ASSEMBLY** (for Separate Seat Type) (See page [IP-10](#))
6. **REMOVE INSTRUMENT PANEL CUP HOLDER TRAY** (for Automatic Transmission on Separate Seat Type) (See page [IP-10](#))
7. **REMOVE FRONT CONSOLE BOX** (for Automatic Transmission on Separate Seat Type) (See page [IP-10](#))
8. **REMOVE FRONT CONSOLE BOX** (for Manual Transmission on Separate Seat Type) (See page [IP-11](#))
9. **REMOVE FRONT CONSOLE BOX** (for Automatic Transmission on Bench Seat Type) (See page [IP-11](#))
10. **REMOVE FRONT CONSOLE BOX** (for Manual Transmission on Bench Seat Type) (See page [IP-11](#))
11. **REMOVE CENTER AIRBAG SENSOR ASSEMBLY**
 - (a) Disconnect the holder (with connectors) from the center airbag sensor assembly.
 - (b) Remove the 3 bolts and the center airbag sensor assembly.

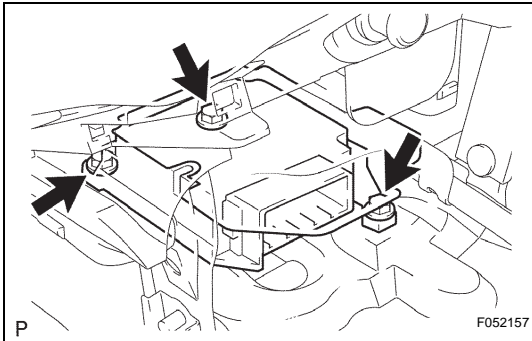

INSTALLATION

1. INSTALL CENTER AIRBAG SENSOR ASSEMBLY

- (a) Check that the ignition switch is turned to OFF.
- (b) Check that the cable is disconnected from the battery negative terminal.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Provisionally install the air bag sensor assembly center with the 3 bolts.

NOTICE:

- If the center airbag sensor assembly has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the center airbag sensor assembly, make sure that the SRS wiring does not interfere with any other parts and that it is not pinched between other parts.
- (d) Tighten the 3 bolts to the specified torque.
Torque: 17.5 N*m (179 kgf*cm, 13 ft.*lbf)
 - (e) Check that there is no slack in the installation parts of the center airbag sensor assembly.
 - (f) Connect the holder (with connectors) to the center airbag sensor assembly.
 - (g) Check that the waterproof sheet is properly set.

2. INSTALL FRONT CONSOLE BOX (for Manual Transmission on Bench Seat Type) (See page [IP-22](#))

3. INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Bench Seat Type) (See page [IP-23](#))

4. INSTALL FRONT CONSOLE BOX (for Manual Transmission on Separate Seat Type) (See page [IP-23](#))

5. INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))

6. INSTALL INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))

7. INSTALL REAR CONSOLE BOX ASSEMBLY (for Separate Seat Type) (See page [IP-24](#))

8. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Manual Transmission on Separate Seat Type) (See page [IP-25](#))

9. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Automatic Transmission on Separate Seat Type) (See page [IP-25](#))

10. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

11. INSPECT SRS WARNING LIGHT

(See page [RS-28](#))