
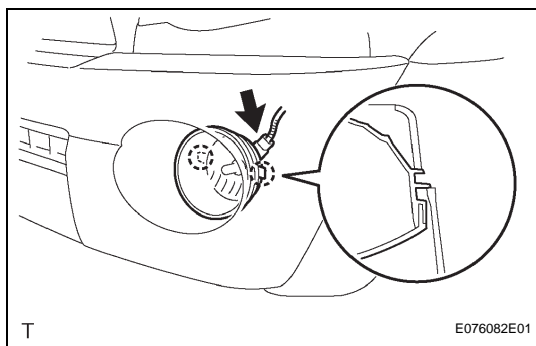


INSTALLATION

1. INSTALL FOG LIGHT ASSEMBLY

- (a) Install the fog light bulb into the light socket.
- (b) To install the fog light bulb socket and bulb, turn them in the direction indicated by the arrow in the illustration.

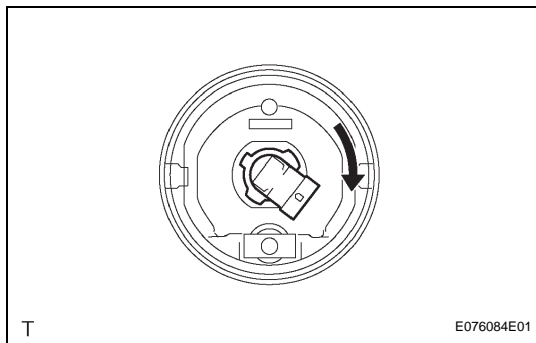

- (c) Engage the 2 claws and install the fog light assembly LH.
- (d) Connect the connector.

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

3. VEHICLE PREPARATION FOR FOG LIGHT AIM ADJUSTMENT (See page [LI-14](#))

4. PREPARATION FOR FOG LIGHT AIMING (See page [LI-14](#))

5. FOG LIGHT AIMING INSPECTION (See page [LI-16](#))

6. FOG LIGHT AIMING ADJUSTMENT (See page [LI-17](#))