
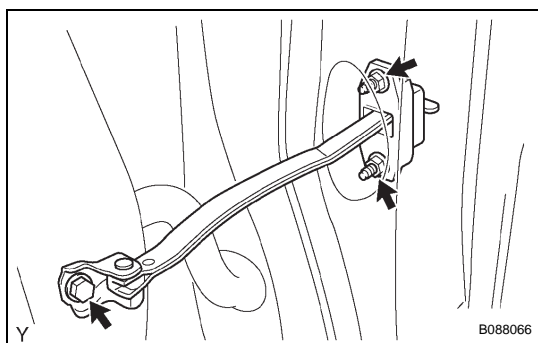
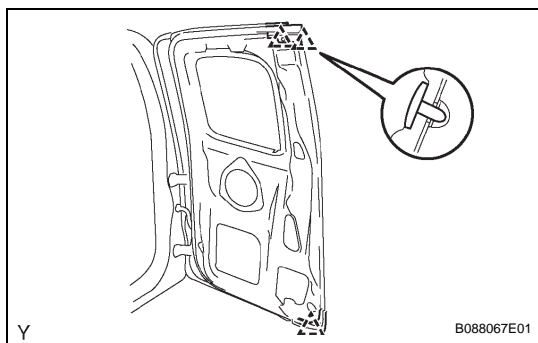


- (j) Adjust the striker position by slightly loosening the striker mounting screws with a torx socket wrench T40 and hitting the striker with a plastic hammer (lower side).
- (k) Using a torx socket wrench T40, tighten the striker mounting screws after the adjustment.  
**Torque: 23 N\*m (235 kgf\*cm, 17 ft.\*lbf)**
- (l) Connect the cable to the negative battery terminal.  
**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**
- (m) Inspect the SRS warning lamp (See page RS-28).
- (n) Install the roof side inner garnish LH (See page IR-71).
- (o) Install the roof side inner garnish cap LH (See page IR-75).

## REASSEMBLY


### 1. INSTALL REAR DOOR WEATHERSTRIP LH

- (a) Engage the 20 clips and install a new rear door weatherstrip LH.
- (b) Engage the 3 clips.
- (c) Remove the tab tape at both ends of 2-sided tape attached to the weather strip, and attach the weather strip to the door panel with the 2-sided tape.

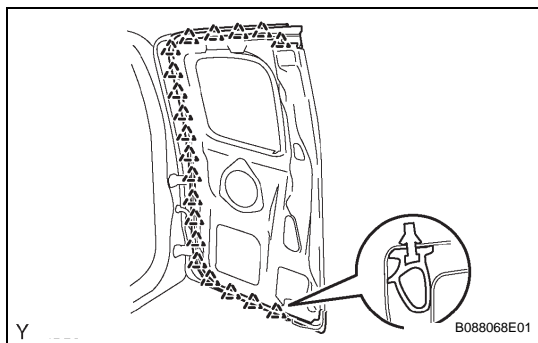

### 2. INSTALL REAR DOOR CHECK ASSEMBLY LH

- (a) Apply MP grease to the sliding areas of the check.
- (b) Install the access panel check assembly LH onto the door panel with the 2 nuts.  
**Torque: 5.5 N\*m (56 kgf\*cm, 49 in.\*lbf)**
- (c) Apply adhesive to the threads of the bolt.  
**Adhesive:**  
**Part No. 08833-00070, THREE BOND 1324 or equivalent**
- (d) Install the access panel check assembly LH onto the body panel with the bolt.  
**Torque: 30 N\*m (306 kgf\*cm, 22 ft.\*lbf)**

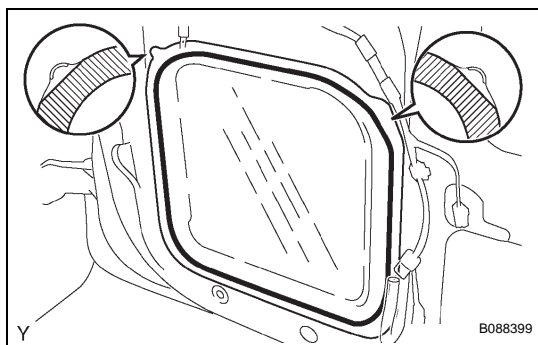


### 3. INSTALL REAR DOOR SERVICE HOLE COVER LH

- (a) Install a new rear door service hole cover LH.

HINT:


After attaching the service hole cover, check the quality of the seal.

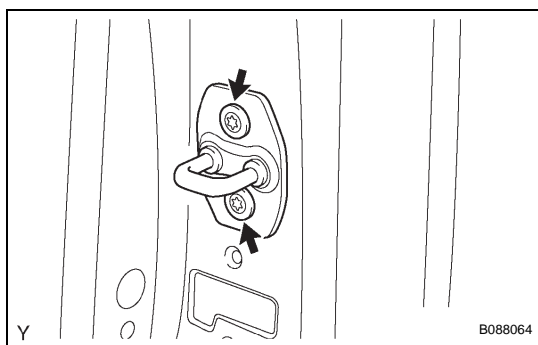

### 4. INSTALL FRONT DOOR LOCK STRIKER PLATE ASSEMBLY

- (a) Using a torx socket wrench T40 , install the door lock striker plate assembly with the 2 screws.

**Torque: 23 N\*m (235 kgf\*cm, 17 ft.\*lbf)**

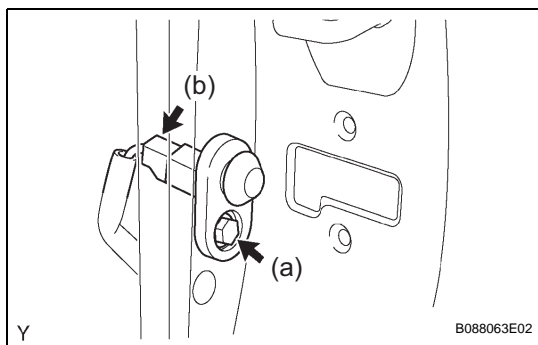


### 5. INSTALL FRONT DOOR COURTESY LAMP SWITCH ASSEMBLY

- (a) Install the front door courtesy lamp switch with the bolt.

**Torque: 9.0 N\*m (92 kgf\*cm, 80 in.\*lbf)**


- (b) Connect the connector.

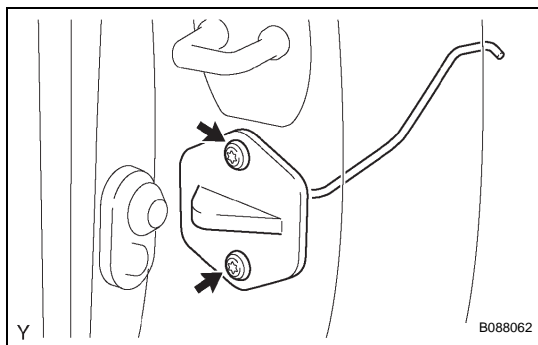

### 6. INSTALL REAR DOOR INSIDE LOCKING CABLE ASSEMBLY LH

- (a) Using a torx socket wrench T25 , install the access panel lock cancel lever assembly LH with the 2 screws.

**Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)**

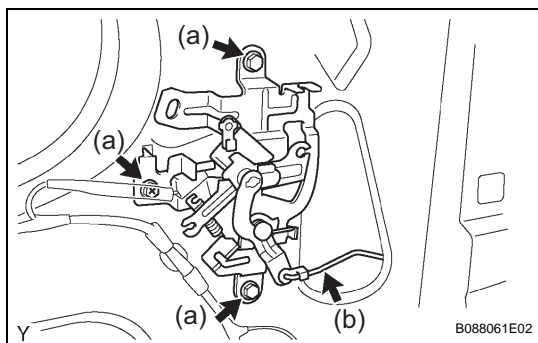


### 7. INSTALL ACCESS PANEL LOCK REMOTE CONTROL ASSEMBLY LH

- (a) Install the access panel lock remote control assembly LH with the 2 bolts and the screw.

**Torque: 12 N\*m (122 kgf\*cm, 9 ft.\*lbf)**

- (b) Connect the rod.

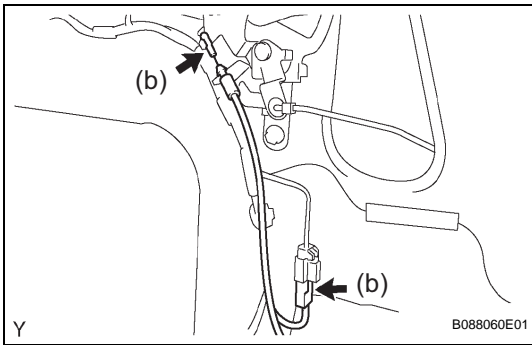


## 8. INSTALL ACCESS PANEL LOWER LOCK ASSEMBLY LH

- (a) Install the access panel lower lock assembly LH onto the access door.
- (b) Connect the connector and access lock control cable sub-assembly.

- (c) Using a torx socket wrench T30 , install the 3 screws.

**Torque: 12 N\*m (122 kgf\*cm, 9 ft.\*lbf)**

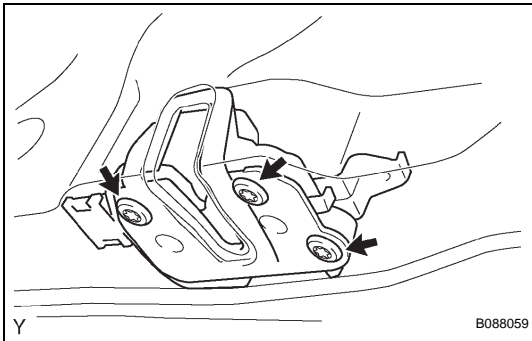


ED



## 9. INSTALL ACCESS PANEL UPPER LOCK ASSEMBLY LH

- (a) Provisionally install the access panel upper lock assembly LH with the 3 bolts.
- (b) Tighten the 3 bolts in the order A to C as indicated.

**Torque: 12 N\*m (122 kgf\*cm, 9 ft.\*lbf)**

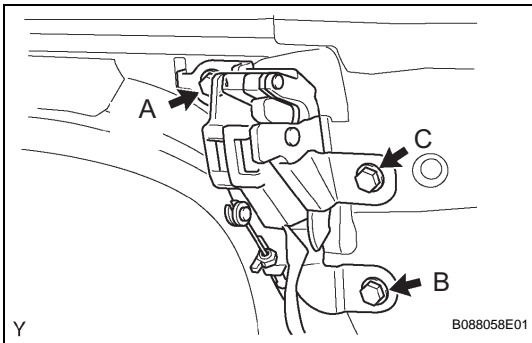

- (c) Connect the connector, connector clamp and access lock control cable sub-assembly.

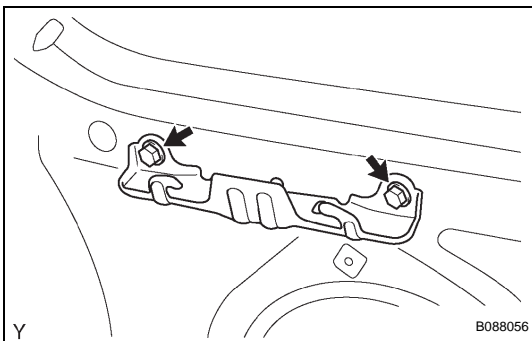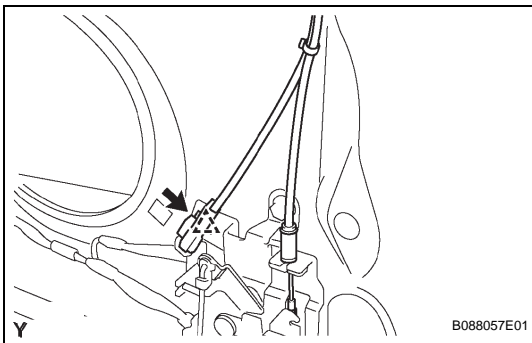


## 10. INSTALL NO. 1 DOOR TRIM BRACKET RH

- (a) Install the No. 1 door trim bracket with the 2 screws.

## 11. INSTALL REAR SPEAKER ASSEMBLY (See page [AV-88](#))


## 12. INSTALL FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY (See page [SB-38](#))

## 13. INSTALL FRONT SEAT OUTER BELT ASSEMBLY LH (See page [SB-38](#))

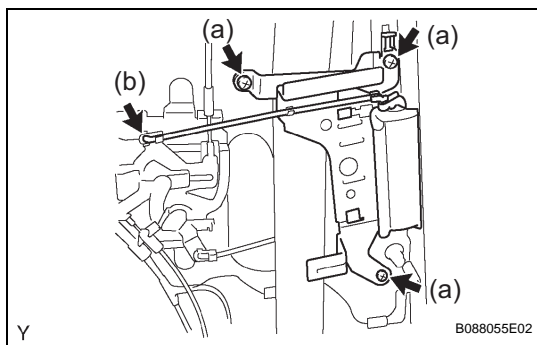


#### 14. INSTALL ACCESS PANEL INSIDE HANDLE SUB-ASSEMBLY LH

- (a) Install the access panel inside handle sub-assembly inside LH with the 3 screws.
- (b) Connect the rod.

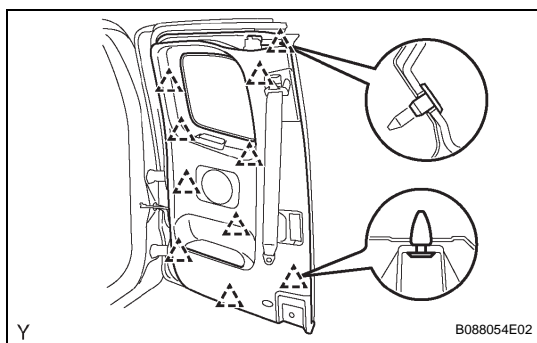


#### 15. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


- (a) Install the rear door trim board sub-assembly LH.

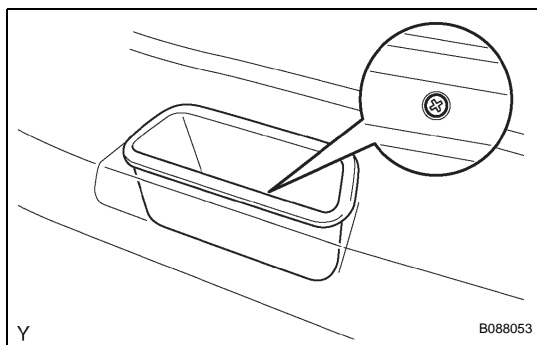


- (b) Install the door pull handle with the screw.

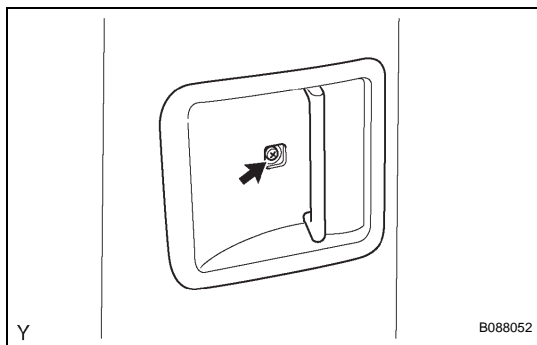


- (c) Install the access panel inside handle bezel LH with the screw.
- (d) Close the cover.

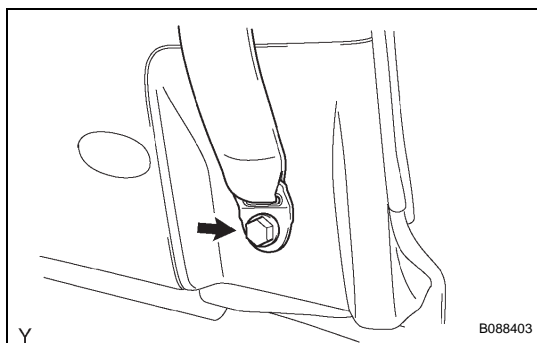

- (e) Install the outer front seat belt assembly LH (floor side) with the bolt.  
**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**

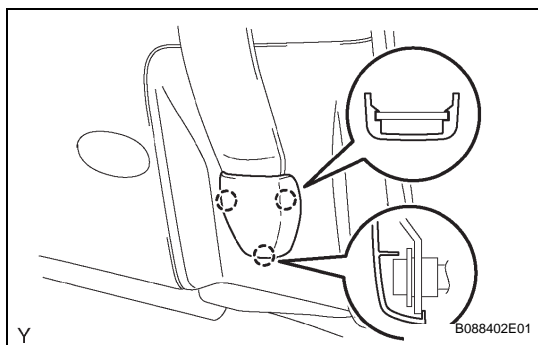**16. INSTALL LAP BELT OUTER ANCHOR COVER**

- (a) Engage the 3 claws and install the lap belt outer anchor cover.

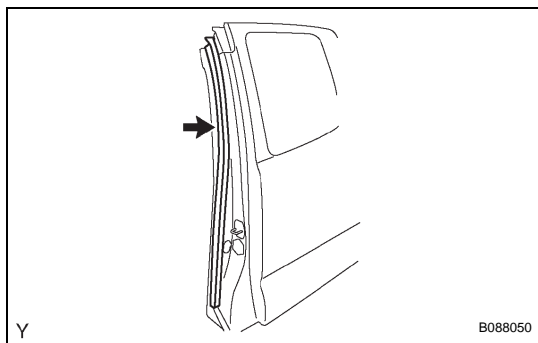**17. INSTALL ACCESS PANEL REAR WEATHERSTRIP LH**

- (a) Install the rear access panel weatherstrip LH.

**18. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)