


SEAT POSITION SENSOR (for Separate Seat Type)

COMPONENTS

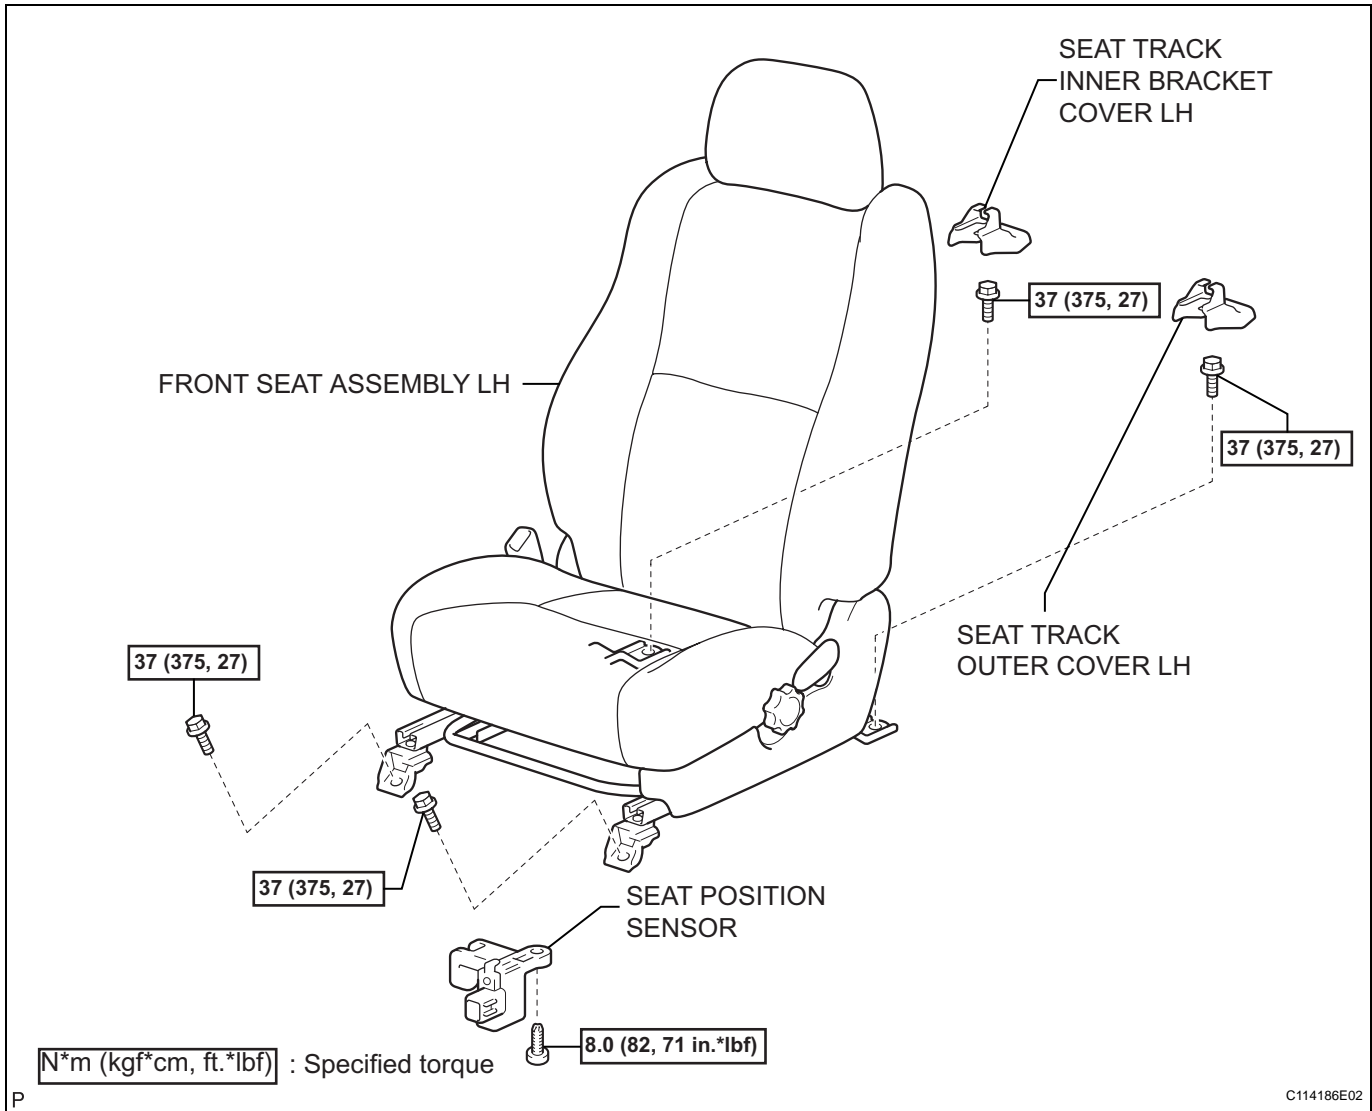

ON-VEHICLE INSPECTION

1. SEAT POSITION SENSOR (for Vehicle not Involved in Collision)

- (a) Perform a diagnostic system check (See page [RS-34](#)).

2. SEAT POSITION SENSOR (for Vehicle Involved in Collision)

- (a) Perform a diagnostic system check (See page [RS-34](#)).
- (b) Even if the airbag was not deployed, perform a visual check for damage to the seat position sensor. If there are any defects as mentioned below, replace the seat position sensor with a new one:
 - Cracks, dents or chips in the case.
 - Cracks or other damage to the connector.

CAUTION:

For removal and installation procedures of the seat position sensor, see page [RS-617](#), [RS-620](#), and be sure to follow the correct procedure.