

## REMOVAL

### CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (w/ Front Seat Side Airbag) (See page [RS-1](#)).

#### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL



Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working (w/ Front Seat Side Airbag).

#### 2. REMOVE SEAT TRACK COVER

##### HINT:

Follow the same procedures as for the opposite side.


- (a) Disengage the 2 claws and remove the seat track cover.

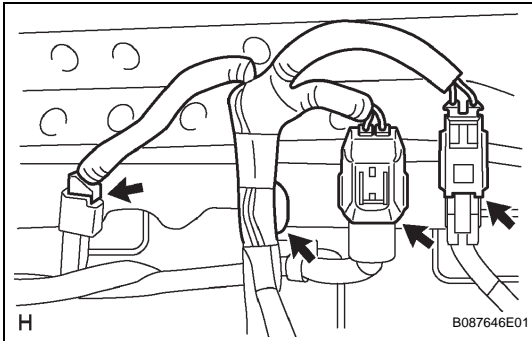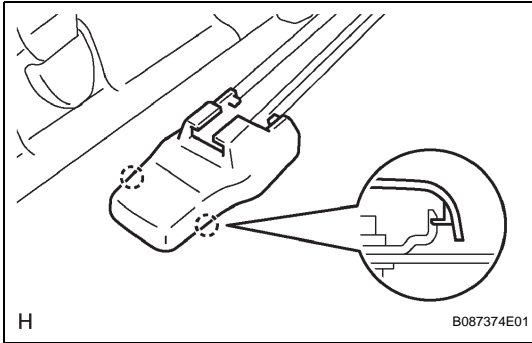

#### 3. REMOVE FRONT SEAT ASSEMBLY

- (a) Disconnect the 2 connectors.
- (b) w/ Front Seat Side Airbag:
  - (1) Disconnect the connector.
- (c) Using a clip remover, remove the wire harness clamp.

- (d) Remove the 4 bolts and front seat.

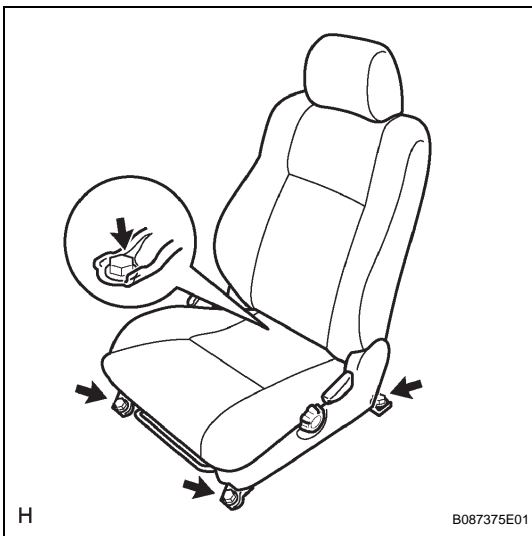


## DISASSEMBLY

### CAUTION:

Wear protective gloves. Sharp surface on the front seat with adjuster frame could cause injuries to your hands.


#### 1. REMOVE FRONT SEAT HEADREST ASSEMBLY

- Disengage the lock button of the front seat headrest support and remove the front seat headrest.

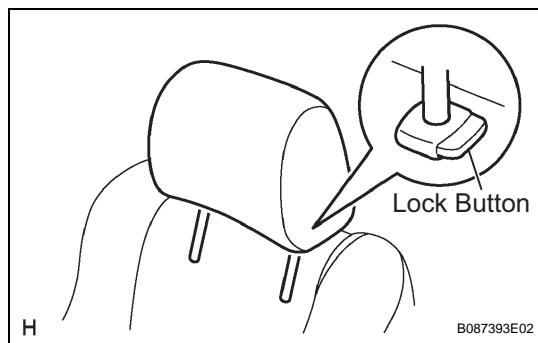


#### 2. REMOVE LUMBAR ADJUSTER DIAL

- Pull the lumbar adjuster dial outward.

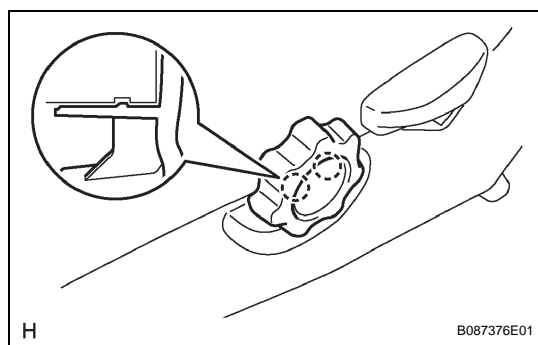


#### 3. REMOVE RECLINING ADJUSTER RELEASE HANDLE


- Using a screwdriver with its tip taped in protective tape, disengage the claw and remove the reclining adjuster release handle.

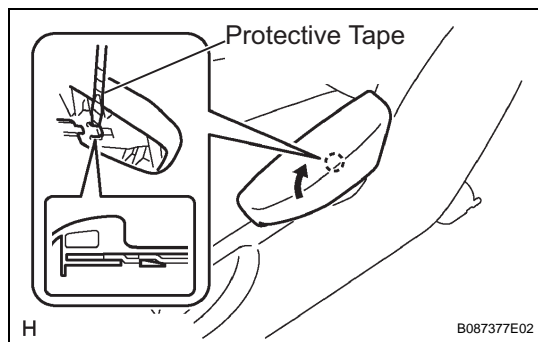


#### 4. REMOVE FRONT SEAT CUSHION SHIELD LH

- Remove the screw.
- Disengage the 2 claws and clip, and remove the front seat cushion shield.

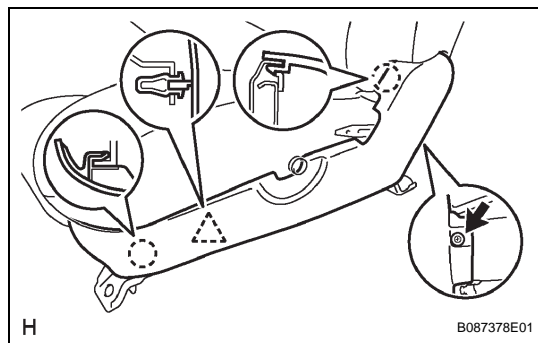


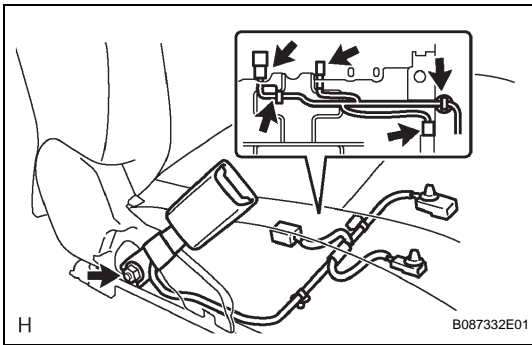**5. REMOVE FRONT SEAT INNER BELT ASSEMBLY**


- (a) Using a clip remover, remove the wire harness clamp and 2 connector clamps.
- (b) Remove the wire harness clamp.
- (c) Disconnect the seat position airbag sensor connector.
- (d) Remove the nut and front seat inner belt.

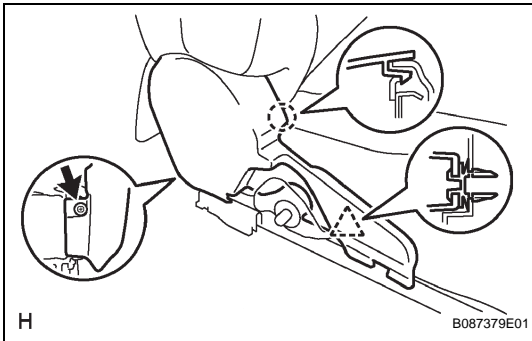**6. REMOVE FRONT SEAT CUSHION INNER SHIELD**

- (a) Remove the screw.
- (b) Disengage the claw and clip, and remove the front seat cushion inner shield.

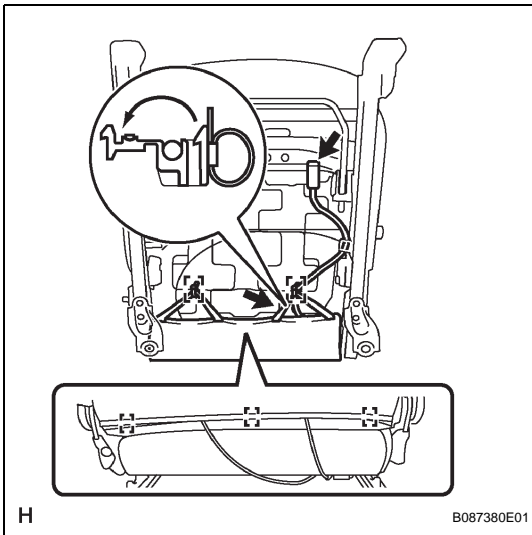**7. REMOVE FRONT SEAT HEADREST SUPPORT**

- (a) w/ Front Seat Side Airbag:
  - (1) Using a clip remover, remove the connector clamp.
  - (2) Remove the wire harness clamp.
- (b) Remove the 5 hog rings.

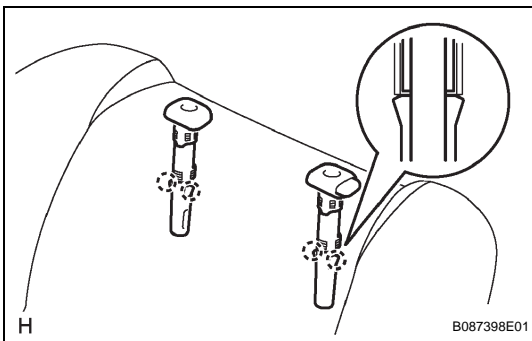


- (c) Disengage the 2 claws and remove the front seat headrest support.


**HINT:**

Follow the same procedures as for the opposite side.


SE

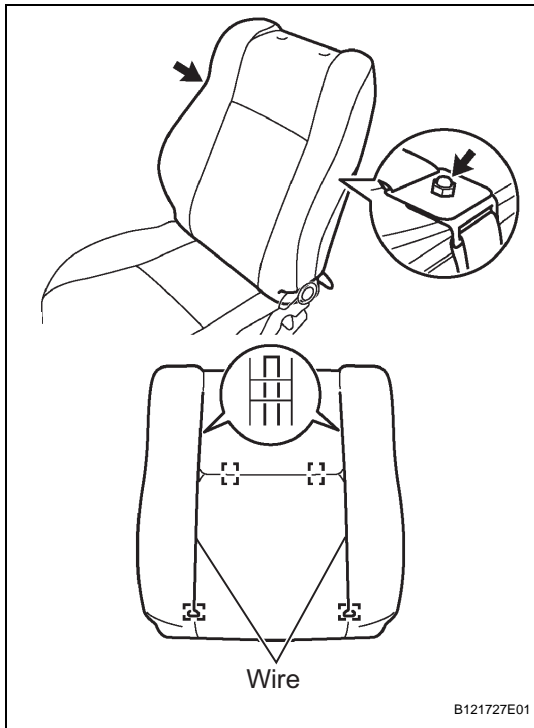**8. REMOVE FRONT SEAT BACK COVER**


- (a) Remove the 2 hog rings.
- (b) Remove the 2 wires.

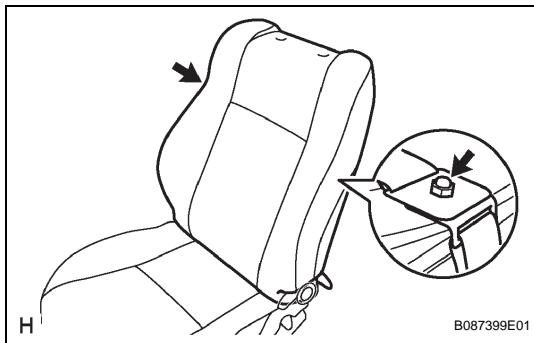


- (c) w/ Front Seat Side Airbag:
  - (1) Remove the nut and strap.
- (d) Remove the 2 hog rings and front seat back cover.
- (e) Remove the front seat back pad from the front seat frame adjuster.

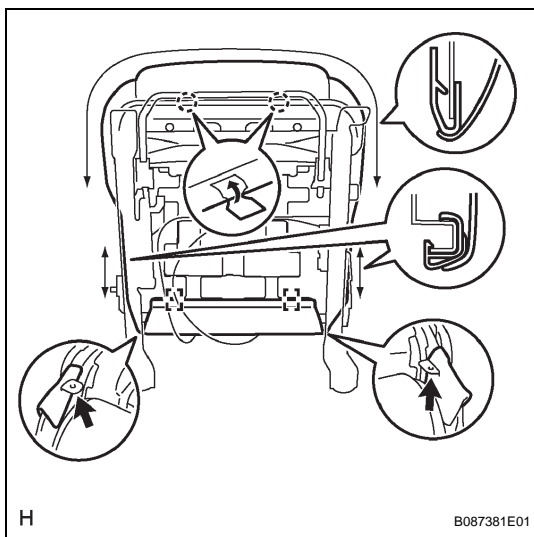**9. REMOVE FRONT SEAT CUSHION COVER**

- (a) Remove the front seat cushion cover from the front seat frame adjuster.
- (b) Remove the 2 hog rings.
- (c) Disengage the 2 claws and 3 hooks, and remove the front seat cushion pad together with the front seat cushion cover.

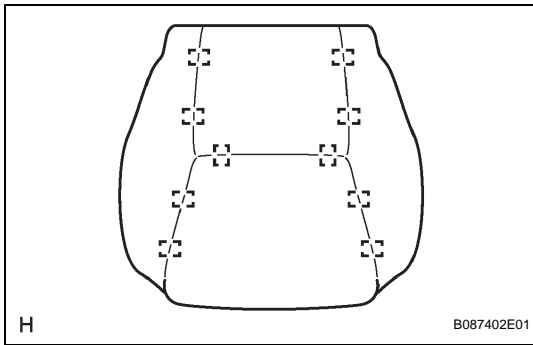


- (d) Remove the 10 hog rings and front seat cushion cover.

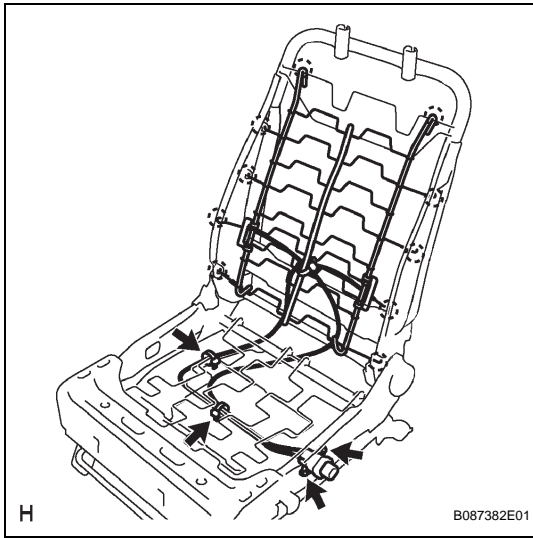

#### 10. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY

- Remove the 2 wiring harness clamps.
- Remove the 2 screws.
- Disengage the 10 hooks and lumbar support adjuster.

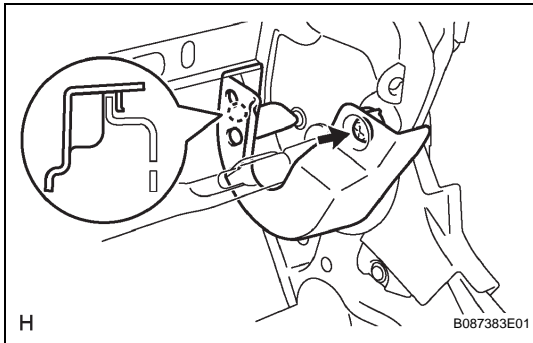


#### 11. REMOVE RECLINING ADJUSTER INSIDE COVER LH

- Remove the screw.
- Disengage the claw and remove the reclining adjuster inside cover.

#### 12. REMOVE RECLINING ADJUSTER INSIDE COVER RH

HINT:

Follow the same procedures as for the reclining adjuster inside cover LH.

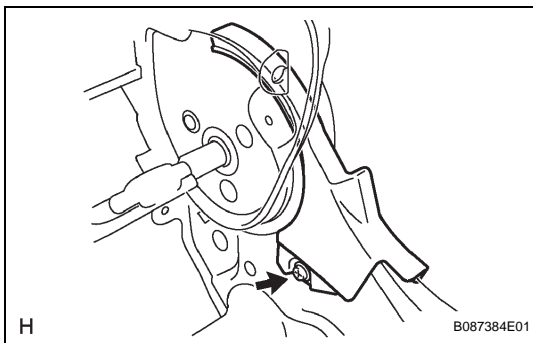


#### 13. REMOVE RECLINING ADJUSTER OUTSIDE COVER LH

- Remove the screw and reclining adjuster outside cover.

#### 14. REMOVE RECLINING ADJUSTER OUTSIDE COVER RH

HINT:

Follow the same procedures as for the reclining adjuster outside cover LH.

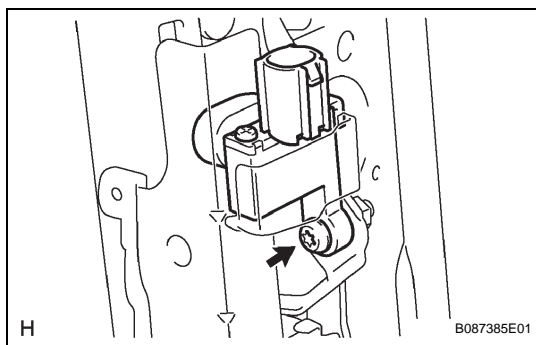**15. REMOVE SEAT POSITION SENSOR**

- (a) Using a "Torx" socket wrench T30, remove the screw and seat position sensor.