

FRONT DOOR BELT MOULDING

COMPONENTS

w/o Power Window:

FRONT DOOR WINDOW
REGULATOR HANDLE
ASSEMBLY

FRONT DOOR REGULATOR
INSIDE HANDLE PLATE

SHAFT SNAP RING

CLIP

FRONT DOOR TRIM
PANEL ASSEMBLY

FRONT DOOR ASSIST GRIP COVER

FRONT DOOR FRAME
BRACKET LOWER GARNISH

FRONT DOOR
FRAME BRACKET
LOWER GARNISH

FRONT DOOR ARMREST BASE UPPER PANEL SUB-ASSEMBLY

POWER WINDOW REGULATOR
MASTER SWITCH CONNECTOR

CLIP

FRONT DOOR TRIM
PANEL ASSEMBLY

● FRONT DOOR
BELT MOULDING

OUTER REAR VIEW
MIRROR ASSEMBLY

8.0 (80, 71 in.*lbf)

x3

w/ Power Mirror:

OUTER REAR VIEW
MIRROR CONNECTOR

N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part


H


B088214E02

ET

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT DOOR FRAME BRACKET LOWER GARNISH**
 - (a) w/ Power Window:
 - (1) Remove the front door frame bracket lower garnish (See page [ED-13](#)).
 - (b) w/o Power Window:
 - (1) Remove the front door frame bracket lower garnish (See page [ED-34](#)).
3. **REMOVE FRONT DOOR ARMREST BASE UPPER PANEL SUB-ASSEMBLY (w/ Power Window)**
 - (a) for Double Cab:
 - (1) Remove the front door armrest base upper panel sub-assembly (See page [ED-13](#)).
 - (b) for Access Cab and Regular Cab:
 - (1) Remove the front door armrest base upper panel sub-assembly (See page [ED-13](#)).
4. **REMOVE FRONT DOOR WINDOW REGULATOR HANDLE ASSEMBLY (w/o Power Window) (See page [ED-34](#))**
5. **REMOVE FRONT DOOR TRIM PANEL ASSEMBLY**
 - (a) w/ Power Window:
 - (1) Remove the front door trim panel assembly (See page [ED-14](#)).
 - (b) w/o Power Window:
 - (1) Remove the front door trim panel assembly (See page [ED-35](#)).
6. **REMOVE OUTER REAR VIEW MIRROR ASSEMBLY (See page [MI-8](#))**
7. **REMOVE FRONT DOOR BELT MOULDING**
 - (a) Apply protective tape to the outer circumference of the front door belt moulding, as shown in the illustration.
 - (b) Using a moulding remover, disengage the 5 claws and remove the front door belt moulding.

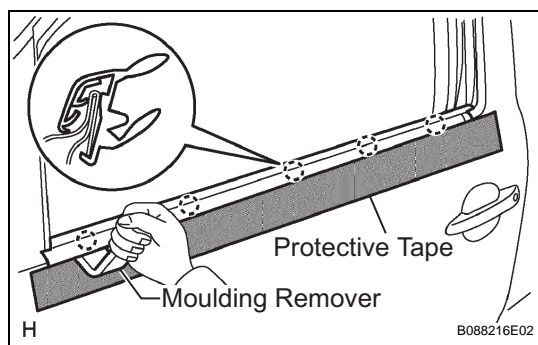

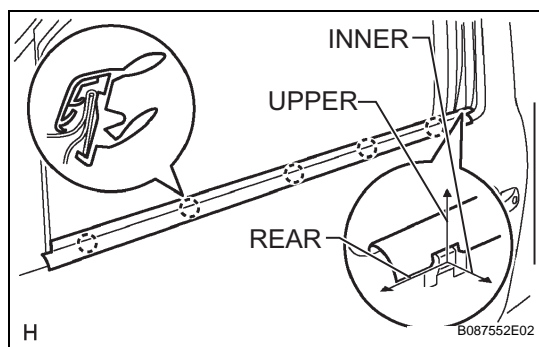

INSTALLATION

1. INSTALL FRONT DOOR BELT MOULDING

- (a) Engage the 5 claws and install a new front door belt moulding.

2. INSTALL OUTER REAR VIEW MIRROR ASSEMBLY (See page [MI-10](#))

3. INSTALL FRONT DOOR TRIM PANEL ASSEMBLY

- (a) w/ Power Window:
 - (1) Install the front door trim panel assembly (See page [ED-29](#)).
- (b) w/o Power Window:
 - (1) Install the front door trim panel assembly (See page [ED-48](#)).

4. INSTALL FRONT DOOR ARMREST BASE UPPER PANEL SUB-ASSEMBLY (w/ Power Window)

- (a) for Double Cab:
 - (1) Install the front door armrest base upper panel sub-assembly (See page [ED-30](#)).
- (b) for Access Cab and Regular Cab:
 - (1) Install the front door armrest base upper panel sub-assembly (See page [ED-30](#)).

5. INSTALL FRONT DOOR WINDOW REGULATOR HANDLE ASSEMBLY (w/o Power Window) (See page [ED-49](#))

6. INSTALL FRONT DOOR FRAME BRACKET LOWER GARNISH

- (a) w/ Power Window:
 - (1) Install the front door frame bracket lower garnish (See page [ED-30](#)).
- (b) w/o Power Window:
 - (1) Install the front door frame bracket lower garnish (See page [ED-49](#)).

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)